


ALTI

In **ALTITUDE mode** you can view and calibrate your current altitude; view and reset your maximum and accumulated altitudes.


Hold for 1 second in any mode to return to ALTI mode





NOTE: ALTI RACE / LANCE RACE displays time of day instead of graph

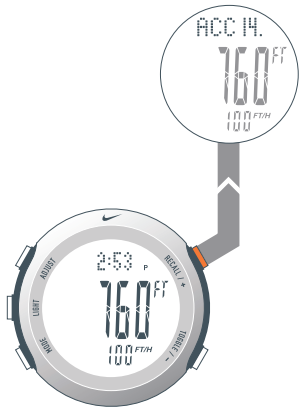

Recall Accumulated / Maximum Data

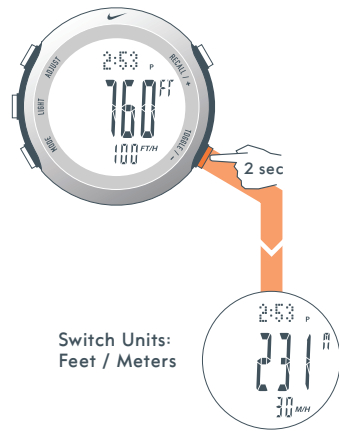


Switch Units:
Feet / Meters

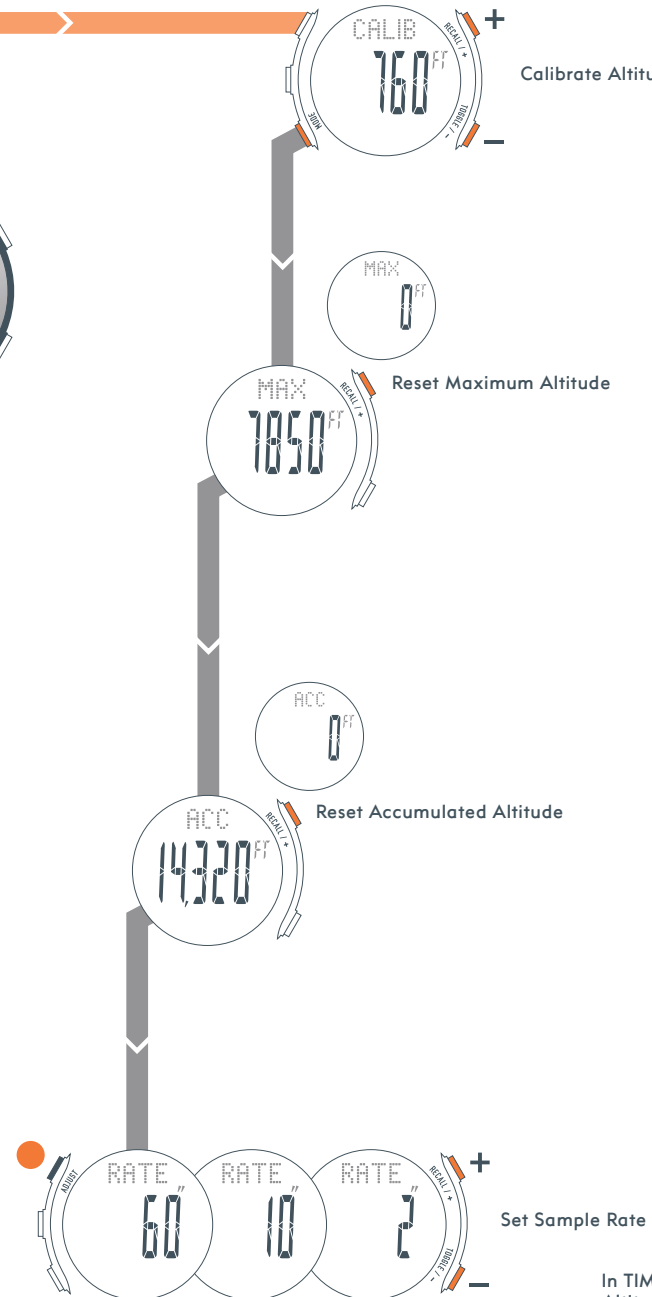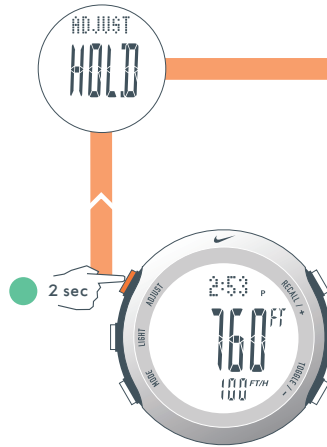



In **TIME** and **CHRON** mode, Altitude is automatically sampled every 2.5 minutes

CHRONO


CHRONOGRAPH mode can be used to capture lap data, total time data and current altitude.

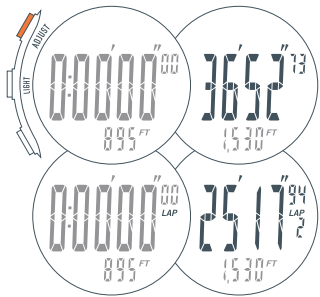

Switch display between Total Time and Lap Time

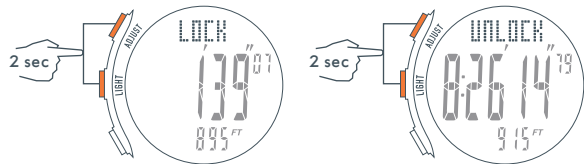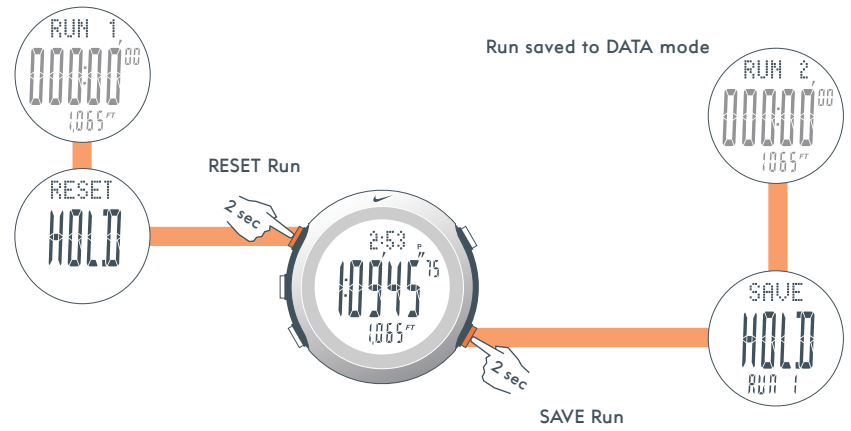


CHRONO LOCK: Locks STOP button to prevent accidental stop while racing.

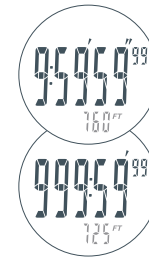

NOTE: After 10 hours, the chronograph resolution changes from 1/100th of a second to 1 sec.


DATA

In **DATA mode** you can review lap and total time data saved from CHRONOGRAPH mode.

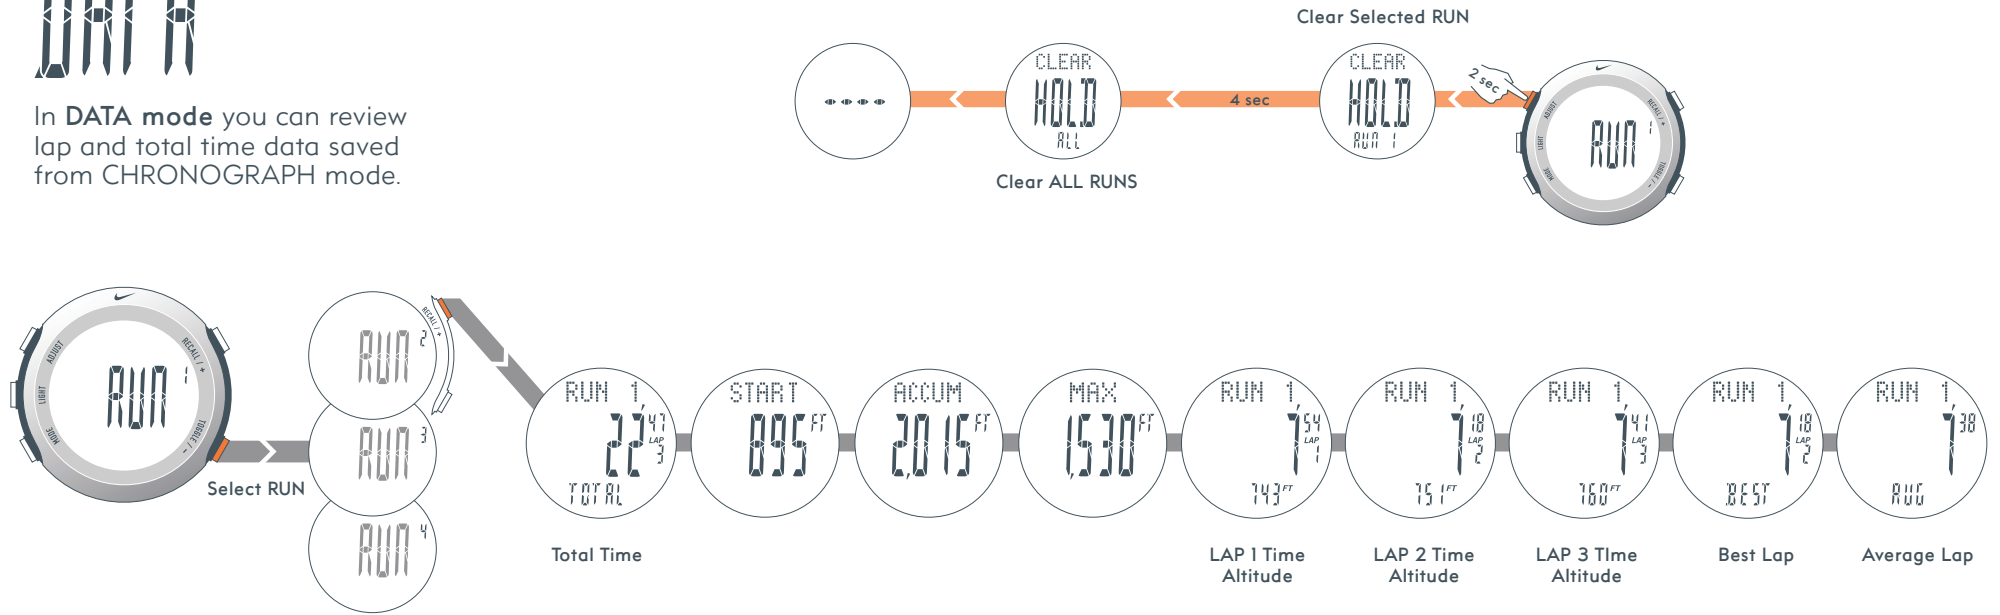

ALARM

In **ALARM mode** you can set four time alarms, two altitude alarms and one hydration alarm. The time alarm will sound intermittently for 55 seconds. The altitude alarm will sound for five seconds.

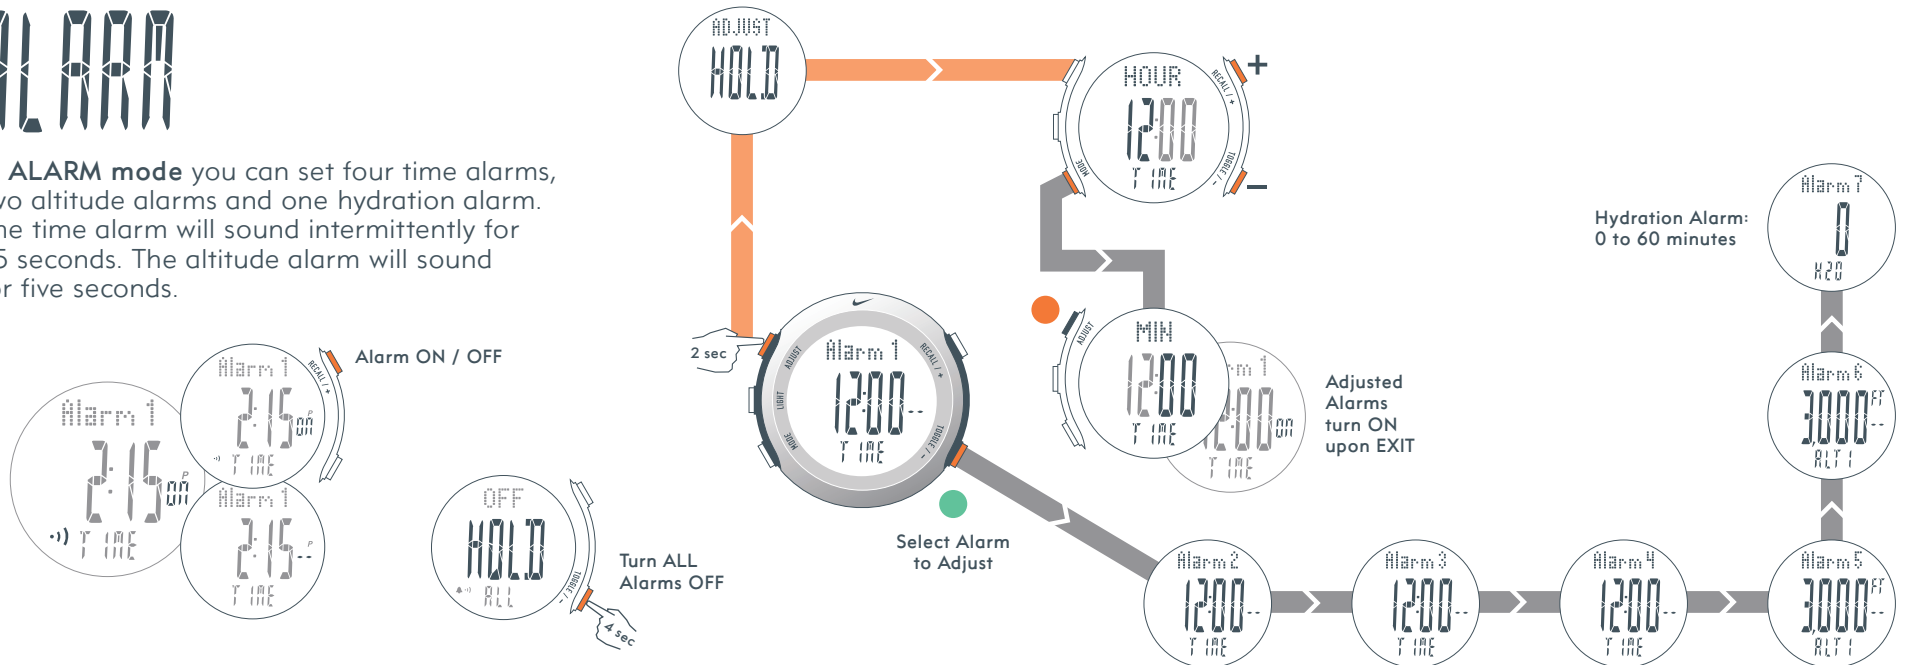

H2O RESIST

100m

OPERATING TEMPERATURE

-5 to 50° Celsius

Material Specifications

CRYSTAL

Mineral Glass

STRAP

Polyurethane

CASE

Polycarbonate

CASEBACK

Stainless Steel

BUTTONS

Stainless Steel

BUCKLE

Stainless Steel

Mode Limits

CHRONOGRAPH

999:59'59"

TIMER

99:59'59"

MAXIMUM ALTITUDE


32,800 feet / 10,000 meters

© 2004 Nike, Inc. All rights reserved.

BATTERY TYPE

CR2032 3V Lithium

Note: Battery replacement must be performed by a certified Nike Service Center to retain a valid warranty.

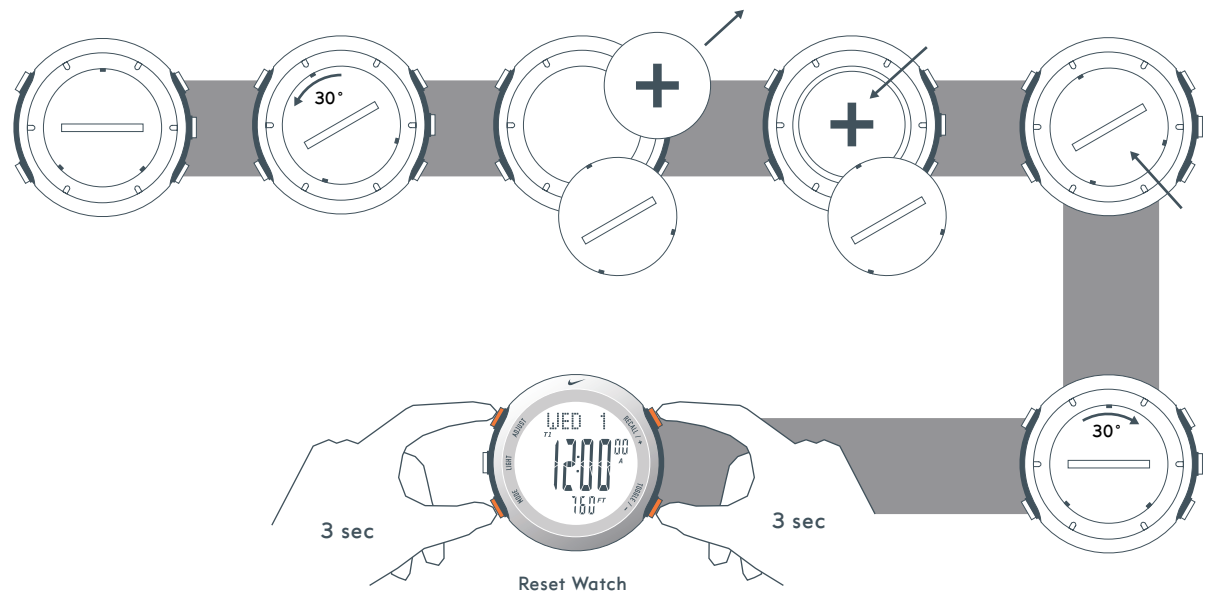

Warning! Keep watch batteries away from children. If swallowed, contact a doctor immediately.

Warning! Batteries contain chemical substances. They should be disposed of properly according to local regulations.