


TIME

In **TIME mode** you can set time and calendar information within two time zones.

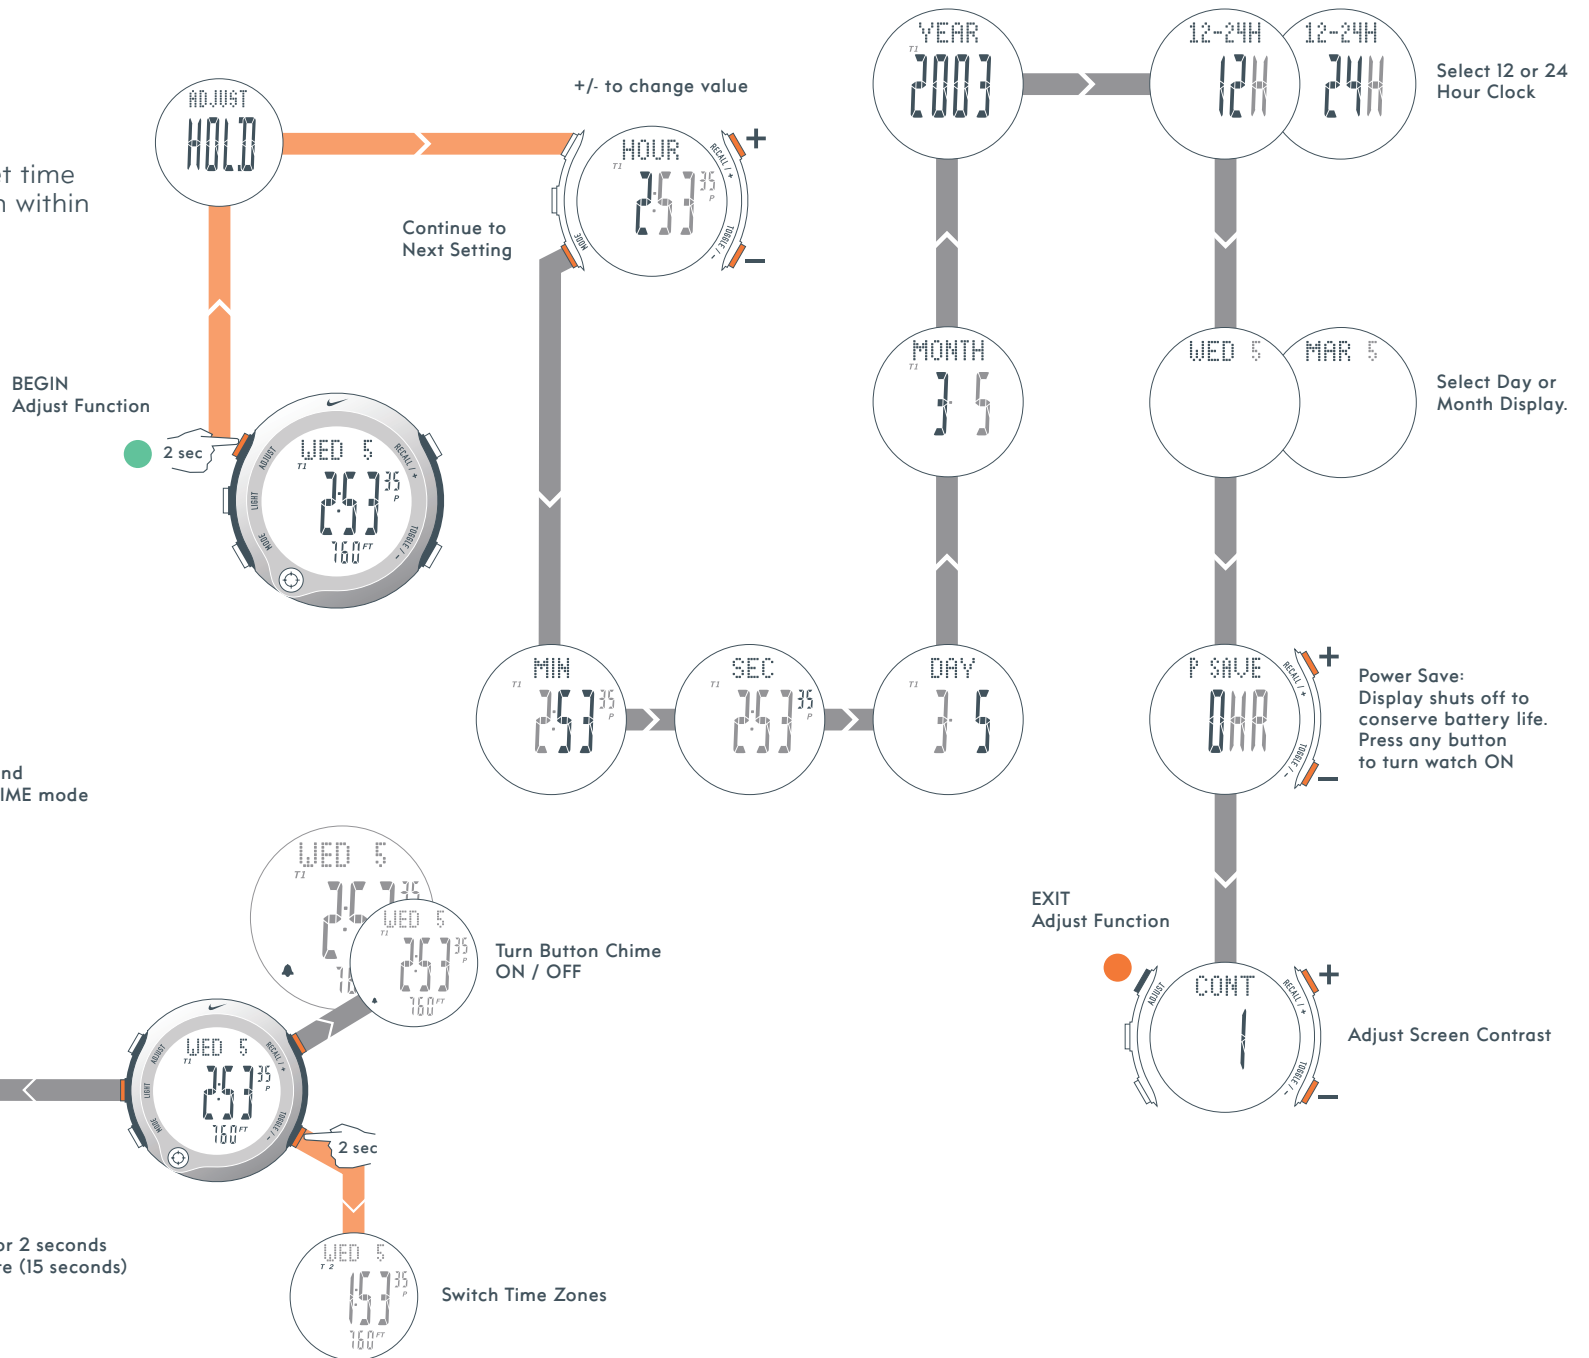


TIME Warp: Hold for 1 second in any mode to return to TIME mode





ALT 1

In **ALTITUDE mode** you can view and calibrate your current altitude; view and reset your maximum and accumulated altitudes.

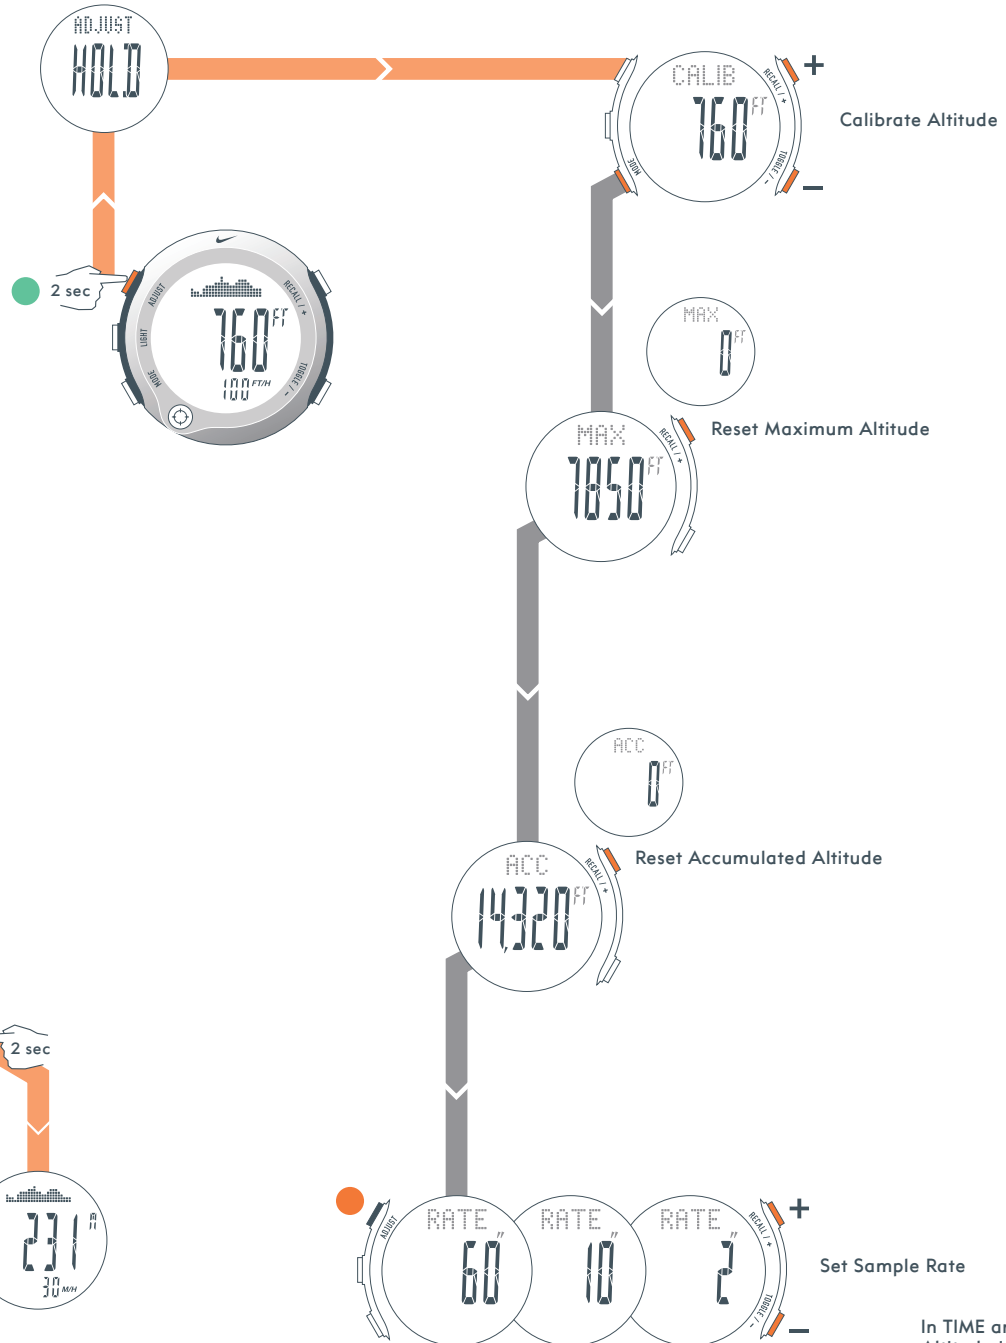

Altitude Graph:
Each Bar = 5 minutes;
Full Graph = 2 hours

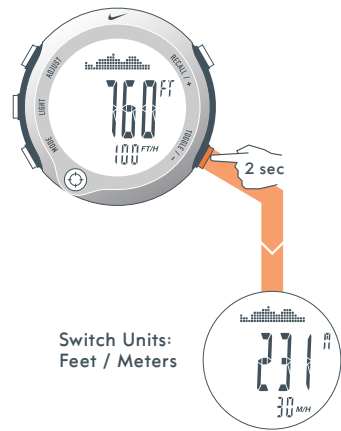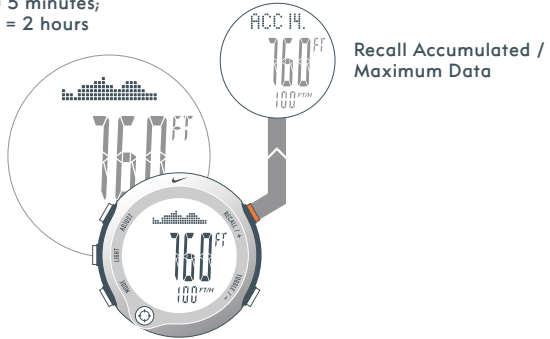


In **TIME** and **CHRON** mode,
Altitude is automatically
sampled every 2.5 minutes


COMPASS

COMPASS mode displays a digital compass that points to the magnetic north pole. It can be adjusted to point to True North.


COMPASS mode not included on NIKE OREGON SERIES ALTI

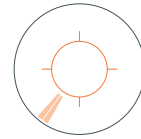

Digital Arrow points North

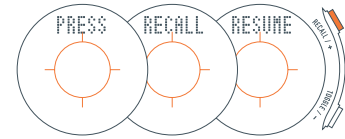

Recall Compass

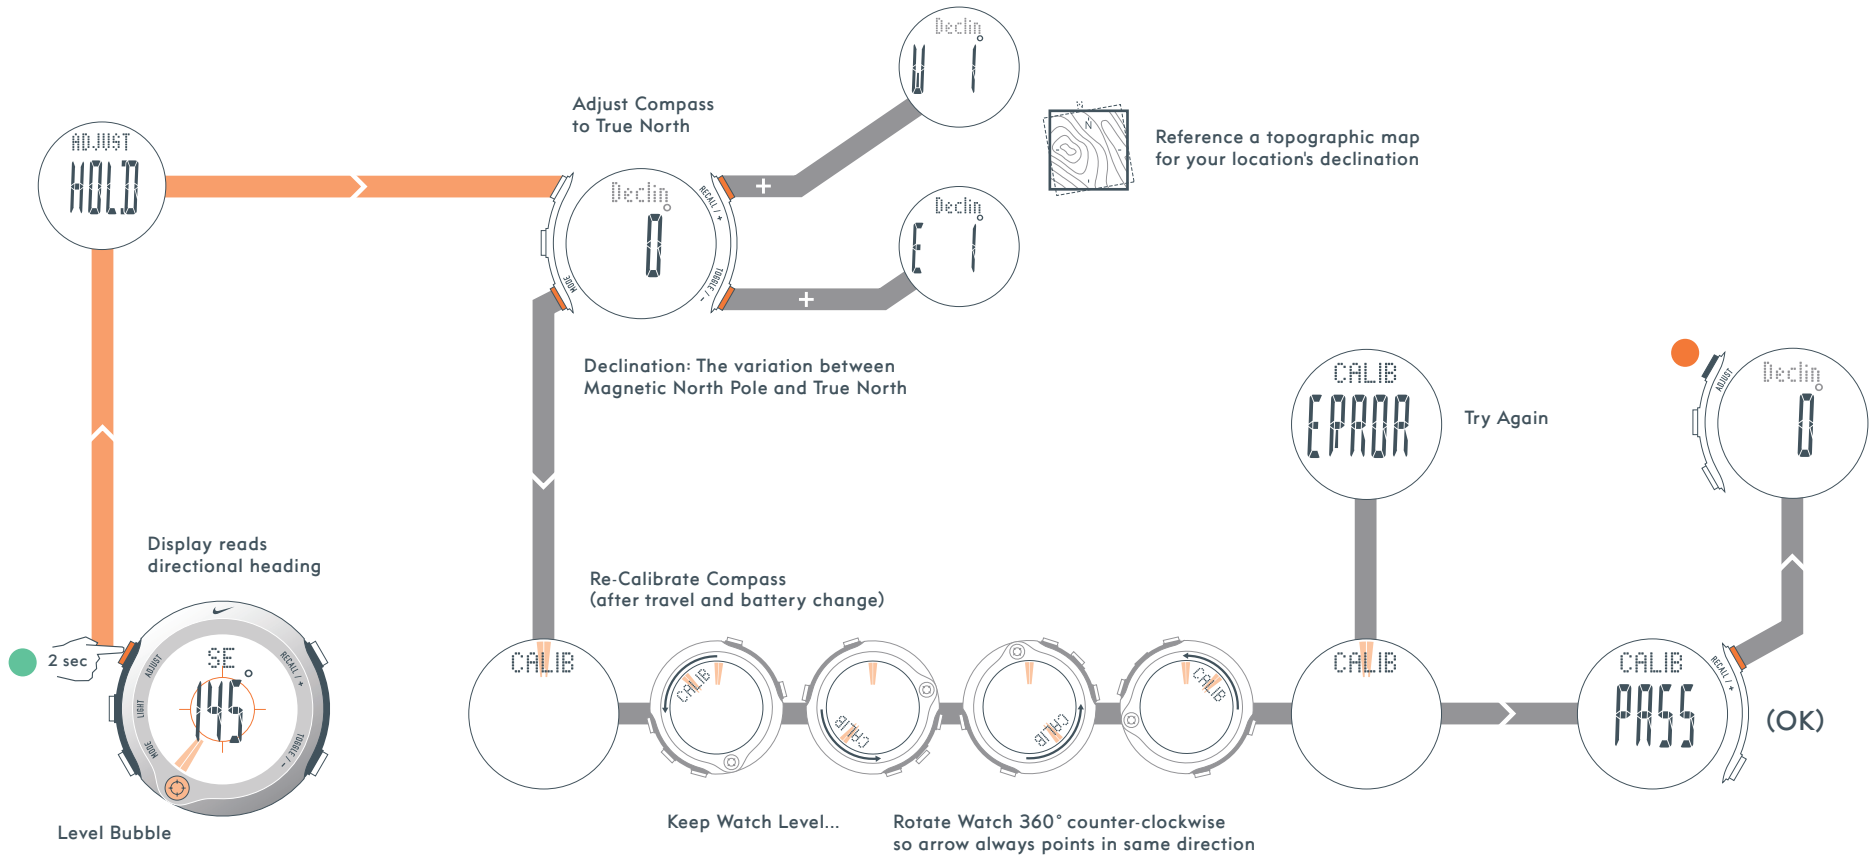

Adjust Compass to True North

Declination: The variation between Magnetic North Pole and True North

Reference a topographic map for your location's declination

Re-Calibrate Compass (after travel and battery change)

Keep Watch Level...

Rotate Watch 360° counter-clockwise so arrow always points in same direction

Try Again

(OK)


Level Bubble

2 sec


Display reads directional heading

WEATH


WEATHER mode provides a barometer, thermometer, and barometric weather forecaster.

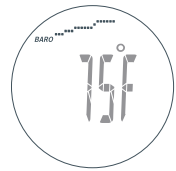

Rising Pressure:
Clear weather likely

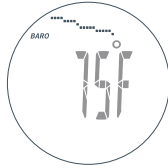


Falling Pressure:
Clouds / Precipitation likely

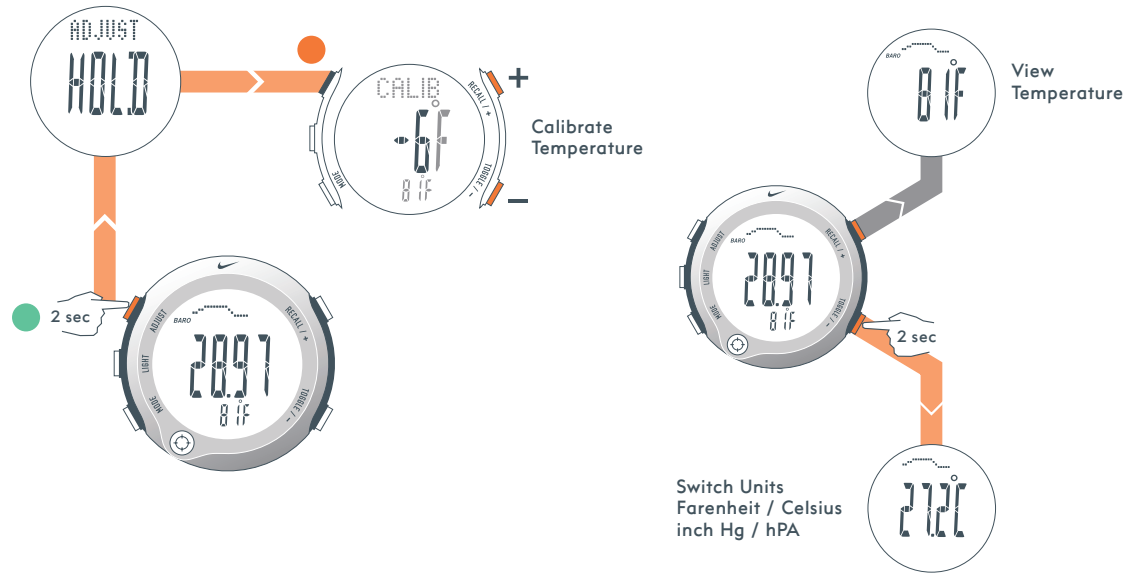






CHRON

CHRONOGRAPH mode can be used to capture lap data, total time data and current altitude.

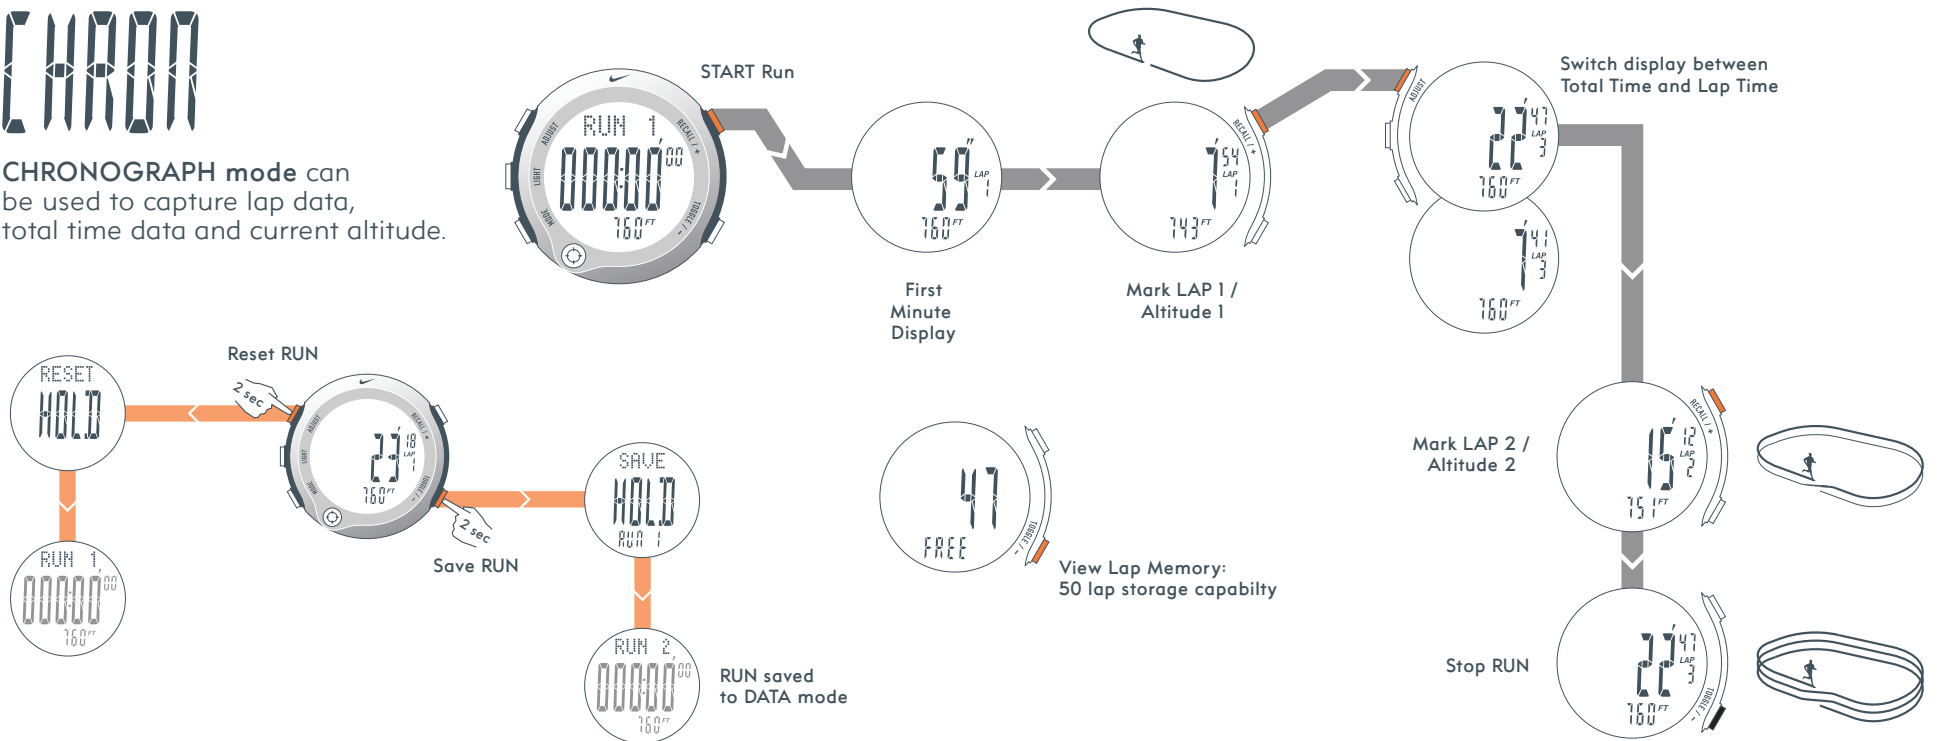


TIMER

In **Timer Mode** you can setup to 5 repeating segments for customized interval training.

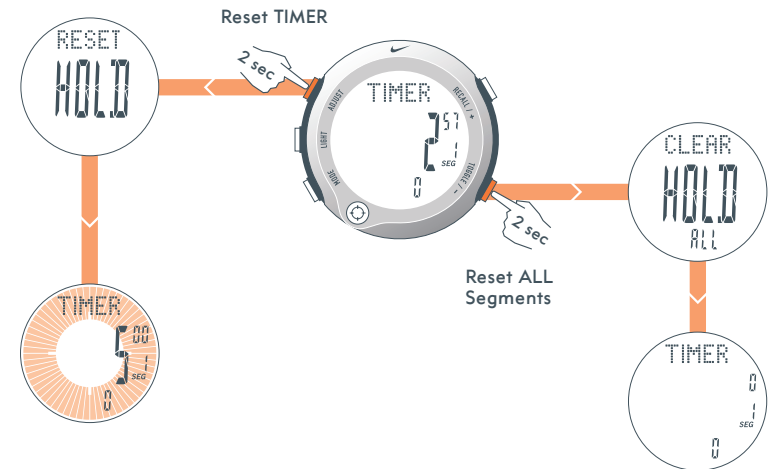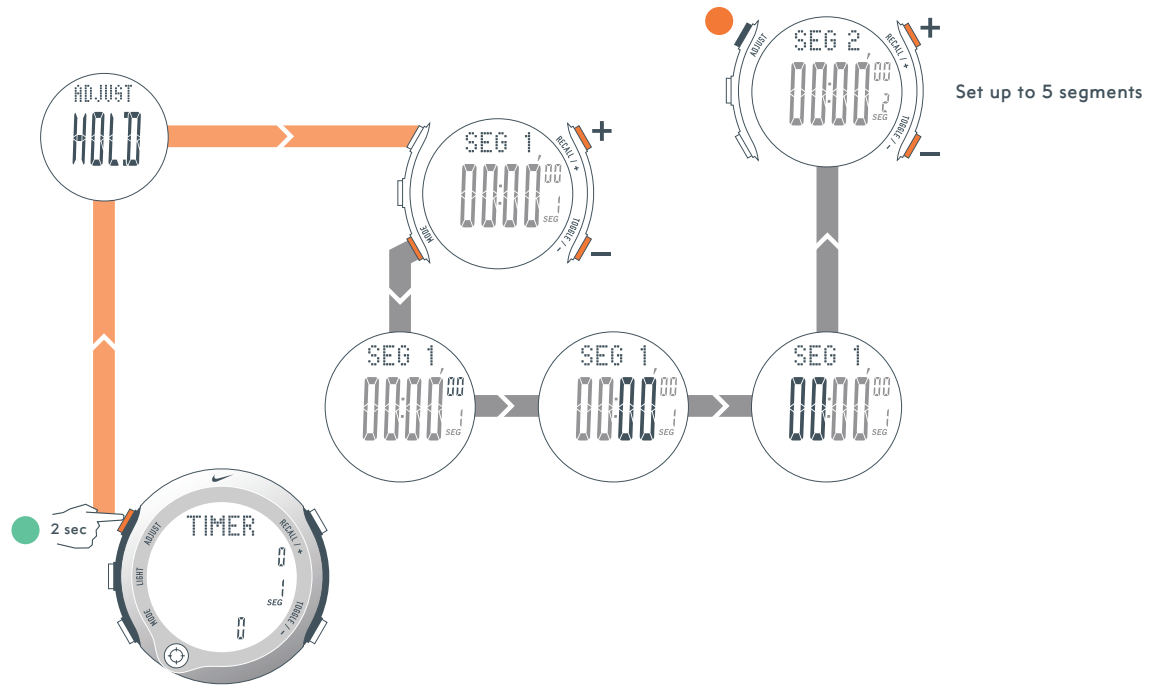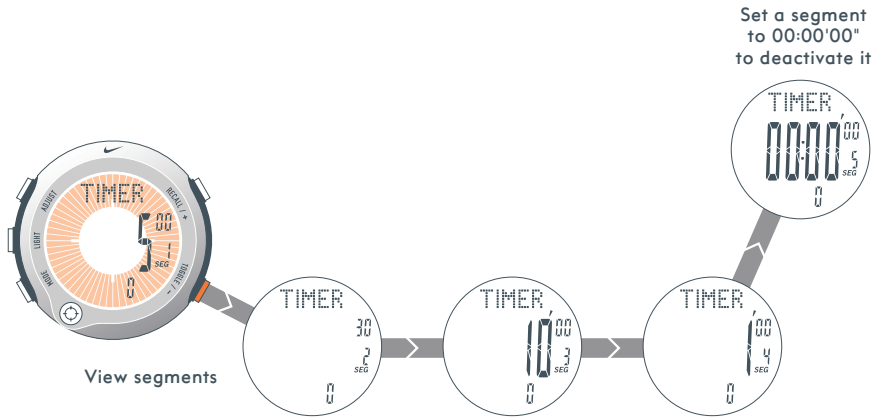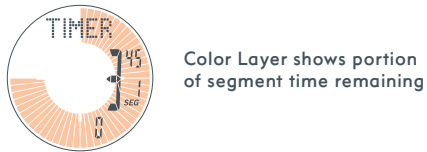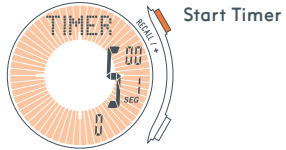


DATA

In **DATA mode** you can review lap and total time data saved from **CHRONOGRAPH mode**.

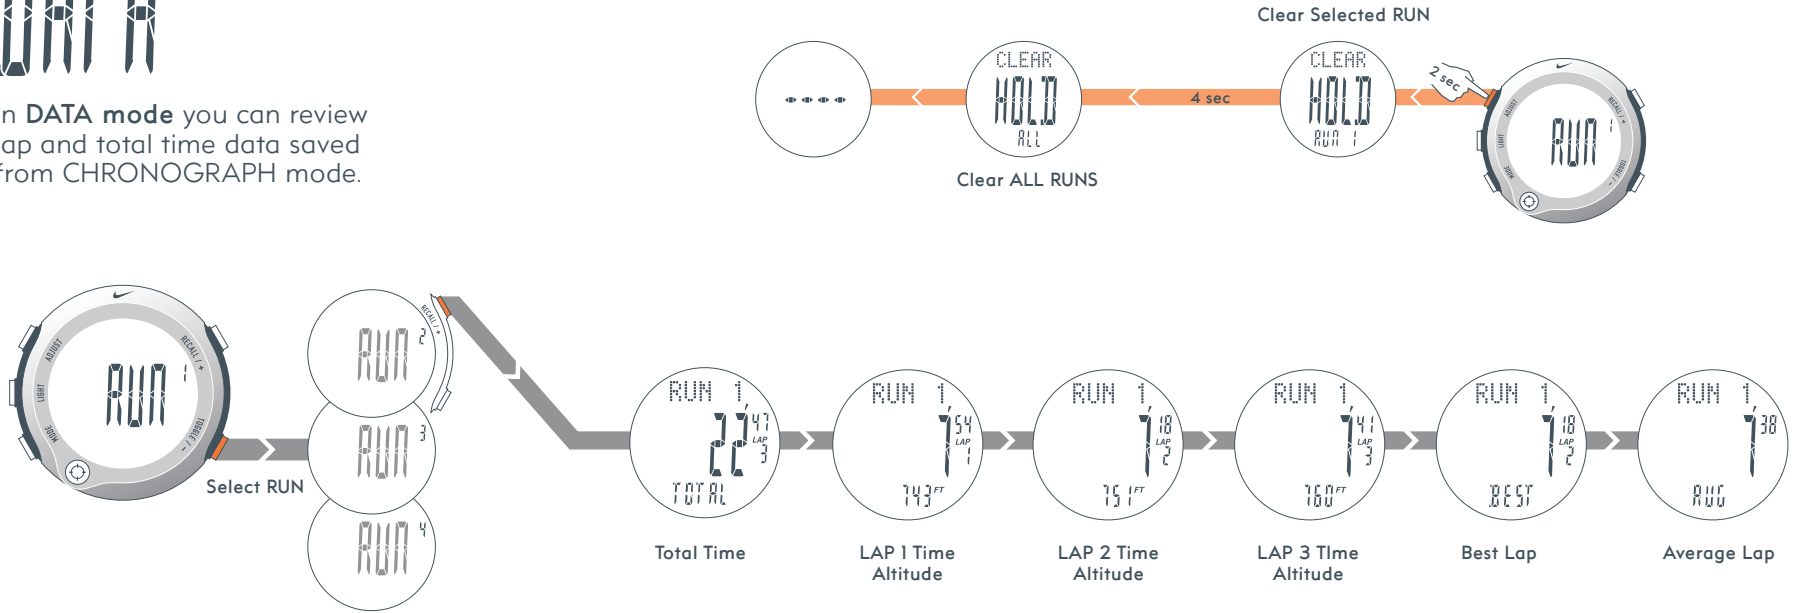

ALARM

In **ALARM mode** you can set four time alarms, two altitude alarms and one hydration alarm. The time alarm will sound intermittently for 55 seconds. The altitude alarm will sound for five seconds.

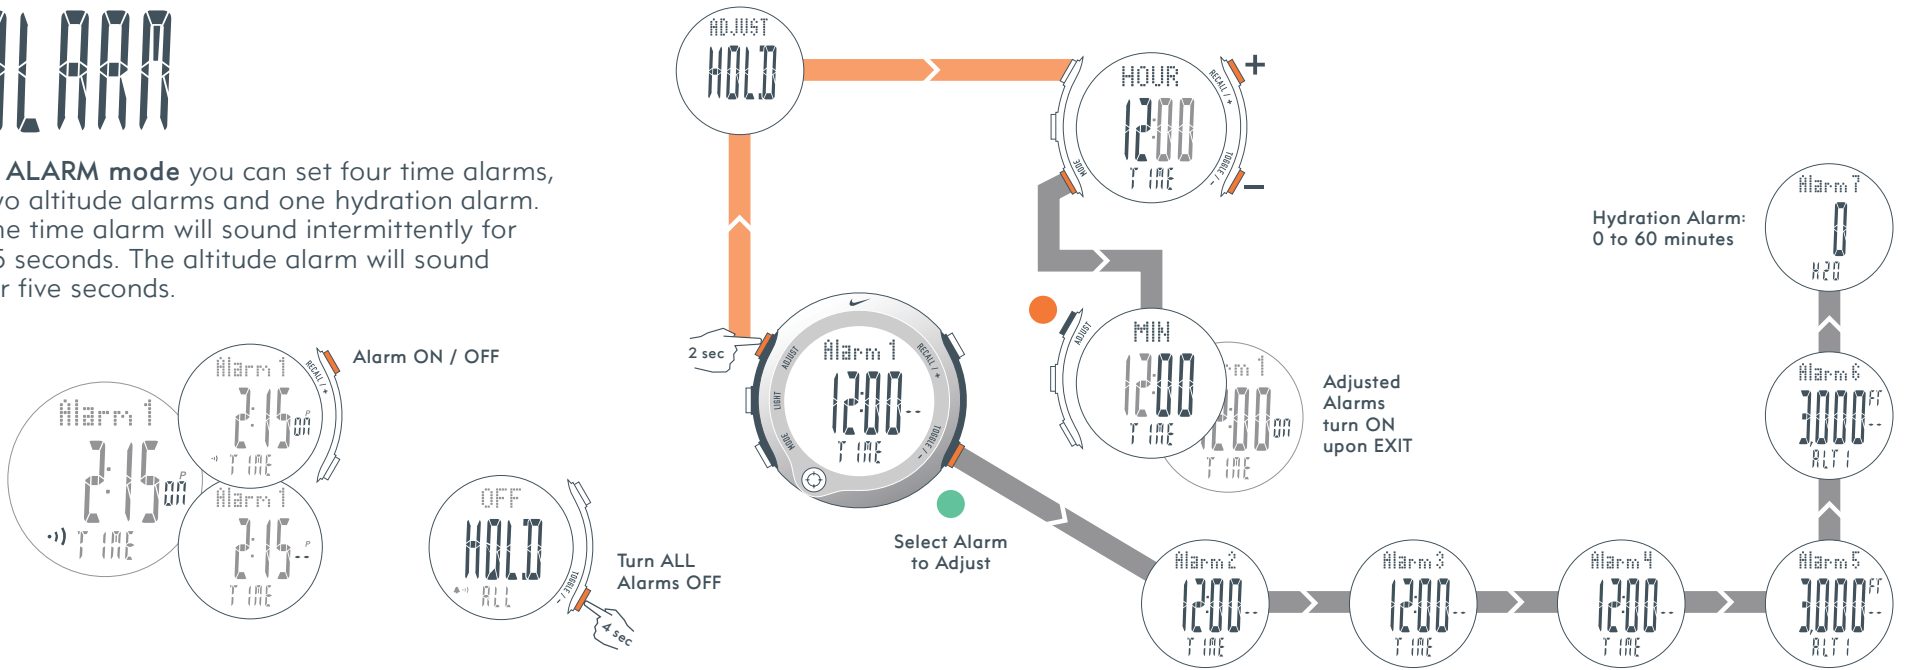

H2O RESIST

100m

OPERATING TEMPERATURE

-5 to 50° Celsius

Material Specifications

CRYSTAL

Mineral Glass

STRAP

Polyurethane

CASE

Titanium or Aluminum

CASEBACK

Stainless Steel

BUTTONS

Stainless Steel

BUCKLE

Stainless Steel

Mode Limits

CHRONOGRAPH

999:59'59"

TIMER

99:59'59"

MAXIMUM ALTITUDE


32,800 feet / 10,000 meters

© 2003 Nike, Inc. All rights reserved.

BATTERY TYPE

CR2032 3V Lithium

Note: Battery replacement must be performed by a certified Nike Service Center to retain a valid warranty.

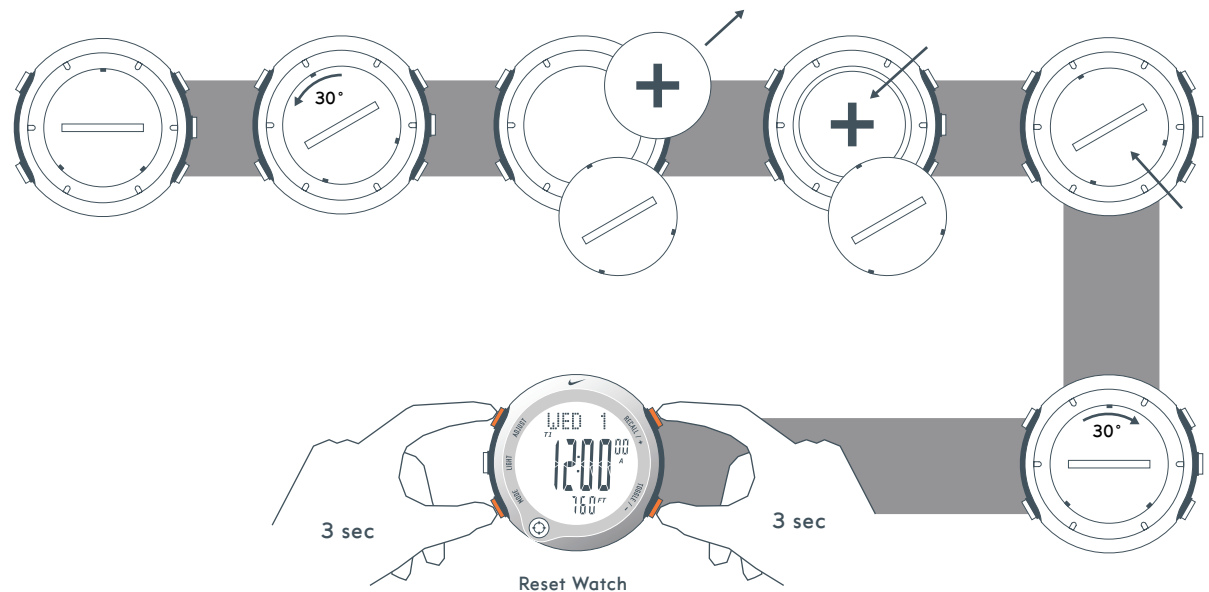

Warning! Keep watch batteries away from children. If swallowed, contact a doctor immediately.

Warning! Batteries contain chemical substances. They should be disposed of properly according to local regulations.