

zip **SERIES**

 **MGI**™

zip *x4*

**User** Manual

VERSION 4.1



## Contents

<b>1.0</b>	<b>Registration</b>	<b>04</b>
<b>2.0</b>	<b>What Is Included</b>	<b>04</b>
<b>3.0</b>	<b>Assembling Your Zip X4</b>	<b>05</b>
<b>3.1</b>	Attaching the Rear Wheels	<b>05</b>
<b>3.2</b>	Rear Wheel Positions	<b>06</b>
<b>3.3</b>	Unfolding	<b>07</b>
<b>3.4</b>	Folding	<b>08</b>
<b>3.5</b>	Fourth Foldable Rear Wheel	<b>09</b>
<b>3.6</b>	GPS Holder and Top Handle Compartment	<b>09</b>
<b>3.7</b>	Inverting Rear Wheels	<b>09</b>
<b>4.0</b>	<b>Battery Charging &amp; Connection</b>	<b>10</b>
<b>4.1</b>	Initial Charge	<b>10</b>
<b>4.2</b>	Connecting the Battery onto the Zip X4	<b>10</b>
<b>4.3</b>	Charging the Battery after Use	<b>11</b>
<b>5.0</b>	<b>Fitting the Golf Bag</b>	<b>11</b>
<b>6.0</b>	<b>Front Wheel Alignment</b>	<b>12</b>
<b>6.1</b>	USB Charging Point	<b>13</b>
<b>7.0</b>	<b>Operating the Digital Top Box</b>	<b>14</b>
<b>7.1</b>	Top Box Display	<b>14</b>
<b>7.2</b>	Start / Stop the Zip X4	<b>14</b>
<b>7.3</b>	Turn the Zip X4 Off	<b>15</b>
<b>7.4</b>	Battery Level Indicator	<b>15</b>
<b>7.5</b>	Electronic Park Brake	<b>16</b>
<b>7.6</b>	Downhill Speed Control	<b>16</b>
<b>8.0</b>	<b>Warranty</b>	<b>17</b>
<b>8.1</b>	Warranty Policy	<b>17</b>
<b>8.2</b>	Warranty Exclusions	<b>18</b>
<b>8.3</b>	Parts Installed During Warranty	<b>19</b>
<b>9.0</b>	<b>Preventative Maintenance Program</b>	<b>19</b>
<b>9.1</b>	Cleaning Your Zip X4	<b>19</b>
<b>9.2</b>	Rear Wheel Axles Maintenance	<b>19</b>
<b>9.3</b>	Upper and Lower Bag Strap	<b>20</b>
<b>9.4</b>	MGI Service Schedule	<b>20</b>
<b>9.5</b>	Service Record	<b>21</b>
<b>10.0</b>	<b>Service and Repair Centres</b>	<b>22</b>
<b>11.0</b>	<b>Purchasing Parts and Accessories</b>	<b>22</b>
<b>12.0</b>	<b>Contacting MGI</b>	<b>22</b>
<b>13.0</b>	<b>Contacting Local Agent</b>	<b>23</b>
<b>14.0</b>	<b>Frequently Asked Questions</b>	<b>23</b>

**Thank you for purchasing the Game Changing MGI Zip X4. To get the most out of your Zip X4 please follow these quick steps before use.**

- Register your Zip X4 online [section 1.0]
- Assembling the Zip X4 [section 3.0]
- Charge the battery [section 4.0]

For Customer Support, please contact MGI directly for immediate and professional advice.

**www.mgigolf.com**

### **MGI AUSTRALIA**

**Service Email:** customerservice@mgigolf.com

**Live Chat:** visit [www.mgigolf.com](http://www.mgigolf.com)

**Toll Free within Australia:** 1300 644 523 (excludes mobiles) Western Australia/ Internal phone +61 3 8872 6700

**Local Service Centres:** visit [www.mgigolf.com](http://www.mgigolf.com) to locate your local service centre.

### **MGI USA**

**Service Email:** serviceusa@mgigolf.com

**Live Chat:** visit [www.mgigolf.com](http://www.mgigolf.com)

**Telephone:** 1800 617 2990

### **MGI GLOBAL**

**Sales Email:** globalsales@mgigolf.com

**Service Email:** customerservice@mgigolf.com

**Live Chat:** visit [www.mgigolf.com](http://www.mgigolf.com)

**NOTE:** This user manual was correct at time of printing. The online version is the most up-to-date and must be referred to as the correct version. To download the most current user manual please visit [www.mgigolf.com](http://www.mgigolf.com). Images shown throughout this manual may not be of the particular model you have purchased.

## 1.0 Registration

It important you register your MGI Zip X4 online immediately as registration:

- Records your Zip X4 for warranty purposes
- Speeds up any servicing required on your Zip X4
- Assists us to contact you with any updates to your Zip X4

To register your Zip X4, visit [www.mgigolf.com](http://www.mgigolf.com)

You will need to record your MGI serial number. This is found on the Zip X4 battery base or in the top box compartment.

Please keep this user manual on file for your own reference and a copy of your serial number;

### My MGI Zip X4 Serial Number is

[example AZX4V1173401234]

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

### Purchased Date

			/			/						
--	--	--	---	--	--	---	--	--	--	--	--	--

You may be required to show proof of purchase so we recommend you keep your receipt with this manual.

## 2.0 What is Included

- MGI Zip X4
- 24v Lithium Battery
- Battery Charger
- GPS Holder
- MGI Pouch with:
  - User Manual
  - Accessory Guide

 
## 3.0 Assembling Your Zip X4

### 3.1 Attaching the Rear Wheels

First, lubricate both axles using the black grease cloth provided in the box. Lubrication of the axles should be performed regularly to keep your cart in optimal condition.




On the wheel, press the grey release button on the wheel hub. Place the wheel onto the axle. You will notice you need to match up the inner female groove on the axle and the male of the wheel. When placed in position simply release the button. You will notice you hear a "click" when the wheel is properly secured. To check that the wheel is properly in position pull on the wheel. If it is properly in position it will not slide off. Repeat for the other wheel.

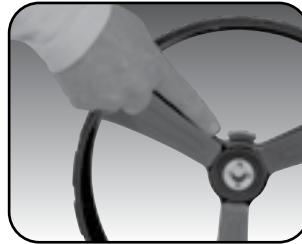

### 3.2 Rear Wheels Positions

 The MGI Zip X4 is designed to allow the rear wheels to be in two positions. The position is determined by where the wheel is locked on the axle in either of the two grooves [see picture]. The drive position is used during the normal operation of the Zip X4. The free wheel position is used to freely push the Zip X4 should you experience battery or Zip X4 issues on the course.

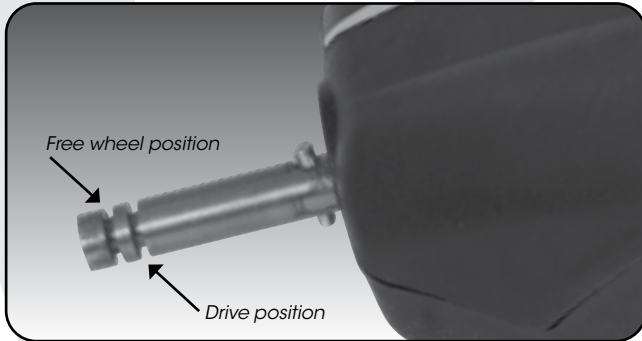


**i. Drive position** – Lock the wheel onto the groove closest to the battery base. To do this, press the grey release button on the wheel hub, push the wheel on to the axle as far as possible. To test for drive position try rolling the wheel backwards. If you feel resistance then the wheel is now in drive position and ready to use. Repeat for both wheels.

**ii. Free wheel** – Lock the wheel into the groove closest to the end of the axle. To do this, press the grey release button on the wheel hub, push the wheel on to the axle and push the release button onto the groove. To test for free wheel position try rolling the wheel backwards. The wheel should spin freely with no resistance. Repeat for both wheels.

### 3.3 Unfolding

 
Please see below the steps to unfold a Zip X4 Handle.

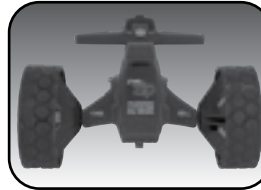

**Step 1:** Ensure both rear wheels are attached.



 
**Step 2:** Release fold lever.

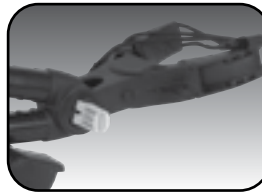


**Step 3:** Move the top bag support away from front wheel assembly until you hear it click.



 **Step 4:** The handle is now free to pull upwards. The handle will naturally unfold as you continue to pull until the handle is completely open.

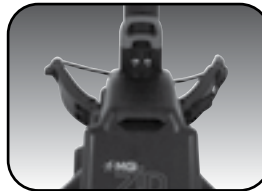

 **Step 5:** Ensure that the latch at the bottom of the handle clicks into place.

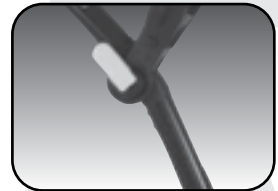

**Step 6:** Close the fold lever to lock the handle into place in one of three positions.

**Step 7:** Push the top bag support down to move it into position.


### 3.4 Folding



 **Step 1:** Disconnect the battery by lifting the battery handle. It can be left on or removed from the Zip X4.




**Step 2:** Pull the latch up at the bottom of the handle.

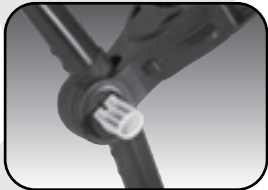

**Step 3:** Open the fold lever to release the handle.



 **Step 4:** Lower the handle until flat.

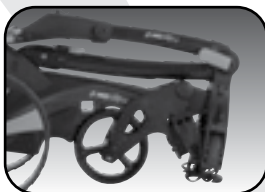

**Step 5:** Push the toggle down on the top bag support and then move the top bag support down so that it locks over the front wheel assembly.



**Step 6:** Close the fold lever to lock the handle into place.

### 3.5 Fourth Foldable Rear Wheel

The MGI Zip X4 comes standard with a fourth foldable rear wheel. This wheel **MUST** be unfolded and extended into position at all times when the Zip X4 is in use. This will reduce damage to the Zip X4, and provide the ultimate stability across all terrains. This fourth wheel should be cleaned regularly with a cloth to ensure it can be folded and retracted as required for storage.



### 3.6 GPS Holder and Top Handle Compartment

In the top handle compartment there is a position for a GPS/mobile device holder. Open the compartment and connect the holder into position. To open, press the button at the top of the holder. Place the GPS into the cradle, then close the holder by squeezing the two sides closer together. To remove the GPS from the holder, hold the button until the wings separate from the device. To remove the GPS holder from the folding panel lid, push the GPS holder outwards using your two thumbs underneath the holder until it disconnects from the top box lid.



### 3.7 Inverting Rear Wheels

The rear wheels can be inverted on the axle to reduce the size of the Zip X4 when folded. To invert the rear wheels, press the grey release button on the wheels hub and remove from the axle. Invert the rear wheels so that the wheels hub protrudes away from the axles. Press the grey release button on the wheels hub and release once the wheel is fitted onto the axle.



## 4.0 Battery Charging & Connection

The Zip X4 is designed to take either Zip battery:

- MGI 24v 250Wh Lithium battery [Standard]
- MGI 24v 380Wh Lithium battery [Optional]

### 4.1 Initial Charge

- Before using your MGI Zip X4 for the first time you must fully charge the battery overnight.
- Plug the charger AC lead into a powerpoint - the green LED illuminates to indicate the charger is on.
- Plug the charger output connection into the connector on the front of the battery - the red LED illuminates to indicate it is charging.
- When the charging LED indicator has turned green, the battery is fully charged and ready for use.



Please refer to the battery charger user manual for further information.

### 4.2 Connecting the Battery onto the Zip X4

Position the battery on the Zip X4 and push the battery down to secure it.



Push the handle down to connect the battery to the Zip X4.

Your Zip X4 has been equipped with a fail safe battery connection, so the Zip X4 will not move when you connect the battery. Your Zip X4 will only start once the speed control is switched on.

### 4.3 Charging the Battery after use

- Disengage the battery by lifting the handle.
- The battery can be left on or removed from the Zip X4 for charging.
- Plug the charger AC lead into a powerpoint - the green LED illuminates to indicate the charger is on.
- Plug the charger output connection into the connector on the front of the battery - the red LED illuminates to indicate charging.
- When the charging LED indicator has turned green, the battery is fully charged and ready for use.

## 5.0 Fitting the Golf Bag

Ensure that the top bag support straps are disconnected. Position the golf bag on the Zip X4.

Secure the top bag support strap

- Select a good position for the elasticised straps to be put around the golf bag.
- Stretch the longer end of the strap and loop the rounded plastic bar underneath the hook on the shorter end.
- The top bag support straps should now be connected.



Please ensure the top bag support straps are hooked in place securely before releasing. Failure to do so could result in injury to the user.

### Adjusting the length of the top bag support strap

 
The rounded plastic bar on the longer strap can be adjusted to ensure the bag is securely in place.

Secure the lower bag strap and pull the lower bag strap over the base of the golf bag.


## 6.0 Front Wheel Alignment

During the life of your Zip X4, it may require a realignment to ensure it tracks straight on flat surfaces. Follow these instructions to correct the front wheel alignment of the Zip X4.

**Step 1:** Release and turn the lever to loosen the front wheel.

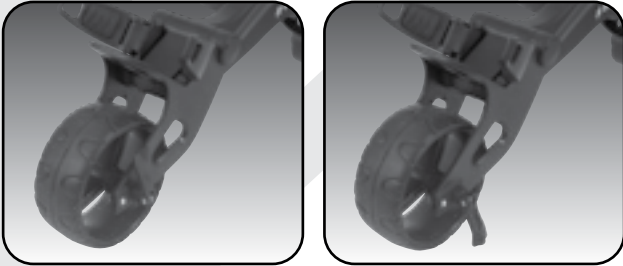

 **Step 2:** There are two silver thumb screws located on either side of the front wheel. Adjusting these screws will help straighten the alignment by correcting the Zip X4 to track more to the left or the right.

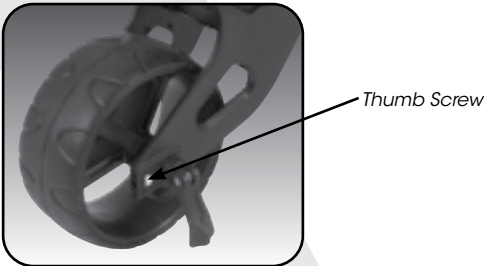


Roll the left or right hand side silver thumb screw UP to straighten the Zip X4 more to the LEFT.

Roll the left or right hand side silver thumb screw DOWN to straighten the Zip X4 more to the RIGHT.

You can roll the screws simultaneously or individual to achieve the desired alignment.

 
**Step 3:** Once alignment is set, turn the lever and tighten. Then close the lever.

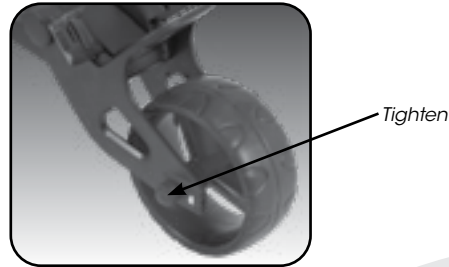

**TIP:** When adjusting the front wheel and testing the alignment, ensure the Zip X4 is run on a flat, smooth surface like a carpark.

## 6.1 USB Charging Port

 
The Zip X4 comes with the added convenience of a USB charging port to keep your devices powered across the golf course. To charge your remote control, GPS device or phone, use a USB power cord to connect your device to the USB charging port located underneath the digital top box.

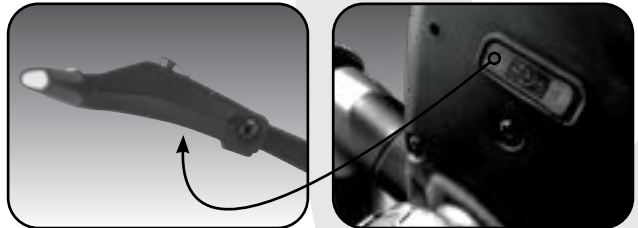



## 7.0 Operating the Digital Top Box
 
### 7.1 Top Box Display

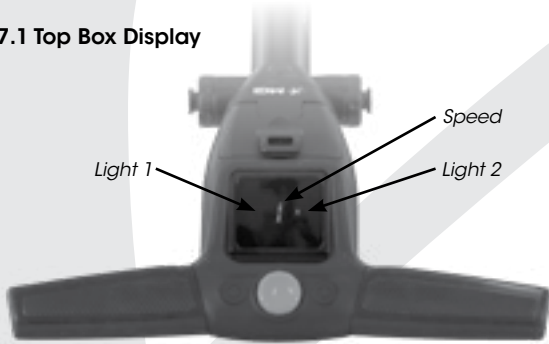

#### Light 1: Zip X4 active

A green light will appear on the left hand side when the Zip X4 is active and moving.

#### Light 2: Battery indication

The light on the right hand side displays the battery status. There are two colors of battery status: Green [charged] and Red [low].

**Number Display:** This shows the speed setting 1 to 9. The higher the number the higher the speed.

### 7.2 Start / Stop the Zip X4



#### Zip X4 Speed Control

Please note the following points regarding the Zip X4 Speed Control.

1. To select the desired speed, rotate the speed control button. Turning the speed control button clockwise will increase the speed, whilst anti-clockwise will decrease speed.
2. The speed setting chosen is displayed in the centre of the screen.

*Please note you will feel notches as you rotate the speed control. The notches do not indicate a change in speed. The speed will only increase or decrease as the number changes in the display.*

3. To start the Zip X4 at this desired speed, tap the top of the speed control button.
4. Another tap will stop the Zip X4.
5. The desired speed can be altered up or down while the Zip X4 is moving.

### 7.3 Turn the Zip X4 Off

#### Zip X4 Battery

Please note the following points regarding the Zip X4 battery.

#### Connecting the Battery onto the Zip X4

1. Position the battery on the Zip X4 and push the battery down to secure it. Push the battery handle down to connect the battery to the Zip X4.
2. To turn the Zip X4 Top Box Display off: Hold down the Start/Stop Speed Control Button for four seconds and the display will turn off thereby disabling the Top Box.

 
*Please note that the battery will still be connected to the Zip X4 and will continue to drain whilst connected.*

3. Please note that the Zip X4 display will also turn off if the Speed Control is not operated for 30 minutes.

*Once again, please note that the battery will still be connected to the Zip X4 and will continue to drain whilst connected.*

4. To reactivate the Top Box Display, whilst the battery is connected, hold down the Start/Stop Speed Control Button for four seconds and the display will turn on thereby enabling the Top Box.
5. To fully shut down disengage the Zip X4 and prevent the battery from discharging, disconnect the battery by lifting its handle. The battery can be left on or removed from the Zip X4.

### 7.4 Battery Level Indicator

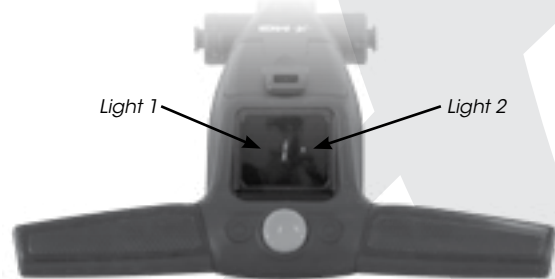

On the top box screen, there are two lights:

#### Light 1: Zip X4 active

A green light will appear on the left hand side when the Zip X4 is active and moving.



### **Light 2: Battery indication**

The light on the right hand side displays the battery status. There are two colors of battery status: Green [charged] and Red [low].

### **7.5 Electronic Park Brake**

The MGI Zip X4 brake has an Electronic Park Brake [EPB] which when activated, stops the Zip X4 from creeping forward on hilly terrain.

#### **To activate the Electronic Park Brake**

1. Firstly stop the Zip X4 by tapping the control button.
2. Rotate the speed dial anticlockwise until the letter P appears on your LCD display.
3. The letter 'P' will display and flash on the digital top box.
4. To release the brake tap the control button once and the Zip X4 will resume operation.

#### **Tips on using the Electronic Park Brake**

1. The EPB will consume battery power when in use.
2. Only use the EPB on large slopes when the Zip X4 cannot stand still by simply stopping the Zip X4.
3. Do not use the EPB on flat surfaces to conserve battery life.
4. The EPB function should not be ON for a long period of time.
5. Simply use the on/off control when stopping on flat terrain or during longer breaks on the course.

### **7.6 Downhill Speed Control**

The downhill speed control feature is activated automatically as the Zip X4 enters a downhill incline. This feature is due to the differential gearbox.

#### **Tips on understanding the Downhill Speed Control**

It is best to turn the speed down to a low speed before entering the downhill terrain.

The Zip X4 may gain some speed downhill but will not increase beyond control.

## **8.0 Warranty**

### **8.1 Warranty Policy**

The MGI Zip X4 is covered by a limited 2 year manufacturer's warranty from the date of purchase. Duration of this warranty is:

- 2 years on parts\*
- 2 years on Lithium batteries and chargers

\*MGI or an authorised service centre will repair or replace any parts found to be defective in materials or workmanship under normal use provided that:

1. The MGI Zip X4 has been properly used, maintained and regularly serviced [see section 10.5]
2. The replacement or repair is performed by an authorised MGI service centre or the owner with MGI approval.
3. The Zip X4 has been registered online.

Our goods come with guarantees that cannot be excluded under Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if goods fail to be of acceptable quality and the failure does not amount to a major failure. This warranty is in addition to other rights and remedies available to the consumer under law. The consumer is responsible for expenses associated with a warranty claim. To make a warranty claim, cease using the goods immediately and contact MGI directly using the contact details on the back of this User Manual. Proof of purchase is mandatory.

## 8.2 Warranty Exclusions

The following events will void warranty:

- Any alteration performed by non-authorized people or companies.
- Fitting of parts or accessories not recommended by MGI.
- Any damage caused by continued operation of the product after it is known to be defective.
- Damage to the seat and/or seat support bracket on the unit.
- Damage caused by partial or complete ingress of water into motor/gearbox and other major components.
- Damage caused by the unit being driven into bunkers, other course hazards or clubhouse and carpark hazards.
- Damage caused by golf balls or golf clubs.
- Application of external force to any part of the unit or battery.
- Fusion of motor or electronics through overload or continual stationary operation.
- All implied warranties [save those preserved by statute] are excluded.
- Liability for consequential damages under any and all warranties are excluded to the extent exclusion is permitted by law.

In the event of submersion in water (partial or full) of your Zip X4; MGI advises the complete write-off of your Zip X4.

The cost of replacing the water-damaged components (including labour) exceeds the price of a replacement Zip X4.

If you elect to purchase replacement components, i.e. motors, gearbox, motor controller and electronics, we advise the replacement of ALL components simultaneously. Replacing individual components on a water-damaged Zip X4 poses a higher risk of future failure of other components and therefore these parts will not be covered under warranty.

Please note that MGI does not warrant water-damaged batteries and, due to fire risk, under no circumstances should they continue to be used.

The following events are not covered under warranty:

Normal wear and tear;

- (e.g. tyres, rubber handlebar, elastic straps, paintwork, battery performance, axles threads, charging ports on batteries and remotes, screen glass etc.)
- Minor appearance defects which bear no effect on the operation of the unit and are considered by the manufacturer to be within the accepted standards.

## 8.3 Parts Installed During Warranty

Warranty coverage for components installed during a motorised Zip X4's warranty period shall consist of the duration of the Zip X4's warranty period, provided the warranty installation is performed by MGI, an authorised service centre or the Zip X4 owner on approval. Replacement of parts under warranty will not extend the warranty of the Zip X4 or parts.

## 9.0 Preventative Maintenance Program

To properly provide for the continued operation of your MGI Zip X4, MGI has introduced its Preventative Maintenance Program [PMP]. The PMP consists of work to be carried out by both the owner and authorised service centres. To maintain the warranty of your MGI Zip X4, it is essential that this work is carried out. If the work carried out by the authorised service centre is to replace parts that are part of the maintenance schedule, the owner will be charged for the parts and labour. If the work to be carried out is part of warranty, MGI will bear the cost.

### 9.1 Cleaning Your Zip X4 [See Maintenance Schedule]

For years of good operation, your Zip X4 requires care and attention:

- Keep your Zip X4 clean by using a cloth with warm water and a mild detergent.
- Do not hose down your Zip X4 under any circumstance, as the Zip X4 has electronic components.
- Ensure that the seat stem bracket is free from sand.
- Do not submerge your Zip X4 in water as it will cause irreparable damage.
- Clean the Zip X4 battery base when the battery is removed from the Zip X4.

### 9.2 Rear Wheel Axles Maintenance [See Maintenance Schedule]

The rear wheel stub axles need to be lubricated regularly. Remove the rear wheels by depressing the spring clip and at the same time pull off the wheel. Apply Petroleum Jelly or light grease to the stub axles. Use a very small amount as the grease can attract sand. If you play in sandy conditions you should clean the axle and regrease monthly.

### 9.3 Upper and Lower Bag Strap Maintenance [See Maintenance Schedule]

The bag straps should be replaced as per the Service Schedule. The upper bag strap can be replaced by:

- Removing the left and right hand straps from the upper bag support.
- Undo and remove the screws holding the strap in position on the bag support.
- Remove and replace both bag straps.
- Insert bag strap securing screws.

### 9.4 MGI Service Schedule

It is the owner's responsibility to ensure that all periodical checks, necessary adjustments and services are carried out. If in doubt please contact the MGI service centre:

**Australia** 1300 644 523

**USA** 1800 617 2990

Any work performed on your Zip X4 should be recorded on your service record (see page 21) regardless of the work.

MGI Zip X4	Monthly	6 Monthly	Every 2 yrs	Every 3 yrs
Wipe down the Zip X4 with a warm cloth after each use [do not hose]	BO			
Lubricate rear wheel stub axles	BO			
Check and tighten nuts and bolts		BO		
Check and tighten handle pivots		BO		
Check alignment of Zip X4 - ensure that it runs straight		BO		
Replace Speed Controller and On/Off switch assembly				BO /SC
Replace rear and front wheels				BO
Replace upper and lower bag straps				BO

BO = Zip X4 owner can carry out this work

SC = Charged work to be carried by approved service centre

BO/SC = The six monthly service can be completed by either an authorised service centre or the owner of the Zip X4.

### 9.5 Service Record

<b>6 month inspection</b>	Date: Invoice #:	Serviced by: Signature:
<b>1 year inspection</b>	Date: Invoice #:	Serviced by: Signature:
<b>1 ½ year inspection</b>	Date: Invoice #:	Serviced by: Signature:
<b>2 year inspection</b>	Date: Invoice #:	Serviced by: Signature:
<b>2 ½ year inspection</b>	Date: Invoice #:	Serviced by: Signature:
<b>3 year inspection</b>	Date: Invoice #:	Serviced by: Signature:
<b>3 ½ year inspection</b>	Date: Invoice #:	Serviced by: Signature:
<b>4 year inspection</b>	Date: Invoice #:	Serviced by: Signature:
<b>4 ½ year inspection</b>	Date: Invoice #:	Serviced by: Signature:
<b>5 year inspection</b>	Date: Invoice #:	Serviced by: Signature:
<b>5 ½ year inspection</b>	Date: Invoice #:	Serviced by: Signature:
<b>6 year inspection</b>	Date: Invoice #:	Serviced by: Signature:

## 10.0 Service and Repair Centres

For all servicing, please do not go back to your place of purchase.

To find your nearest service centre visit [www.mgigolf.com](http://www.mgigolf.com)

For warranty repairs to be authorised you MUST provide proof of purchase. Please keep this with you as well as your serial number you can record in this manual. It is most important you register your MGI Zip X4 online for warranty purposes.

## 11.0 Purchasing Parts and Accessories

You are welcome to service your Zip X4 out of warranty, by purchasing parts direct from MGI. Please call or email to discuss the right parts and instructions.

## 12.0 Contacting MGI

[www.mgigolf.com](http://www.mgigolf.com)

### MGI AUSTRALIA

**Service Email:** [customerservice@mgigolf.com](mailto:customerservice@mgigolf.com)

**Live Chat:** visit [www.mgigolf.com](http://www.mgigolf.com)

**Toll Free within Australia:** 1300 644 523 (excludes mobiles)

Western Australia/ Internal phone +61 3 8872 6700

**Local Service Centres:** visit [www.mgigolf.com](http://www.mgigolf.com) to locate you local service centre.

### MGI USA

**Service Email:** [serviceusa@mgigolf.com](mailto:serviceusa@mgigolf.com)

**Live Chat:** visit [www.mgigolf.com](http://www.mgigolf.com)

**Telephone:** 1800 617 2990

### MGI GLOBAL

**Sales Email:** [globalsales@mgigolf.com](mailto:globalsales@mgigolf.com)

**Service Email:** [customerservice@mgigolf.com](mailto:customerservice@mgigolf.com)

**Live Chat:** visit [www.mgigolf.com](http://www.mgigolf.com)

## 13.0 Contacting Local Agent

Please refer to [www.mgigolf.com](http://www.mgigolf.com) to find the distributor in your country.

## 14.0 FAQ

**Q: My Zip X4 is not tracking straight.**

**A:** You can do a simple realignment on the front wheel. See section 5.2 Adjusting and aligning the front wheels.

**Q: I would like to have my MGI Zip X4 serviced. Who do I call?**

**A: MGI AUSTRALIA**

Visit [www.mgigolf.com](http://www.mgigolf.com) to find your nearest service centre using your postcode within Australian and New Zealand.

You can also call MGI Head office using any of the contact details. See Section 13.0 for details. Internationals please call your local agent as per Section 14.0

### MGI USA

Call 1800 617 2990

Email: [serviceusa@mgigolf.com](mailto:serviceusa@mgigolf.com)

### MGI GLOBAL

Email: [customerservice@mgigolf.com](mailto:customerservice@mgigolf.com)

# zip SERIES

# MGI™

**[www.mgigolf.com](http://www.mgigolf.com)**

**MGI AUSTRALIA  
MGI HEAD OFFICE**

11 Maurice Court Nunawading 3131  
Victoria Australia

**T** +61 3 8872 6700 **E** [sales@mgigolf.com](mailto:sales@mgigolf.com)

**SERVICE** [customerservice@mgigolf.com](mailto:customerservice@mgigolf.com)

**MGI USA**

**T** 1800 617 2990 **E** [salesusa@mgigolf.com](mailto:salesusa@mgigolf.com)

**SERVICE** [serviceusa@mgigolf.com](mailto:serviceusa@mgigolf.com)

**MGI GLOBAL**

**E** [globalsales@mgigolf.com](mailto:globalsales@mgigolf.com)

Follow us on



*Absolute attention has been taken to ensure this manual is correct at time of printing. Specifications, images and statistics may change at any time.*

*Visit [www.mgigolf.com](http://www.mgigolf.com) for the most current model information. Version 4.1*