



**MGI**<sup>TM</sup>

- zip **SERIES** -

**THE  
GAME  
CHANGER**

**Quick Start** Guide  
VERSION 1.1

## THANK YOU FOR PURCHASING THE GAME-CHANGING MGI ZIP SERIES

**For future reference, please record the serial number of your Zip Series below. This is found within the top handle compartment or on the rear of the buggy chassis. Please keep your receipt as proof of purchase.**

### **YOUR SERIAL NUMBER:**

### **WHAT'S INCLUDED:**

- MGI Zip Series buggy
- 24V 299Wh Lithium Battery or  
24V 250Wh Lithium Battery
- 24V Lithium Battery Charger
- Remote Control (Navigator / Nav AT)
- MGI Pouch
  - Axle Lubrication Cloth
  - Battery Charger Manual
- MGI Zip Series Manual (online)

Reading this information will ensure you get the most positive experience first time. You are also strongly advised to properly read the **User Manual** which is located on the website [mgigolf.com](http://mgigolf.com)

## 1. HOW TO UNFOLD YOUR ZIP SERIES MODEL



**Step 1:** Ensure both rear wheels are attached. Refer to user manual for further details.



**Step 2:** Release fold lever.



**Step 3:** Move the top bag support away from front wheel assembly until you hear it click.



**Step 4:** The handle is now free to pull upwards. The handle will naturally unfold as you continue to pull until the handle is completely open.



**Step 5:** Ensure that the latch at the bottom of the handle clicks into place.



**Step 6:** Close the fold lever to lock the handle into place in one of three positions.

**Step 7:** Push the top bag support down to move it into position.

## 2. FIFTH/FOURTH FOLDABLE REAR WHEEL

The MGI Zip Series models come with a fourth/fifth foldable and extendable rear wheel. This wheel **MUST** be unfolded and extended into position at all times when the Zip Series is in use. This will provide the ultimate stability across all terrains. This fifth/fourth wheel should be cleaned regularly with a cloth to ensure it can be folded and retracted as required for storage.

## 3. BATTERY


### CONNECTING BATTERY

Position the battery on your Zip Series and push the battery down to secure it. Push the handle down to connect the battery. Your Zip Series has been equipped with a fail safe battery connection, so it will not move when you connect the battery. Your Zip Series will only start via the top handle button or the remote.

### BATTERY CHARGING

Before using your MGI Zip Series for the first time you must fully charge the battery overnight.

Plug the charger AC lead into a power point - the green LED illuminates to indicate the charger is on.

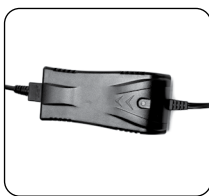

Plug the charger output connection into the connector on the front of the battery - the red LED illuminates to indicate it is charging.

When the charging LED indicator has turned green, the battery is fully charged and ready for use.

Please refer to the battery charger user manual for further information.

### LITHIUM BATTERY CARE

Your lithium battery casing and connections should be regularly inspected for damage and wear. If your connections are in need of repair or replacement, please contact your local MGI service centre for assistance immediately. Under no circumstances should a Lithium Battery that has been dropped, damaged or immersed, partially or fully in water, be connected to a Zip Series or charger. By doing so, the battery will become a fire hazard and may cause the Lithium cells to combust. Please contact the MGI Service Centre to arrange a replacement.

## **WATER DAMAGE - STRONG WARNING**

If your Zip Series battery becomes immersed in water even for a short time, discontinue its use and purchase a replacement.

*Water-damaged lithium batteries pose a significant fire risk and should be disposed of, responsibly, as soon as possible.*

MGI buggies are designed to be used in all conditions, however, a level of caution is required when operating your Zip Series in wet conditions:

MGI recommend carrying a hand towel to wipe away any excessive water from the top box during use.

Keep your Zip Series on the fairway and paths when possible and avoid boggy/muddy terrain and puddles.

MGI buggies are designed to be resistant to wet conditions, however, they are not waterproof.

Under no circumstances should you clean your Zip Series using a pressure washer or hose.

MGI recommends cleaning away excess dirt/debris with a brush and wiping down with a damp cloth.


*Incursion of water or moisture into the battery and/buggy will void all stipulated warranties on the effected parts.*

## **4. NAVIGATOR AT AND NAVIGATOR OWNERS ONLY - CHARGING YOUR REMOTE CONTROL**

PLEASE NOTE: Your remote control is located in a bracket on the back of the frame just below the T Bar Handle. Use two fingers to dislodge remote control from bracket.

Before you start using your Zip Navigator you must fully charge the remote control internal lithium ion battery for approximately 6 hours or overnight using the USB cord provided.

To charge the remote, plug in the USB cord into the USB port on the base of the remote. The cable can be plugged into your PC or Laptop for charging; alternatively, plug the cable into an AC adapter (not included).

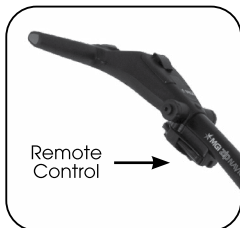

Whilst charging, the LED will flash. Once fully charged, the LED will remain solid.

## 5. REAR WHEEL POSITIONS

Your Zip Series is designed to allow the rear wheels to be in two positions. The position is determined by where the wheel is locked on the axle in either of the two grooves (see picture at the top of the next page). The drive position is used during the normal operation of the Zip Series. The free wheel position is used to push it freely, if required.

*i. Drive position – Lock the wheel into the inner groove. To do so, press the black release toggle on the wheel hub, push the wheel onto the axle as far as possible and gently pull back until you hear a click. To test for drive position try rolling the wheel backwards. If you feel resistance then the wheel is now in drive position and ready to use. Repeat for both wheels.*

*ii. Free wheel – Lock the wheel into the outer groove. To do this, press the black release button on the wheel hub, push the wheel on to the axle and push the release button onto the groove. To test for free wheel position try rolling the wheel backwards. The wheel should spin freely with no resistance. Repeat for both wheels.*



## 6. LUBRICATE AXLES

To avoid wear on the Zip Series axles, apply some petroleum jelly to the exposed shaft. This will need to be cleaned and re-applied monthly. Please refer to the user manual for further information.

## 7. SERVICE AND REPAIR CENTRES

For all servicing, please do not go back to your place of purchase.

To find your nearest service centre visit [mgigolf.com](http://mgigolf.com)

For warranty repairs to be authorised you MUST provide proof of purchase. Please keep this with you as well as your serial number you can record in this manual. It is most important you register your MGI Zip Series online for warranty purposes.

## 8. PURCHASING PARTS AND ACCESSORIES

You are welcome to service your Zip Series out of warranty, by purchasing parts direct from MGI. Please call or email to discuss the right parts and instructions.

## 9. LOAD-BEARING LIMITATION

The Zip Series are designed to transport one golf bag, 14 clubs, accessories and other paraphernalia. It is not to be used as an aid to help users traverse up/down hills or slopes. Doing so will cause damage to the drive system of the Zip Series and, as such, will void all stipulated warranties on parts affected.

# GETTING YOUR MGI ZIP SERIES ON THE GOLF COURSE

To set-up your Zip Series visit our website  
**mgigolf.com**

To view our full user manual, scan the QR code below or visit our website **mgigolf.com**



**NAVIGATOR AT**



**NAVIGATOR**



**ZIP X5**



**ZIP X3**



**ZIP X1**

For customer support, please contact MGI directly for immediate and professional advice by visiting **mgigolf.com**



# MGI™

## - zip SERIES -

**mgigolf.com**

**MGI AUSTRALIA**

**Service Email:** [customerservice@mgigolf.com](mailto:customerservice@mgigolf.com)

**Live Chat:** visit [mgigolf.com](http://mgigolf.com)

**Toll Free within Australia:** 1300 644 523 (excludes mobiles)

**Telephone:** +61 3 8872 6700

**Local Service Centres:** visit [mgigolf.com](http://mgigolf.com)  
to locate your local service centre.

**MGI USA**

**Service Email:** [serviceusa@mgigolf.com](mailto:serviceusa@mgigolf.com)

**Live Chat:** visit [mgigolf.com](http://mgigolf.com)

**Telephone:** 1800 617 2990

**MGI CANADA**

**Service Email:** [servicecanada@mgigolf.com](mailto:servicecanada@mgigolf.com)

**Live Chat:** visit [mgigolf.com](http://mgigolf.com)

**Telephone:** 1800 617 2990

**MGI GLOBAL**

**Sales Email:** [globalsales@mgigolf.com](mailto:globalsales@mgigolf.com)

**Service Email:** [globalservice@mgigolf.com](mailto:globalservice@mgigolf.com)

**Live Chat:** visit [mgigolf.com](http://mgigolf.com)

Follow us on



*NOTE: This quick start guide was correct at time of printing. The online version is the most up-to-date and must be referred to as the correct version. To download the most current user manual please visit [mgigolf.com](http://mgigolf.com). Images shown throughout this manual may not be of the particular model you have purchased. MGIG\_2064 / 09/23.*