Please contact Customer Service with any questions:

PRECISE® LTM
Diode Laser

(877) 236-4408

Fiber Replacement Instructions





Place unit upside down on a hard surface.








Slide fiber cartridge out and gently place on hard surface next to the unit.

Unscrew the connector to the empty cartridge and dispose.

3

Place the new cartridge on its side in place of the empty cartridge.

Grasp the metal ring at the base of the coupling to stabilize and prevent breakage.

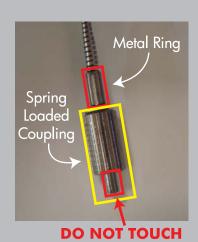





Push the coupling into the connection while maintaining your grasp on the metal ring.

Continue to hold metal ring and twist coupling into place with the other hand.

Warning: If metal ring is left to twist, hyper-rotation of the fiber may occur resulting in irreparable damage.







Gently guide fiber back into recessed space within the fiber cartridge.

Make sure the coil retracts into the cartridge as it is gently slid into place.