

Mad about heat DWBi boiler controller connection diagram for ST28N computer.



Hot water pump wire is only used when plumbing is split and has separate hot water feed.

If hot water pump is not used make connection safe with terminal block.

Hot water sensor if used keep together with Thermal fuse and CH sensor.

Thermal fuse, CH sensor & HW sensor either install in the boiler in a bush on top or using metal band secure to flow pipe on top of boiler and use lagging.

