

3-IN-1 CLOCK, TIMER & STOPWATCH

ITEM#: 898

USE & CARE INSTRUCTIONS

IMPORTANT: RETAIN FOR FUTURE REFERENCE, READ CAREFULLY.

For assistance with use, parts and customer service call (800) 431.2133 Monday through Friday, 9AM to 5PM EST, email info@polder.com or visit our website at www.polder.com.

Customers in the UK can call +44 (0) 1243 780501 or visit www.polderhousewares.co.uk

IMPORTANT INFORMATION:

If this is your first time using the 3-in-1 Clock, Timer & Stopwatch please be sure to remove the protective insulation tape from the battery compartment and protective sheet from the LCD screen before use.

NOTE: there is a "LOCK / UNLOCK" button located on the right hand side of the unit. Please be sure to slide the button to "UNLOCK" in order to activate the keypad for use.

TO INSTALL / CHANGE BATTERY

Warning: batteries may pose a choking hazard. Do not let children handle batteries.

This item uses one LR44 battery. Battery should be removed from the timer if consumed or if the product is to be left unused for a duration of time. It is recommended to clean all battery contacts prior to installation. Do not mix old and new batteries. Do not mix alkaline, standard (Carbon-Zinc), or rechargeable (Nickel Cadmium) batteries.

Always purchase the correct size and grade of battery most suitable for the intended use.

Replace all batteries of a set at the same time.

Ensure all batteries are installed correctly with regard to polarity (+ and -).

Remove used batteries promptly.

1. Battery door is located on the back of the unit.
2. Slide open the battery door in the direction of the arrow.
3. Insert one LR44 battery being sure the "+" sign is facing out (toward you).
4. Replace battery door, slide until it locks in place.

DISPOSAL OF USED BATTERIES



Batteries may contain hazardous substances which could endanger the environment and human health. This symbol marked on the battery and/or packaging indicates that used battery shall not be treated as municipal waste. Instead it shall be left at the appropriate collection point for recycling. By ensuring the used batteries are disposed of correctly, you will help prevent potential negative consequences for the environment and human health. The recycling of materials will help conserve natural resources. For more information about collection and recycling of used batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased this product.

TO SET CLOCK:

1. Press the 12hr=24hr button on the back of the unit to switch between 12 hour and 24 hour settings.
2. Press and hold the CLOCK button until the display disappears (approx. 3 seconds).
3. Press the START/STOP button to switch between AM and PM.
4. Press the number keys (0 through 9) to set the time. Press CLEAR if an incorrect number is selected.

Notes:

- for the hours between 1 and 9, 0 must be entered before selecting the hour (eg. 09:30)
- seconds must also be set in order for the clock to function.

COUNTUP / STOPWATCH

1. Press COUNT-UP button until the words "count up" appear on the display.
2. Press the START/STOP button to begin counting up.
3. Press START/STOP again to pause counting.
4. Press START/STOP again to resume counting.
5. To reset the time, press START/STOP to pause counting and then CLEAR to reset the time to 0:00:00

TIMER

1. Press TIMER button on the front of the unit and the word "timer" will appear on the display.
2. Press the number keys (0 through 9) to set desired time.
3. Press START/STOP to start countdown.
4. Press START/STOP again to pause counting.
5. To resume, press START/STOP.
6. When the set time has been reached an alarm will sound. Pressing the START/STOP button will stop the alarm and the timer will revert to the last time entered.
7. Press CLEAR to reset the timer to 0:00:00

ENABLING / DISABLING THE KEY PAD

There is a red "LOCK / UNLOCK" button on the right hand side of the unit. This allows the keypad to be locked once your time has been set to prevent accidental resetting of the timer. Simply slide the button to LOCK once your time has been set. To enable the keypad to reset the timer, slide the button to UNLOCK.

NOTE: UNIT DOES NOT HAVE AN ON/OFF FUNCTION.

PRECAUTIONS:

1. Do not clean the unit with abrasive or corrosive compound. It may scratch the plastic and corrode the electronic circuit.
2. Do not subject the unit to excessive force, shock, dust, temperature, direct sunlight, heavy exposure to water or humidity, which may result in malfunction, shorter electronic life span, battery damage or distorted parts.
3. Do not tamper with the unit's internal components. It will invalidate the warranty.

ONE YEAR LIMITED WARRANTY:

Polder will repair or at its option replace this product without charge, other than shipping charges, if it is returned to Polder with shipping charges prepaid, as being defective, within one year of the date of purchase and provided that inspection by the company indicates it is defective because of faulty workmanship or material. Please save your original receipt for this limited one year warranty to be valid. This limited warranty does not cover damage to this product through accident or misuse, nor does it cover any incidental expense to the user resulting from the non-function or malfunction of this product.