

AQUA-DRY DIGITAL KITCHEN SCALE

ITEM#: KSC-545-95

USE & CARE INSTRUCTIONS

IMPORTANT: RETAIN FOR FUTURE REFERENCE, READ CAREFULLY.


For assistance with use, parts and customer service call (800) 431.2133 Monday through Friday, 9AM to 5PM EST, email info@polder.com or visit our website at www.polder.com.

Customers in the UK can call +44 (0) 1243 780501 or visit www.polderproducts.co.uk

IMPORTANT INFORMATION:

If this is your first time using the Aqua-Dry Digital Kitchen Scale please be sure to remove the protective insulation tape from the battery compartment and protective sheet from the display before use..

LOW BATTERY INDICATOR

1. If the battery symbol  appears on the display, it is recommended to replace with new batteries to ensure optimum accuracy of the scale.
2. If the display shows 'Lo' and shuts off automatically, please replace the batteries immediately.

TO INSTALL / CHANGE BATTERIES

Warning: batteries may pose a choking hazard. Do not let children handle batteries.

This item uses three AAA 1.5V batteries. In order to ensure proper performance, be sure to replace batteries as a simultaneous set. Batteries should be removed from the scale if consumed or if the product is to be left unused for duration of time. It is recommended to clean all battery contacts prior to installation. Do not mix old and new batteries. Do not mix alkaline, standard (Carbon-Zinc), or rechargeable (Nickel Cadmium) batteries.

Always purchase the correct size and grade of battery most suitable for the intended use.

Replace all batteries of a set at the same time.

Ensure all batteries are installed correctly with regard to polarity (+ and -).

Remove used batteries promptly.

1. Battery door is located on the back of the unit.
2. Push open the battery cover
3. Insert three AAA size batteries. Please ensure correct polarity of the batteries (+/-)



4. Replace battery door to secure cover in place.

DISPOSAL OF USED BATTERY:



Batteries may contain hazardous substances which could endanger the environment and human health.

This symbol marked on the battery and/or packaging indicates that used battery shall not be treated as municipal waste. Instead it shall be left at the appropriate collection point for recycling.

By ensuring the used batteries are disposed of correctly, you will help prevent potential negative consequences for the environment and human health. The recycling of materials will help conserve natural resources.

For more information about collection and recycling of used batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased this product.

TO TURN THE SCALE ON/OFF:

Place item on a flat surface before use.

1. Press the ON/OFF button to turn scale ON. After a few seconds a 0:00 (for lb & oz) or 0 (for g/ml) or 0.00 (for fl:oz) will appear. The scale is ready to use.
2. Press and hold the button ON/OFF for a few seconds to turn scale OFF.

NOTE: The auto shut-off feature will turn the scale off if not used for 150-seconds.

TO SWITCH BETWEEN WEIGHT & VOLUME:

With the scale on, press the UNIT button at any time to switch between reading in imperial (pounds/ounces) and metric (grams) or fl:oz (water-based) and ml (water-based).

CAPACITY:

22.0 lb. / 10000 g / 352 fl:oz / 10 l. (displays in 0.125oz. / 1gram / 0.02fl.oz / 1ml increments).

HOW TO USE TARE (additive weighing) FEATURE:

1. Place first item on scale, scale will display weight of item.
2. Tap ON/OFF button. Display will revert to "0" (for g) or "00" (for lb. and oz.) or 0 (for g or ml) or 0.00 (for fl:oz).
3. Place second item on scale, scale will display weight of item.
4. Tap ON/OFF button. Display will revert to "0" (for g) or "00" (for lb. and oz.) or 0 (for g or ml) or 0.00 (for fl:oz).
5. Repeat steps 3 and 4 until all items have been weighed.

NOTE: there are two ways to set the scale at "0" when weighing items in a container.

1. Place the container on the scale before turning it ON.
2. If the scale is already ON, place the container on the scale and tap the ON/OFF button which will revert the scale to "0" (for g) or "00" (for lb. and oz.) or 0 (for g or ml) or 0.00 (for fl:oz).

NOTE: the scale will read "o-Ld" if weight on scale is above the scale's capacity of 22.0 lb. / 10000 g / 352 fl:oz / 10 l.

AQUA-DRY DIGITAL KITCHEN SCALE

ITEM#: KSC-545-95

USE & CARE INSTRUCTIONS

IMPORTANT: RETAIN FOR FUTURE REFERENCE, READ CAREFULLY.

For assistance with use, parts and customer service call (800) 431.2133 Monday through Friday, 9AM to 5PM EST, email info@polder.com or visit our website at www.polder.com.

Customers in the UK can call +44 (0) 1243 780501 or visit www.polderproducts.co.uk

WEIGHT CAPACITY INDICATOR:

The weight capacity indicator shows the used capacity of the scale between 0 and 22 lbs (or 0 and 10 kg, or 0 and 352 fl.oz or 10 l). When maximum capacity is reached, "o-Ld" will appear on the display. To protect the scale, remove excess weight immediately.

USE AND CARE:

Unit is NOT dishwasher safe. Clean weighing surface with soft cloth using soap and water. DO NOT PLACE IN DISHWASHER. Food grade Silicone Mat is dishwasher safe (top rack only)

PRECAUTIONS:

1. Do not clean the unit with an abrasive or corrosive compound. It may scratch the housing and corrode the electronic circuit.
2. Do not overload the scale.
3. Do not subject the scale to excessive force, shock, dust, temperature, direct sunlight, heavy exposure to water or humidity. Doing so may result in malfunction, shorter electronic life span, battery damage or distorted parts.
4. Do not tamper with the unit's internal components. It will invalidate the warranty.

ONE YEAR LIMITED WARRANTY:

Polder will repair or at its option replace this product without charge, other than shipping charges, if it is returned to the address below with shipping charges prepaid, as being defective, within one year of the date of purchase and provided that inspection by the company indicates it is defective because of faulty workmanship or material. Please save your original receipt for this limited one year warranty to be valid. This limited warranty does not cover damage to this product through accident or misuse, nor does it cover any incidental expense to the user resulting from the non-function or malfunction of this product.

CAUTION: Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced Radio/TV technician for help.



Manufactured by:
Polder Products, LLC
195 Christian Street
Oxford, CT 06478 USA
1-203-888-9208
www.polder.com

 **Polder**
life.style.solutions.

MADE IN CHINA