

USE & CARE INSTRUCTIONS

IMPORTANT: RETAIN FOR FUTURE REFERENCE, READ CAREFULLY.

For assistance with use, parts and customer service call +1(203)888-9208 Monday through Friday, 9AM to 5PM EST, email info@polder.com or visit our website at www.polder.com.

Customers in the UK can call +44 (0) 1243 780501 or visit www.polderproducts.co.uk

PRECAUTIONS:

1. Do not clean the unit with an abrasive or corrosive compound. It may scratch the housing and corrode the electronic circuit.
2. Do not subject the unit to excessive force, shock, dust, temperature, direct sunlight, heavy exposure to water or humidity. Doing so may result in malfunction, shorter electronic life span, battery damage or distorted parts.
3. Do not tamper with the unit's internal components. It will invalidate the warranty.
4. Always clean the probe and cover with sheath after use.

NOTE:

If this is your first time using the Pivoting Screen Instant Read Thermometer, please be sure to remove the protective sheet from the display screen. This item includes a battery. To start first use, pull the clear plastic tab located just outside the battery compartment.

1 - TURN THE UNIT ON / OFF:

Press the button on the top of the unit to turn on the thermometer.
To turn the unit off manually, press and hold the button on top of the unit for button for 3 seconds.
If not turned off manually, the thermometer will turn off automatically after 20 minutes without use.

2 - TO SWITCH BETWEEN CELSIUS OR FAHRENHEIT DEGREES:

Press the "F/C" button on the back of the unit to switch between the degrees Celsius (°C) and degrees Fahrenheit (°F) temperature display formats.

3 - BACKLIGHT FEATURE:

Press the button on top of the unit once to illuminate the backlight.
The light stays on for 10 seconds.

4 - TO INSTALL / CHANGE BATTERIES:

Warning: batteries may pose a choking hazard. Do not let children handle batteries.

This item uses one CR2032 battery. Batteries should be removed from the thermometer if consumed or if the product is to be left unused for a duration of time.

It is recommended to clean all battery contacts prior to installation.

Always purchase the correct size and grade of battery most suitable for the intended use.
Ensure all batteries are installed correctly with regard to polarity (+ and -).
Remove used batteries promptly.

1. Battery door is located on the back of the unit.
2. Using a coin, carefully remove the cover. Using a firm but even downward pressure, rotate the battery cover to the open (🔓) position.
3. Lift the cover from the hole using a fingernail.
4. Place one CR2032 battery positive side up making sure that the clip snaps over the battery to hold it in place.
5. Replace the battery cover rotating it to the closed (🔒) position.

BATTERY INDICATOR:

The battery symbol (🔋) on the display indicates the battery capacity.
Please replace the battery when the battery symbol is flashing.

TO SAMPLE TEMPERATURE:

Insert the tip of the probe into the thickest point of the meat and keep in place.

SPECIFICATIONS:

Temperature measuring range: -50°C to +200°C (-58°F to 392°F). If measuring higher than 200°C (392°F), display will show "HHH.H". If measuring lower than -50°C (-58°F), display will show "LLL.L".


Resolution: 0.1°C (1°F)

USE AND CARE:

Unit is NOT dishwasher safe. Clean probe with hot, soapy water and wipe head with a damp cloth. Do not immerse thermometer in water.
Probe stem can also be cleaned with alcohol to disinfect.

DISPOSAL OF USED BATTERY:

Batteries may contain hazardous substances which could endanger the environment and human health.

 This symbol marked on the battery and/or packaging indicates that used battery shall not be treated as municipal waste. Instead it shall be left at the appropriate collection point for recycling.

By ensuring the used batteries are disposed of correctly, you will help prevent potential negative consequences for the environment and human health. The recycling of materials will help conserve natural resources.

For more information about collection and recycling of used batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased this product.

ONE YEAR LIMITED WARRANTY:

Polder will repair or at its option replace this product without charge, other than shipping charges, if it is returned to the address below with shipping charges prepaid, as being defective, within one year of the date of purchase and provided that inspection by the company indicates it is defective because of faulty workmanship or material. Please save your original receipt for this limited one year warranty to be valid. This limited warranty does not cover damage to this product through accident or misuse, nor does it cover any incidental expense to the user resulting from the non-function or malfunction of this product.

BACK OF UNIT