

DIGITAL BUZZ & BEEP TIMER

ITEM#: TMR-2125

USE & CARE INSTRUCTIONS

IMPORTANT: RETAIN FOR FUTURE REFERENCE, READ CAREFULLY.

For assistance with use, parts and customer service call (800) 431.2133 Monday through Friday, 9AM to 5PM EST, email info@polder.com or visit our website at www.polder.com.

Customers in the UK can call +44 (0) 1243 780501 or visit www.polderhousewares.co.uk

IMPORTANT INFORMATION:

If this is your first time using the Digital Buzz & Beep Timer please be sure to remove the protective insulation tape from the battery compartment and protective sheet from the LCD screen before use.

TO INSTALL / CHANGE BATTERY

Warning: batteries may pose a choking hazard. Do not let children handle batteries.

This item uses two AAA batteries. In order to ensure proper performance, be sure to replace batteries as a simultaneous set. Batteries should be removed from the scale if consumed or if the product is to be left unused for a duration of time. It is recommended to clean all battery contacts prior to installation. Do not mix old and new batteries. Do not mix alkaline, standard (Carbon-Zinc), or rechargeable (Nickel Cadmium) batteries.

Always purchase the correct size and grade of battery most suitable for the intended use.

Replace all batteries of a set at the same time.

Ensure all batteries are installed correctly with regard to polarity (+ and -).

Remove used batteries promptly.

1. Battery door is located on the back of the unit.
2. Press and slide open the battery cover in the direction of the arrow to remove.
3. Insert two AAA size batteries as indicated by the polarity symbols (+ and -).
4. Replace battery door, sliding back onto the unit until it snaps in place.

DISPOSAL OF USED BATTERIES



Batteries may contain hazardous substances which could endanger the environment and human health. This symbol marked on the battery and/or packaging indicates that used battery shall not be treated as municipal waste. Instead it shall be left at the appropriate collection point for recycling. By ensuring the used batteries are disposed of correctly, you will help prevent potential negative consequences for the environment and human health. The recycling of materials will help conserve natural resources. For more information about collection and recycling of used batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased this product.

TO SET TIMER:

1. Press the hour (HR) button on the front of the display unit until the desired hours are reached. To scroll quickly, hold down the HR button.
2. Press the minute (MIN) button on the front of the display unit until the desired minutes are reached. To scroll quickly, hold down the MIN button.
3. Press the seconds (SEC) button on the front of the display unit until the desired seconds are reached. To scroll quickly, hold down the SEC button.
4. Press the START/STOP button to initiate the timer function. Countdown will begin descending in second increments. Countdown can be paused and restarted by pressing the START/STOP button.
5. When countdown is complete, the timer will sound and vibrate for 30 seconds and every 10 seconds thereafter for a maximum time of 10 minutes unless the START/STOP button is pressed.

TO RESET TIMER:

At any time you can reset the timer to 00:00:00 by pressing the CLEAR button.

TO REPEAT LAST SETTING:

Press the CLEAR button twice to recall last set time.

TO USE COUNT-UP FEATURE:

1. Press the CLEAR button to set the timer to 00:00:00.
2. Press the START/STOP button. The display will begin counting up. The timer counts up to a maximum time of 99 hours, 59 minutes and 59 seconds.
3. Press the START/STOP button again to pause/stop and restart the count-up feature.
4. To reset the timer to 00:00:00, press the CLEAR button.

TO MUTE THE ALARM:

Switch the MUTE button on the top of the unit to the OFF position. To turn the alarm back on, switch the button to the ON position.

NOTE: UNIT DOES NOT HAVE AN ON/OFF FUNCTION.

PRECAUTIONS:

1. Do not clean the unit with abrasive or corrosive compound. It may scratch the plastic and corrode the electronic circuit.
2. Do not subject the unit to excessive force, shock, dust, temperature, direct sunlight, heavy exposure to water or humidity, which may result in malfunction, shorter electronic life span, battery damage or distorted parts.
3. Do not tamper with the unit's internal components. It will invalidate the warranty.

TWO YEAR LIMITED WARRANTY:

Polder will repair or at its option replace this product without charge, other than shipping charges, if it is returned to the address below with shipping charges prepaid, as being defective, within two years of the date of purchase and provided that inspection by the company indicates it is defective because of faulty workmanship or material. Please save your original receipt for this limited two year warranty to be valid. This limited warranty does not cover damage to this product through accident or misuse, nor does it cover any incidental expense to the user resulting from the non-function or malfunction of this product.