

DIGITAL KITCHEN TIMER

ITEM#: TMR-636

USE & CARE INSTRUCTIONS

IMPORTANT: RETAIN FOR FUTURE REFERENCE, READ CAREFULLY.

For assistance with use, parts and customer service call (800) 431.2133 Monday through Friday, 9AM to 5PM EST, email info@polder.com or visit our website at www.polder.com.
Customers in the UK can call +44 (0) 1243 780501 or visit www.polderproducts.co.uk

IMPORTANT INFORMATION:

If this is your first time using the Digital Kitchen Timer please be sure to remove the protective insulation tape from the battery compartment and protective sheet from the LCD screen before use.

TO INSTALL / CHANGE BATTERY

Warning: batteries may pose a choking hazard. Do not let children handle batteries.

This item uses two CR2032 batteries. Batteries should be removed from the Digital Kitchen Timer if consumed or if the product is to be left unused for a duration of time. It is recommended to clean all battery contacts prior to installation.

Always purchase the correct size and grade of battery most suitable for the intended use.
Ensure battery is installed correctly with regard to polarity (+ and -).
Remove used battery promptly.

1. Battery door is located on the back of the unit.
2. On the back of the unit, press and slide the battery cover in the direction of the arrow to remove
3. Align the positive and negative sides of the battery with the (+) positive and (-) negative symbols in the battery compartment.
4. Slide and snap the battery cover back into place.

DISPOSAL OF USED BATTERIES



Batteries may contain hazardous substances which could endanger the environment and human health. This symbol marked on the battery and/or packaging indicates that used battery shall not be treated as municipal waste. Instead it shall be left at the appropriate collection point for recycling. By ensuring the used batteries are disposed of correctly, you will help prevent potential negative consequences for the environment and human health. The recycling of materials will help conserve natural resources. For more information about collection and recycling of used batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased this product.

NOTE: UNIT DOES NOT HAVE AN ON/OFF FUNCTION.

TO SET TIMER

1. Press the **MIN** button on the front of the display unit until the desired minutes are reached. To scroll quickly, hold down the **MIN** button.
2. Press the **SEC** button on the front of the display unit until the desired seconds are reached. To scroll quickly, hold down the **SEC** button.
3. Press the **START/STOP** button to begin the timer function. Countdown will begin counting in seconds. The "M" and "S" symbols will begin blinking while the timer is in countdown mode. Countdown can be paused and restarted by pressing the **START/STOP** button.
4. When count down is complete, the alarm will sound for 30 seconds, and the timer will return to the original time set.

TO RESET TIMER

If the user has entered the wrong time or would like to use a different feature, reset the timer to 00:00 by pressing the **MIN** and **SEC** buttons at the same time.

TO USE COUNT-UP FEATURE

1. Press the **START/STOP** button. The display will begin counting up. The stopwatch feature counts up to a maximum time of 99 minutes, and 59 seconds. Once it reaches it's maximum time it will automatically start over from 00:00. The "M" and "S" symbols will begin blinking while the timer is in count-up mode.
2. Press the **START/STOP** button again to pause/stop and restart the count up feature.
3. To reset the timer to 00:00, press the **MIN** and **SEC** buttons at the same time.

PRECAUTIONS:

1. Do not clean the unit with abrasive or corrosive compound. It may scratch the plastic and corrode the electronic circuit.
2. Do not subject the unit to excessive force, shock, dust, temperature, direct sunlight, heavy exposure to water or humidity, which may result in malfunction, shorter electronic life span, battery damage or distorted parts.
3. Do not tamper with the units internal components. It will invalidate the warranty.

ONE YEAR LIMITED WARRANTY:

Polder will repair or at its option replace this product without charge, other than shipping charges, if it is returned to the address below with shipping charges prepaid, as being defective, within one year of the date of purchase and provided that inspection by the company indicates it is defective because of faulty workmanship or material. Please save your original receipt for this limited one year warranty to be valid. This limited warranty does not cover damage to this product through accident or misuse, nor does it cover any incidental expense to the user resulting from the non-function or malfunction of this product.