

## Removing the filter



### Step 1

Twist the filter  
clockwise 90°  
from the housing.



### Step 2

Pull the filter down  
to remove it from  
the housing.

## Inserting the filter



### Step 1

Push the filter up  
and insert it into  
the housing.



### Step 2

Twist the filter  
anti-clockwise 90°  
and push up into  
the housing.



### Step 3

Make sure that  
the arrows on  
the filter and the  
housing line up.