## 5MP-TVI/ 5MP-AHD)/ 4MP CVI CAMERA

# C-TVI5MP9872G



- . Key Features:
- 1/2.9" SONY 6MP CMOS sensor
- Mode 5MP-TVI/ 5MP-AHD)/ 4MP CVI/ CVBS CAMERA
- · With IR-CUT / DNR

## **SPECIFICATION**

DESCRIPTION	PAL	
Imaging Device	1/2.9" SONY 6MP CMOS sensor	
Effective Pixels	5MP (2592*1944)	
Scanning System	Progressive Scan	
Synchronization	Internal, Negative Sync	
Horizontal Resolution	5MP TVI/ 5MP AHD/ 4MP CVI/ CVBS	
Video Output	5MP TVI/ 5MP AHD/ 4MP CVI/ CVBS	
S/N Ratio	More than 50dB (AGC Off)	
Min. Illumination	0.001Lux(Color)/F1.2	
IRIS Adjustment	Auto	
LENS	2.8~12 Manual Zoom Lens	
Electronic Shutter	Auto/FLK/1/25,30sec ~ 1/60000sec	
Electronic Shutter	MANUAL(X2~X512)	
IR LEDs	72Pcs LEDs	
Gama Characteristic	0.45	
IR Distance	60 Meters	
IR Status	Under 10 Lux by PD	
Auto Gain Control	Auto	
Day&Night	Auto	
Privacy Masking	On / Off (Programmable)	
3D-DNR	LEVEL(0~100)Adjustment	
Digital Zoom	1.0X-8.0X	
SENS-UP	0FF/ X2-X8	
MOTION	ON/OFF	
Digital Effect	OFF / V-FLIP / MIRROR / ROTATE	
Dimension (mm)	a) 305(W) x 116.50(H) x 100(D)mm	
Weight(g)	1700	
Input Voltage	DC 12V(±10%)	
Power Consumption	IR OFF: 210mA / IR ON: 550mA(±10%)	
Operating Temp/Hum.	−10°C~ +50°C / 30% ~ 80% RH	
Storage Temp. / Hum.	-20°C ~ +60°C / 20% ~ 90% RH	

## **WARRANTY**

	Warranty Period: 2 years
Product	Model C-TVI5MP9872C
Floudet	Serial No.
Purchase	Customer
Address	
Dealer	Representative
Dealer	Representative

- Please contact purchasing office or service center when you find any damage or problem with this product.
- ► The warranty period is 2 years from Invoice date.

 
## ♠A/S without cost

	Within Warranty Pariod	Warranty details	
Within Warranty Period		Within warranty	After Warranty
When damages occurred in nomal working environment		Product	
		A/S without	
	Repair or Replace	cost	
		Product	
		exchange	

Damage by customer's negligence Warranty detai		
chargeabl e case even within warranty	Damage by customer's careless handling Damage by natural disaster (Fire, Flood, etc.) Damage by not keeping the cautions and instructions on manual Damage by not using appointed power(frequency, voltage) or adapter. Damage by disassemble or cleaning by customer Damage by repairment by a person excepting the dealer	A/S with cost

## **DIMENSION**

## C-TVI5MP9872G



## **CONNECTING OF CAMERA**



- 1. No Picture after providing power. May be the power supply  $voltage_{\parallel}$ abnormity, please check the power supply voltage and pole whether exactitude. Please check all the connecting cable and monitors whether be connected correctly or not.
- 2. The picture level direction have flowing interference ripples. May be caused by the power supply AC ripples, it need filter the wave of the power supply. Check the monitor and peripheral equipments
- 3. The picture background color changes continuously. The fluorescent lamp's electromagnetic field cause color roll. This is proper phenomenon of the cameras. Reduce the fluore scent lamp numbers or increase the distance between the camera and the fluorescent lamps can improve it. Use power supply external sync. camera can solve it.
- 4. The picture smear too mass . The power supply's voltage unstable. Connecting cables not connect correctly or have high impedance.

#### **Feature Summary**

- \* Sensor (CMOS)
- 1/2.7" 2.1 Megapixel CMOS
- \* Auto Gain Control (AGC)

Built-in auto gain control (AGC) circuit. The color camera can get high definition picture in low Lux condition.

\* Scanning Mode

NTSC or PAL mode.

\* Auto Electronic Shutter (AES)

Built-in auto electronic shutter function. The color camera's AES speed can reach 1/100,000s.

\* Gama Characteristic

Camera Gama characteristic is 0.45.

\*Scanning Mode

NTSC or PAL mode.

\*Switch the output signal by OSD button

Press "left" key after 5 seconds then release: CVBS

Press "right" key after 5 seconds then release: TVI

Press "up" key after 5 seconds then release: AHD

Press "down" key after 5 seconds then release: CVI

## **CAUTION IN INSTALLATION**

- . Do not install the camera opposite of the sun so that it be avoided direct light.
- & Be careful not to drop this camera and not to impact on it. CCTV camera is a precision device.
- A Do not pull the cable. If you pull the cable, it will make electrical problems such as disconnection.
- A The camera should be worked within a range of the allowable temperature that refers to specification.
- A Do not try to fix even if the camera does not work.
- A Installation this camera at safety place where is no water, If the camera has some problems with water accidently. You have to contact A/S centre that sold the camera to you.
- A If you would like to relocate the already installed product, be sure to turn off the power and then move or reinstall it.
- ♣ Please contact the nearest A/S centre if you find out any Problems. Please do not ignore any small problems they can become a big problem.

## **CAUTION**



To prevent fire or shock hazarded. Do not expose the unit rain to rain or moisture.



The symbol is intended to alert the user to the presence of important important operating and maintenance (servicing) Instructions in the literature accompanying the appliance.



The symbol is intended to alert the user to the presence of uninsulated 'dangerous voltage' within the product's enclosure that may be of sufficient Magnitude to constitute a risk of electric shock to persons.



CAUTION: RISK OF ELECTRIC. DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO

CAUTION: To prevent electric shocks and risk of fire hazards, do NOT use other than specified power source.



#### Note:

- Please note the camera's operating temperature and its using environment requirement. Avoid using the camera at too high or too low temperatures. The operating temperature is -30~+60  $^{\circ}\mathrm{C}$ (Recommendatory operating temperature is -10~+50  $^{\circ}\mathrm{C}$  .)
- Never make the camera face the sun or bright object. Otherwise, it will damage the CMOS.