

# ICP-CP4TS 4.3"



Security Systems

EN


User Guide  
Security System

**BOSCH**

# “Touch Classic” User Guide

The Touch Classic is a 21st century graphic user interface for the Solution™ Classic range of Bosch security control panels. The low profile stylish 4.3” touchscreen is simple and logical in use and integrates seamlessly into the modern home.



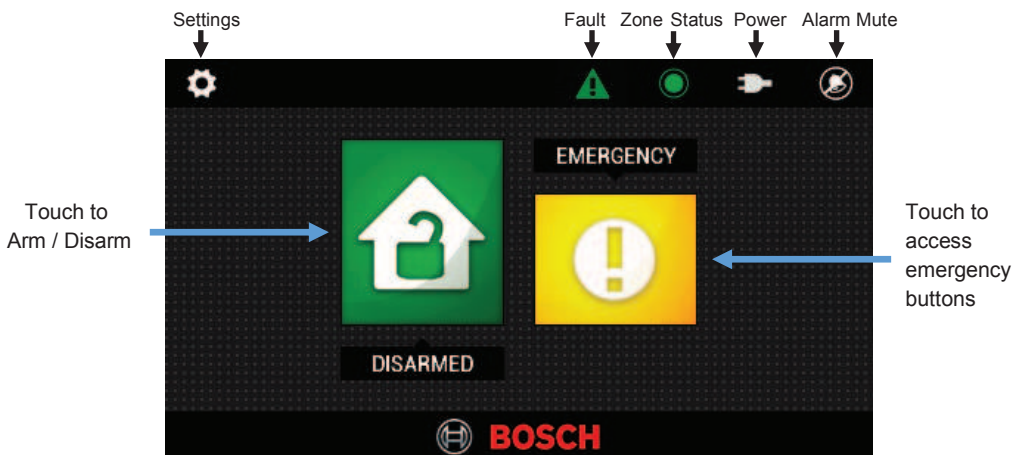















## Home Screen



## Icons Overview

Touching icons will provide the user with additional information or functions.

**NOTE:** The Icons displayed will depend on your alarm system configuration.

	System/area is AWAY armed		System/area is STAY armed
	System/area is DISARMED		Access to PANIC buttons
	Zone sealed		Access the settings menu
	Zone isolated		Silence alarms eg: 24hr
	Zone unsealed		No Faults are present
	Zone has an alarm memory		A new fault has occurred
	Return to previous screen		A Fault is present
	Return to Home screen		Mains power is OK
	Go to Emergency screen		Mains power has failed

## Icon Overview *Note: These \* 3 arming icons apply only to partitioned systems.*



\*All Areas are ARMED



\*Some Areas are ARMED




\*All Areas are DISARMED




Reset latched day alarm output


## Arming the security system

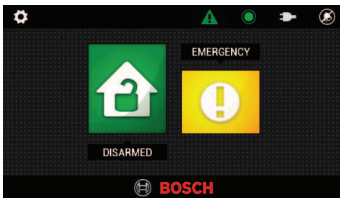

1. Touch "Disarmed" icon

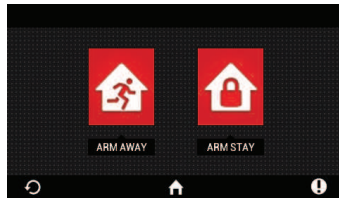

2. Touch Arming mode icon

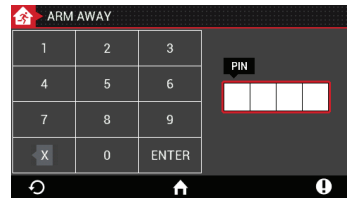

3. PIN + ENTER


## Disarming the security system - PIN + ENTER

## Settings Menu

Touch



=

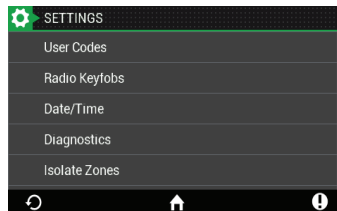

## Menu Description (Some menu items may not appear depending on installer setup)


1. User Codes = Add, delete or change a users PIN
2. Radio Keyfobs = Add or delete a remote control
3. Date/Time = Change the date and time setting in the alarm panel
4. Dialling = Check, add or change telephone numbers called.
5. Diagnostics = Check system history and test sirens, zones etc
6. Isolate Zones = Turn off selected zones for one arming period
7. Day Alarm on/off = refer to day alarm in your panel's user manual
8. Control Outputs = refer to Control Outputs in your panel's user manual
9. Reset Outputs = refer to Control Outputs in your panel's user manual
10. Names = Add or change names for zones, users and outputs

## Menu Description


- 11. Touchpad = Alter settings such as sound and brightness.
- 12. Installation = Access to installation settings ( installer use only )

## Add, Change or Delete a User Code


Touch  Select "User Codes" from the menu

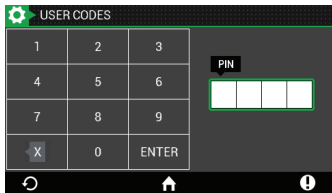

Enter a master code

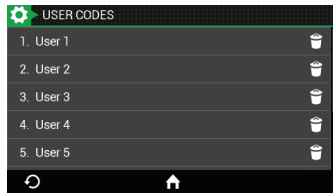

Select User to add or change

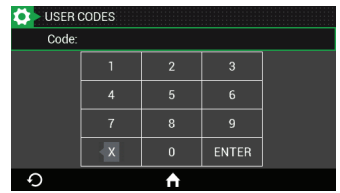


Enter new code


To delete touch bin icon

## Isolate a Zone

Touch  Select "Isolate Zones" from the menu

Touch the "NO" button to change state

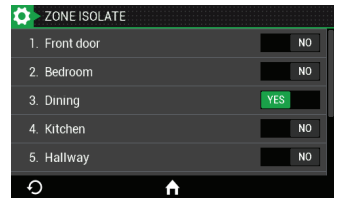


Touch  to return to home screen . The zone status icon will now switch to white in colour. Isolation is for one arming period only.

## Names

Zones and user codes can have custom names assigned via this option.

Touch  Select "Names" from the menu then "Zones" or "Users."

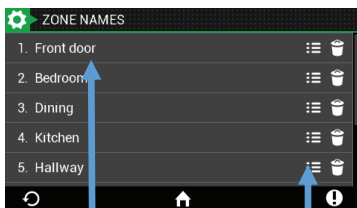


Touch to modify name

Touch to select predefined names



Name Editing

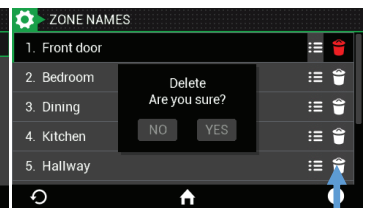

Touch to delete name


The above method applies to user names also.

## ***Change Telephone Numbers***

Touch  Select “Dialling from the menu. Enter a valid master code.

The screen will display any existing telephone numbers. To edit touch the number 1, 2 or 3. A keypad will appear allowing entry of the new number. The bin symbol may be used to delete unwanted numbers.

## ***Touchpad***

Touch  Select “Touchpad” from the menu. The sub menu will display.

1. **Clean** = Selecting this will present the user with a 10 second countdown clock which disables the touchscreen to allow cleaning.
2. **Auto Brightness Adj.** = When YES is selected the display brightness will automatically adjust to suit the light level in the room.
3. **Brightness** = Display brightness adjustment to suit room lighting. If auto brightness ( above) is selected, operation of this control allows the Touch Classic to learn the users brightness preference.
4. **Key Click** = Volume adjustment of the touch CLICK sound.
5. **Sound** = Adjust the tone and volume of indications.
6. **Identification** = Displays the current firmware version
7. **Security** = Allows changes to the Touch Classic security settings through the following options.
  - Scramble Pinpad. = This option alters the standard keypad to display the numbers in random patterns to remove the possibility of a code being revealed by finger marks on the touchscreen.
  - Hide Pin = With this option NO. The pin is displayed in the four boxes on the keypad screen when entering a pin. With option YES the pin is not revealed.
  - Protect Settings = Selecting YES will force the user to enter a valid master code for access to any of the above menu.

**Bosch Security Systems**

21 Solent Circuit,

Baulkham Hills, NSW 2153

Australia

T: +61 13000 BOSCH (26724)

F: +61 (2) 8850 2230

**BOSCH**