

Master Code Default [2] [5] [8] [0]

Installer Code Default [1] [2] [3] [4]

1 Show Fault/Trouble Condition

- Main screen > press & hold [5].
- Use arrows to scroll & [-] to exit.

2 Default the Panel

- Remove power (PSU & battery).
- Press & hold DEFAULT button on PCB while reconnecting power.

3 Set the System Time & Date

- Main screen > Master Code then [6] [#]
- Enter Date & Time using number keys
- [#] to save or [*] to exit

6 Program Zone Type

- Installer Code then [-].
- Select Menu [4] [1] (Zone Config).
- Select zone number > scroll with arrows or enter zone number, then [#].
- Select zone type > scroll with arrows or enter zone type, then [#].
- Repeat for other zones.
- Press [-] until 'Confirm to Save Parameter Changes' appears then [#].

5 Enter Installer Menu & Change Installer Code

- Installer Code then [-].
- Select Menu [2] [1] (Installer Code).
- Enter new Installer Code, [#].
- Press [-] until 'Confirm to Save Parameter Changes' appears then [#].

4 Change the Master Code

- Master Code then [-]
- Select Menu [2] [2] (User Code). [#] to select U01 – User 01 Name.
- Enter new Master Code, [#].
- Press [-] until 'Confirm to Save Parameter Changes' appears then [#].

Common Zone Types

0 – Instant; 1 – Handover; 2 – Delay 1; 3 – Delay 2; 11 – Keyswitch; 12 – 24hr Burglary; 14 – Chime Only; 15 – Not Used

7 Program Primary Receiver

- Installer Code then [-].
- Select Menu [7] [1] [1] (First Phone Number).
- [#] to select Receiver 1.
- Enter phone number using number keys, then [#].
- Press [-] until 'Confirm to Save Parameter Changes' appears then [#].

8 Program Secondary Receiver

- Installer Code then [-].
- Select Menu [7] [1] [2] (Second Phone Number).
- [#] to select Receiver 1.
- Enter phone number using number keys, then [#].
- Press [-] until 'Confirm to Save Parameter Changes' appears then [#].

9 Program System Account Code

- Installer Code then [-].
- Select Menu [7] [1] [4] (Subscriber ID Number).
- [#] to select Receiver 1.
- Enter account code using number keys, then [#].
- Press [-] until 'Confirm to Save Parameter Changes' appears then [#].

Communicator Format Types

- 0 – Not Used
- 1 – Contact ID
- 4 – Domestic Dial
- 8 – CSV-IP
- 9 – Email

10 Program Communicator Format

- Installer Code then [-].
- Select Menu [7] [1] [3] (Transmit Format).
- [#] to select Receiver 1.
- Select format > scroll with arrows or enter format type then [#].
- Press [-] until 'Confirm to Save Parameter Changes' appears then [#].

11 Program Open/Close Report

- Installer Code then [-].
- Select Menu [7] [3] [4] (Arm/Disarm Report Option).
- To enable open/close report, select Receiver 1 using arrows or press [1]; then [#].
- To disable open/close report, select No Report using arrows or press [0]; then [#].
- Press [-] until 'Confirm to Save Parameter Changes' appears then press [#].

12 Program Entry Time

- Installer Code then [-].
- Select Menu [3] [1] [1] (Entry Time 1).
- Enter the time in seconds using the number keys then press [#].
- Press [-] until 'Confirm to Save Parameter Changes' appears then press [#].

13 Program Exit Time

- Installer Code then [-].
- Select Menu [3] [1] [3] (Exit Time).
- Enter the time in seconds using the number keys then press [#].
- Press [-] until 'Confirm to Save Parameter Changes' appears then press [#].

16 Perform Walk Test

- Main screen > enter Installer Code then [7] [#]
- Zones will tick one by one as they are activated. Scroll using the arrows.
- Press [-] to exit walk test mode.

15 Program User Codes

- Master Code then [-]
- Select Menu [2] [2] (User Code).
- Use arrow keys to select the user or enter user number, then press [#].
- Enter new user code, then [#].
- Press [-] until 'Confirm to Save Parameter Changes' appears then press [#].

14 Program Additional Timers

- Installer Code then [-].
- Select Menu [3] [1] (Timer).
- Select timer function such as [8] Auto Arm Time & [9] Auto Disarm Time.
- Enter the time using the number keys (eg 20 Hour, 00 Min) then press [#].
- Press [-] until 'Confirm to Save Parameter Changes' appears then press [#].

17 Learn in a Wireless Device

- Main screen > enter Installer Code then [0] [#]
- Enter device/zone number using the number keys then press [#].
- Enter the device RFID number as printed on the device then press [#] **OR** just press [*] to enter auto-learn mode, tamper the device to learn, then press [#] to save.
- Enter the RF Zone option, press [#].

Common Zone Types

0 – Instant; 1 – Handover;
2 – Delay 1; 3 – Delay 2; 11 – Keyswitch; 12 – 24hr Burglary;
14 – Chime Only; 15 – Not Used

Both the **RADION Wireless Receiver** and the **WE800EV2 Keyfob receiver** will be **automatically detected** by the panel when connected.

18 Delete a Wireless Device

- Main screen > enter Installer Code then [0] [#]
- Enter device/zone number using the number keys then press [#].
- Press [*] to delete the device.

20 Delete a Wireless Keyfob

- Main screen > enter Master Code then [1] [#]
- Enter keyfob/user number using the number keys then press [#].
- Press [*] to delete the device.

19 Learn in a Wireless Keyfob

- Main screen > enter Master Code then [1] [#]
- Enter keyfob/user number using the number keys then press [#].
- Enter the device RFID number as printed on the device then press [#] **OR** just press [*] to enter auto-learn mode, press a button on the keyfob to learn, then press [#] to save.
- Press [#] to save the new keyfob.