

HK- 10 Quick Setup Guide

Access mode setting

Step 1.

enter Admin password (**1234 + 1234**)

Step 2. Select operation mode type.

Card only mode press * then **0** the yellow light will now flash then press **0** twice.

Card or Code mode press * then **0** yellow light will now flash then press **0** then **1**

Card &Code mode press * then **0** yellow light will now flash then press **0** then **2**

Press # to exit.

Adding a user Code and Card

Step 1.

enter Admin password (**1234 + 1234**)

Step 2. Selecting Data Storage Unit

Enter a number between **000&999** to select a data storage unit,

If the light indicator is red that means selected storage unit already contains data, you can erase the data by pressing * twice.

If the light indicator is green that means the storage unit is not used and ready for new Card and Code data.

Step 3. Entering Card & Code

Once you are in an empty data storage unit Swipe the card over the Access panel you will hear a Beep sound to let you know the card is saved and to now enter your Code.

Your code must match the amount of digits set in your length of password settings.

ie. If your password is set to **3** digits your access code must be **3** digits in length.

Press # to exit

Setup unlock timer length

Step 1.

enter Admin password (**1234 + 1234**)

Step 2. setting length of timer

press * then **1** the yellow light will now flash then enter the number from **00-99**.

ie .entering the number **05** means the unlock timer will release for 5 seconds.

Press # to exit.

Setup the length of the passwords

Step 1.

enter Admin password (**1234 + 1234**)

Step 2.setting the length

press * then **9** the yellow light will now flash then press **0&4** you will then hear a beep sound then press x (X = **2,3,4,5,6**).

IE. For example if you press :

2 your passwords can now be **00-99**

3 your passwords can now be **000-999**

Press # to exit

WARNING

Changing password length will wipe ALL codes and Cards from the system

Change Admin Password

Step 1.

enter Admin password (**1234 + 1234**)

Step 2.setting the length

press * then **3** the yellow light will now flash then input new password you will then hear a beep sound

IE. for example if you press : **4321** this is now your new password & to access the system you will now enter

4321 + 4321.

Press # to exit

Reset To Factory Default

Step 1.

enter Admin password (**1234 + 1234**)

Step 2.Reset to default

press * then **8** the yellow light will now flash then press **9** twice you will then hear a beep sound to let you know factory default has been restored.

Press # to exit.

WARNING

Restoring factory default will wipe ALL codes and Cards from the system