QUICK START GUIDE



STEP 1



Remove battery compartment cover

STEP 2



Insert batteries and set the cover back

STEP 3



Attach the hose to the Smoking Gun

STEP 4



Attach the bubble nozzle to the hose

STEP 5



Put the mesh set into the burn chamber and add no more than 2 pinches of wood chips

NOTE

The amount of smoke inside bubble affects the lifetime of the bubble: the more smoke - the longer the bubble will last.

STEP 6



Power on the Smoking Gun at High speed (II)

STEP 7



Light up wood chips

STEP 8



Switch power button to Low speed (I)

STEP 9



Dip the bubble nozzle into the Bubble Mixture (sold separately)

NOTE

You can adjust the bubble size using the ON button or by slightly squeezing the hose and limiting the smoke supply.

SCAN ME



To order Bubble <u>Mixtu</u>re

STEP 10



NOTE

Do not touch the sides of the glass. Bubble may break.

Blow out a bubble with smoke

IMPORTANT! It is important to use a V-shaped glass with wide edges. Pour the drink into the glass so that there is 1/2 inch unfilled to the brim. First contact of the bubble should be with a liquid in the center of the glass. If the first touch will be with corners of the glass bubble may break. Also it should be noted that if there is ice in your glass, then a bubble will not be formed due to the surface not being flat.

IMPORTANT! It is important to clean the gun after use. Cleaning methods and steps can be found in the manual.



SCAN ME

for quick start guide and assistance!