

slackers® SKYBOARD UNDERGLOW

AGES 6+
WEIGHT LIMIT: 175 lb (79 kg)
SLA.546L - LED Skyboard

CONTENTS:

- (1) LED Sky Board frame
- (3) AAA Batteries
- (1) Bounce ball
- (1) Hand pump



BE SAFE! - ALWAYS FOLLOW THESE RULES

THIS PRODUCT IS INTENDED FOR USE BY CHILDREN 6+

- Maximum weight 175 lb (79 kg)
- Adult supervision is required at all times.
- Always make sure your Bounce Ball is completely inflated-Use and check the Inflation Guide Regularly. **Do not over inflate!**
- Recommend to use on grass! Can be used on flat, smooth and dry surfaces if no grass is available (on carpet, sidewalks and driveways)
- Do not use on roads, bike paths or any areas that have vehicles, bicycles or other hazardous objects on.
- Clear area of any objects, rocks, sticks or debris.
- Sky Board should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.
- For indoor or outdoor use, and domestic use only. If used outdoors, use under a covered porch or other covering structure. Do not use in bad weather conditions, bring the product indoors.
- If worn or damaged parts are found, contact b4Adventure for replacement parts - DO NOT substitute with other, non-b4Adventure parts or failure resulting in injury may result.
- Use caution when first using the Sky Board.
- Make sure the area is clear of obstacles, people and pets.
- Intended for residential use only-not intended for commercial use

FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN SERIOUS INJURY!



WARNING! DO NOT OVER INFLATE BALL -

Use a manual air pump to inflate. DO NOT use a compressor! Over inflation may occur, causing the ball to burst and could cause serious injury. Use the inflation guide every time you inflate the ball.



WARNING! ADULT SUPERVISION REQUIRED! SERIOUS INJURY OR DEATH MAY RESULT -

Always exercise extreme caution when using the slackline. Keep bystanders at least 10 ft. (3 m) away from the course to avoid collisions



WARNING! PROTECTIVE GEAR -

Always wear protective gear and clothing including a safety helmet, knee/elbow pads, gloves and proper athletic shoes if you are using the product on a hard surface.



WARNING! UV from direct sunlight can harm your board/ball over time. Keep out of direct sunlight when not in use.



ASSEMBLING THE SKY BOARD

- Remove all Sky Board parts from the box. Carefully inspect for any damage.
- **STEP 1** - Attach the inflation needle to your pump. Carefully insert the inflation needle halfway into the ball valve. Slowly pump the ball 5 times, this will help seal the needle for final inflation and partially inflate the bounce ball for correct positioning in the Sky Board.
- **STEP 2** - Place the partially inflated ball inside the board with the inflation ball valve on top of the board (Figure 1). Align the middle Rib section so that when inflated, it will be on the bottom side of the board (Figure 2 & 3). Take your Inflation guide and place it over the bottom ball. Using your manual air pump, fully insert your needle and pump the bounce ball until the bottom ball fits the curved section of your Inflation Guide (Figure 4). **IMPORTANT!** - Ball valve must face up, not down
- **STEP 3** - Using a small, phillips screwdriver, remove the battery access door and insert 3 x AAA (1.5V) batteries. To activate board, simply push the red button on the bottom of the board.
- **NOTE:** The lights are motion activated and will remain on as long as in use. To avoid accidental battery drain, simply press the button again to deactivate the lights.



Figure 1



Figure 2



Figure 3



Figure 4

- **NOTE:** Over time with regular use, your sky board will require frequent additional inflation. Keep your inflation guide card and hand pump for future use.

Battery Warning

- non-rechargeable batteries are not to be recharged;
- rechargeable batteries are only to be charged under adult supervision;
- rechargeable batteries are to be removed from the toy before being charged;
- exhausted batteries are to be removed from the toy;
- the supply terminals are not to be short-circuited.
- batteries are to be inserted with the correct polarity;



USING THE SKY BOARD

- Grip both your hand grips, then carefully place feet onto the board. **USE CAUTION!** - start balancing and start with small bounces.
- **TIP:** At first, to make it easier to balance you can let a small amount of air out of the ball (allow a one to a two second burst of air out the ball with your inflation needle).
- As you get better, use caution and common sense when jumping/bouncing on your Sky Board.
- Don't attempt tricks that are dangerous or beyond your ability.

MAINTENANCE

Before each use:

- Clean your board. Do not use any harsh chemicals! Clean with a towel and warm water only! Dry completely before using. Remove batteries during storage.
- Use your inflation guide to check air pressure of the ball.
- Inspect for any damage on the board or ball (cracking/splitting), fraying on the bungee cords, or ball not inflating properly. **DO NOT USE IF DAMAGE IS FOUND.**
- Do not modify or put anything on your sky board that alters its action or operation.

PRODUCT DISCLAIMER & NOTICE

Observing the following statements and warnings reduces the likelihood of serious or fatal injury:

- Obtain training and instruction regarding proper use and safety precautions to always practice.
- Ensure proper & adequate supervision and instruction (this include the continuous use of appropriate safety procedures & equipment) for themselves and others using the equipment;
- Check that all equipment is properly maintained, in good working order and inspected for damage or wear prior to each use.
- You assume all risks and accept full responsibility for any injury (including death) or damages that may occur from its use.

All the information provided by b4Adventure either printed, electronic or other, is not to be considered professional instruction or advice. Users of this equipment are encouraged to seek professional instruction regarding specific questions about usage, location, installation or other aspects of product use. Please save these instructions for future reference.

Owners shall be responsible for maintaining the legibility of the warning labels.

PLEASE DO NOT RETURN YOUR PRODUCT TO THE STORE!

WE ARE HERE TO HELP YOU!

IF YOU HAVE ANY QUESTIONS ABOUT YOUR PRODUCT

PLEASE CONTACT US:

1-844-834-4334 • INFO@B4ADVENTURE.COM