

slackers® BACHAR LADDER

SLA.833
AGES 5+
WEIGHT LIMIT:
250 lb (113 kg)

KIT CONTAINS:

- (1) Bachar Ladder
- (3) Delta Clip



BE SAFE! - ALWAYS FOLLOW THESE RULES

- THIS PRODUCT IS INTENDED FOR USE BY CHILDREN 5+
- Maximum user weight is 250 lb (113 kg).
- Every time you use the Rickety Bridge, make sure everything is installed correctly and check for wear before using.
- If worn or damaged parts are found, contact b4Adventure for replacement parts - Do not substitute with other, non-b4 Adventure parts or failure resulting in injury could result.
- One person only at a time. Wear close fitting, athletic style clothing, NO scarves or other loose clothing that could become entangled.
- Never use the line when it is wet or if there is rain or lightning in the area.
- When the assembled rope is installed according to the instructions, the minimum clearance between the ground and the underside/end of the ladder shall be 8 in (20 cm) and no more than 12 in (30 cm)
- When measured from the ground, there shall be no part of the activity toy where the child is able to climb, sit or stand above a height of 100 in (254 cm)

**FAILURE TO FOLLOW THESE INSTRUCTIONS
COULD RESULT IN SERIOUS INJURY!**



WARNING!

ONLY FOR OUTDOOR USE



WARNING!

ONLY FOR DOMESTIC USE



WARNING! ADULT SUPERVISION REQUIRED! SERIOUS INJURY OR DEATH MAY RESULT - Always exercise extreme caution when using the ladder. Keep bystanders at least 10 ft (3 m) away from the course to avoid collisions



WARNING! UN-HEALTHY TREE HAZARD - Do not attach to or use a tree that is diseased, unhealthy, or damaged. it may fail, causing serious injury or death



 
 
WARNING! ADULT ASSEMBLY REQUIRED-

This product should be unpacked and assembled by an adult, including site and tree selection, as well as the secure and proper installation

slackers® BACHAR LADDER


INSTALLING THE BACHAR LADDER TO THE NINJALINE

- Your Ninjaline has multiple pockets for attaching a variety of obstacles. Your Bachar ladder will need 1 pocket
- Attach the Delta to the pocket on the line where the end of the ladder can wrap around the base of the tree.

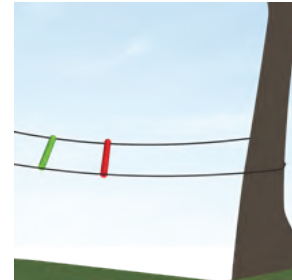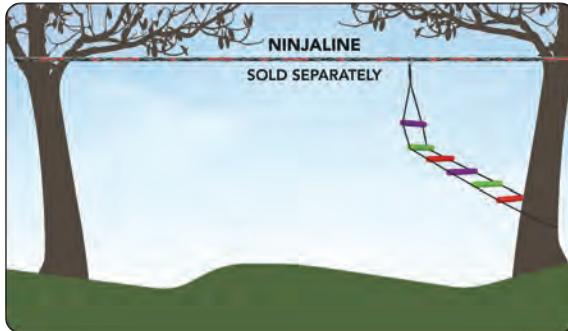


INSTALLING THE BACHAR LADDER TO A TREE

 - You can also install the Bachar ladder to a tree. Install the short end to the top of the tree branch by wrapping around and using the included carabiner to hook both loops.
- The longer end wraps around the base of the opposing tree and should be secured by the included delta clips
- We recommend using our Tree Hanger (sold separately) to attach the top of the bachar ladder to the tree

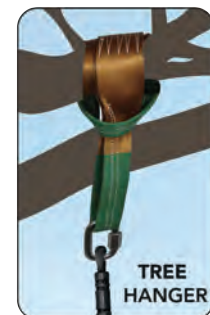

ADJUSTING THE BACHAR LADDER

 - Adjust the bachar tubes by loosening the ropes and sliding up and down.
- Place the tubes closer together for younger users and space them out for an additional challenge.

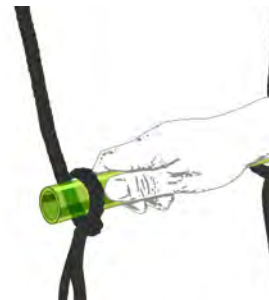



5. MAINTENANCE OF YOUR BACHAR LADDER

At the beginning of each play season:

- Check all metal parts for rust. If found, sand and repaint using a non-lead based paint meeting the requirements of 16 CFR 1303.
- Check all moving parts including bars, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed.
- Check the rope and bars for deterioration, cracking or fraying. If found, DO NOT USE and dispose of immediately.
- X.3.1.1 Loose-Fill Materials: X.3.1.1 Maintain a minimum depth of 9 in (23 cm) of loose-fill materials such as wood mulch/chips, engineered wood fiber (EWF), or shredded/recycled rubber mulch for equipment up to 8 ft (2.4 m) high; and 9 in (23 cm) of sand or pea gravel for equipment up to 5 ft (1.5 m) high. NOTE: An initial fill level of 12 in (30 cm) will compress to about a 9- inch depth of surfacing over time. The surfacing will also compact, displace, and settle, and should be periodically refilled to maintain a least a 9 in (23 cm) depth.

Once a month during play season:

- Check all moving parts including bars, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed.
- At the end of each play season or when the temperature drops below 32° F (0° C) take in your equipment and store indoors in cool dry location.
- X.3.1.1 Loose-Fill Materials: X.3.1.1 Maintain a minimum depth of 9 in (23 cm) of loose-fill materials such as wood mulch/chips, engineered wood fiber (EWF), or shredded/recycled rubber mulch for equipment up to 8 ft (2.4 m) high; and 9 in (23 cm) of sand or pea gravel for equipment up to 5 ft (1.5 m) high. NOTE: An initial fill level of 12 in (30 cm) will compress to about a 9- inch depth of surfacing over time. The surfacing will also compact, displace, and settle, and should be periodically refilled to maintain a least a 9 in (23 cm) depth.

BE SAFE! - ALWAYS FOLLOW THESE RULES - OBSERVING THE FOLLOWING STATEMENTS AND WARNINGS REDUCES THE LIKELIHOOD OF SERIOUS OR FATAL INJURY

- There shall be a use zone for each play structure which shall consist of obstacle-free surfacing that conforms to Specification F1292 appropriate for the fall height of the equipment.
- The minimum use zone for play equipment shall extend no less than 72 in (183 cm) from all sides of the play structure.
- Place the equipment on level ground, not less than 6 ft (1.8 m) from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.
- Do not install home playground equipment over concrete, asphalt, packed earth, grass, carpet, or any other hard surface. A fall onto a hard surface can result in serious injury or death to the equipment user
- Do not wear inappropriate items, such as but not limited to, loose fitting clothing, hood and neck drawstrings, scarves, cord-connected items, capes and ponchos. These items can cause death by strangulation
- Do not to attach items to the playground equipment that are not specifically designed for use with the equipment, such as, but not limited to, jump ropes, clothesline, pet leashes, cables and chain as they may cause a strangulation hazard.
- Remove their bike or other sports helmet before playing on the playground equipment.
- Dress children with well fitting and full foot enclosing footwear. Examples of inappropriate footwear are clogs, flip flops, and sandals.

slackers BACHAR LADDER

PRODUCT DISCLAIMER & NOTICE

Any person purchasing, installing or using equipment from B4Adventure must:

- Obtain proper training and instruction regarding its proper use and safety precautions to always practice.
- Ensure proper & adequate supervision and instruction (this include the continuous use of appropriate safety procedures & equipment) for themselves and others using the equipment;
- Check that all equipment is properly maintained, in good working order and inspected for damage or wear prior to each use, and;
- You assume all risks and accept full responsibility for any injury (including death) or damages that may occur from its use.
- Warranty: one year on all parts and workmanship. Normal wear from use not covered.

All the information provided by b4Adventure either printed, electronic or other, is not to be considered professional instruction or advice. Users of this equipment are encouraged to seek professional instruction regarding specific questions about usage, location and installation for future reference.

**Owners shall be responsible for maintaining the legibility of the warning labels.
Product conforms to ASTM F1148, consumer safety performance specification for Home Playground Equipment and EN71-8 European standards
for outdoor play equipment**

Other exciting NINJALINE™ Products available from b4Adventure
(sold seperately)

