



ACR Alternator front mount change


Undo 2 x screws for plastic cover

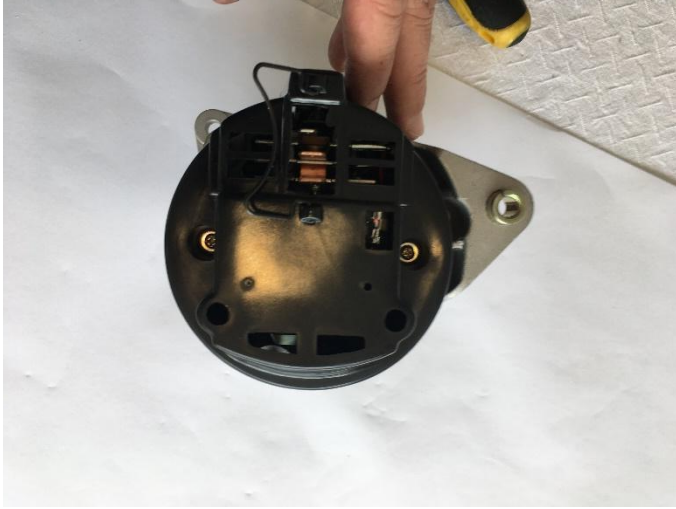

Undo 3 x screws that connect front and back plates

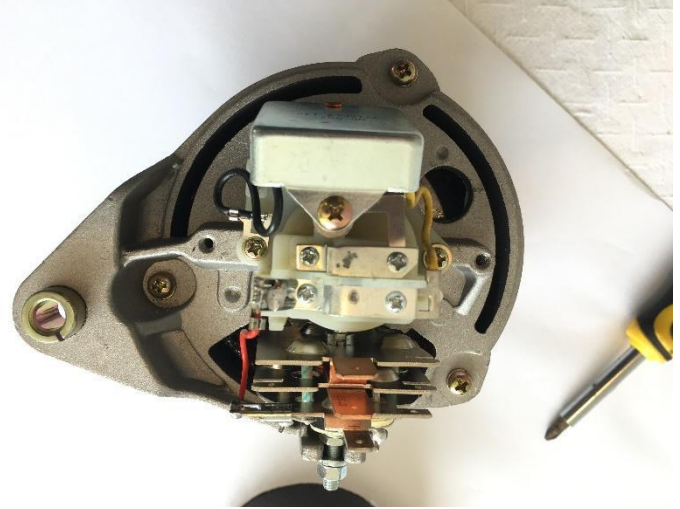

Once screws are removed from front plate, rotate front plate until opposite mounting point lines up with rear mount.

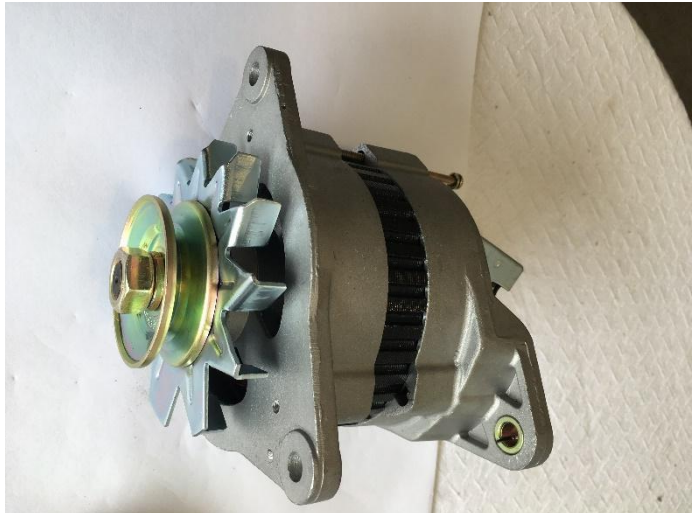

Once done replace bolts and tighten, replace plastic cover and screws.