

GloFX

**HYPNO**

LEVITATION WAND

USER GUIDE



**Disclaimer:** Under 18 - Adult Supervision Required. The GloFX Levitation Wand may contain small parts that could pose a choking hazard. This product can be dangerous if used improperly. It is important to use common sense at all times. Read all warnings before use.

1.844.GO.GLOFX (U.S.) • +1.850.559.6404 (International) • Support@GloFX.com • GloFX.com

## FEATURES

- 100+ BEAUTIFULLY ANIMATED & SOLID COLOR MODES
- 27 SUPER BRIGHT LEDS DISPLAYED ON ALTERNATING SIDES
- EASILY ADJUSTABLE SPEED & BRIGHTNESS SETTINGS
- ADJUSTABLE SINGLE LOOP HANDLE WITH SWIVEL BEARING
- POCKET-SIZED REMOTE CONTROL WITH GLOFX LANYARD
- USB RECHARGEABLE & MICRO USB CORD INCLUDED

## WAND CARE

- AVOID BENDING AND DO NOT HIT ANYTHING WITH THE WAND.
- TURN THE WAND OFF WITH THE MASTER ON/OFF BUTTON (LOCATED AT THE TOP OF THE WAND) WHEN NOT IN USE. THIS WILL EXTEND THE LIFE OF THE BATTERY.
- STORE THE WAND IN A COOL, DRY PLACE WHEN NOT IN USE.

### Warranty

Your Levitation Wand is covered against any defects in the manufacturing process or delivery process. If your Levitation Wand is found to have any of the covered defects, please contact our customer support team. Visit [GloFX.com](http://GloFX.com) or scan the QR code for full details.

For Warranty questions or to submit a claim, please contact us at [Support@GloFX.com](mailto:Support@GloFX.com)



# GETTING STARTED



## STEP 1: MASTER ON & OFF

PRESS THE WAND'S TOP END CAP TO ACTIVATE THE MASTER ON/OFF BUTTON. A SMALL LIGHT WILL FLASH GREEN TO INDICATE THE WAND IS TURNED ON. NOW THE REMOTE CAN BE USED WITH THE WAND. BE SURE TO TURN THE WAND OFF VIA THE MASTER ON/OFF BUTTON WHEN NOT IN USE.

## STEP 2: FINGER LOOP HANDLE

SLIDE THE FINGER LOOP AROUND YOUR INDEX OR MIDDLE FINGER AND PULL UP ON THE O-RING TO TIGHTEN THE HANDLE. START WITH THE WAND HANGING VERTICALLY AND THE CLOFX LOGO RIGHT SIDE UP.



## STEP 3: WEIGHT & BALANCE

TO ADJUST THE BALANCE OR WEIGHT OF THE WAND, SIMPLY REMOVE THE END CAPS ON EITHER SIDE. PLACE THE WASHER ON THE END OF THE WAND, AND REPLACE THE END CAP.



## STEP 4: ENJOY & RECHARGE

SPIN THE WAND TO CREATE MAGIC AND HYPNOTIZE THE CROWD!  
TO RECHARGE THE WAND, REMOVE THE BOTTOM END CAP TO LOCATE THE CHARGING PORT. THE WAND IS FULLY CHARGED WHEN THE RED LIGHT TURNS OFF.




# REMOTE GUIDE

**On** - ONCE THE WAND'S MASTER BUTTON IS ACTIVATED, PRESS THE **ON** BUTTON TO PAUSE A MODE OR EXIT "SLEEP" MODE.

**AUTO** - PRESS THE **AUTO** BUTTON TO AUTOMATICALLY CYCLE THROUGH ALL 100+ ANIMATED & SOLID COLOR MODES.

**Off** - PRESS THE **OFF** BUTTON TO PUT THE WAND IN "SLEEP" MODE. THIS MODE WILL STILL USE THE BATTERY, SO BE SURE TO USE THE WAND'S MASTER BUTTON TO FULLY TURN OFF THE WAND.

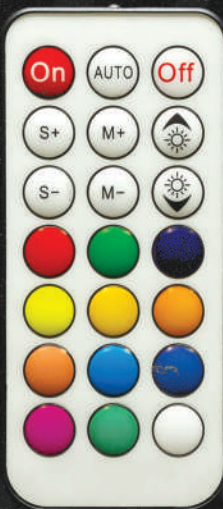

**S+** **S-** - USE THE **SPEED UP & DOWN** BUTTONS TO ADJUST THE SPEED ON ANIMATED MODES.

**M+** **M-** - USE THE **MODE UP & DOWN** BUTTONS TO MANUALLY SCROLL THROUGH ALL 100+ ANIMATED & SOLID COLOR MODES.

**Brightness Up** **Brightness Down** - USE THE **BRIGHTNESS UP & DOWN** BUTTONS TO ADJUST THE WAND'S BRIGHTNESS ON SOLID COLOR MODES ONLY.

**SOLID COLORS** - PRESS A **SOLID COLOR** BUTTON TO MAKE THE ENTIRE WAND ONE COLOR.