




# WINDSABER

Welcome to the SlingFin family! We greatly appreciate your support and are excited that you chose a SlingFin tent as your new adventure tool.


To begin, please familiarize yourself with the components included with the product and feel free to contact us if you have any questions or comments.

**Package Includes:** Tent Body, Flysheet, WebTruss, 2 body poles, arched pole, bow pole, 12 J-stakes, 8 extra guy lines + clam cleats, pole repair sleeve, accessory sack, pole sack, and tent sack.

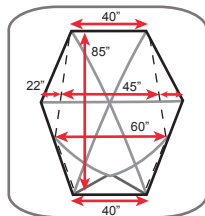

**Step 1:** Find and layout the mesh tent body on a clear and level surface. Stake out the cord loops at the corners of the tent body (A, B, C, D).

**Step 2:** Attach the WebTruss to the tent body. Use vertical reflective tabs to help match sides. Clip to inner o-ring at corners (A, B, C, D).

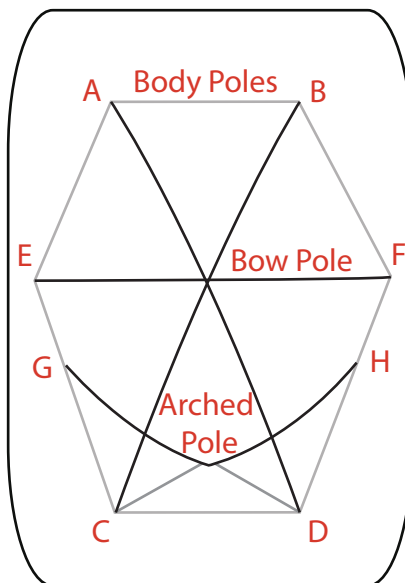

**Step 3:** Extend the two(2) body poles and the bow pole. Make sure that each tube section is fully seated/engaged in its adjacent section. *\*Do not allow tube sections to snap into each other. This can damage the ends of the tube sections.*

**Step 4:** Feed each body pole into WebTruss (A-D, B-C). Note that openings are marked with reflective tabs. Place the ends of the poles (pole tips) into the appropriate grommet tabs. Pass the bow pole through the webbing at the top of the WebTruss. Insert ends of bow pole into the fabric sleeves.




*\*step 4 pictured above*

**Step 5:** Pass the ends of the arched pole through the webbing on the legs of the WebTruss. Place ends of arched pole into grommet tabs (G-H). Connect the tent body to the WebTruss via the buckles and clips attached to the top of the tent body.

**Step 6:** Find and layout the flysheet over the tent. Connect the RidgeClips at each corner of the flysheet to the outside o-ring of the tent body (A, B, C, D).

**Step 7:** Stake out each flysheet vestibule (E, F) using the attached guy line with clam cleat. The clam cleat will allow you to easily adjust the length and tension of the vestibule.

**Step 8:** Connect the underside of flysheet to the WebTruss using the o-ring and door tie connectors along the underside of the flysheet.

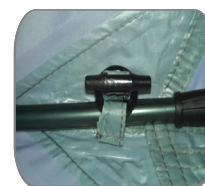

**Step 9:** Note: the WindSaber can also be set up without the WebTruss by switching the buckles with the Twist Clips (in accessory sack).

