

Dry Suction

STEP ONE - FILTERS

DRY FILTERS

FILTRATION LEVEL	FILTER	USED FOR	FITS ONTO
min	 Cloth Filter	Dry rubble & large dust particles	 Power Head
	 Cartridge Filter	Dry coarse & fine dust particles	
max	 HEPA Filter	Dry microscopic dust & allergens	

Vacmaster

Installing:

1. Unclip and remove your vacuum's Power Head. Place in upside down position.

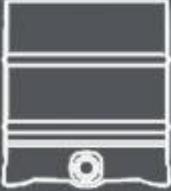
2 (a). If using a Cloth Filter, slide this over the filter cage on the Power Head. Go to STEP THREE - DUST BAGS.

2 (b). If using a Cartridge/HEPA Filter, unlock and remove the retainer lid from the bottom of the filter by turning the nut anti-clockwise. Slide the top of the filter over the filter cage until it touches the Power Head. **Lock the retainer lid back into place.**

N.B. You must always have at least one filter fitted to prevent dust internally clogging the machine.

STEP TWO - PRE-FILTERS

PRE-FILTERS (optional)

	PRE-FILTER	USED FOR	FITS
FILTRATION LEVEL min max	 Washable Pre-filter	Additional coarse particle filtration & protecting cartridge filter	 Cartridge Filter
	 Easy Fit Pre-filter	Additional fine particle filtration & protecting cartridge filter	 Tank



Pre-filters provide an additional level of filtration and protection by capturing larger dust particles from the airflow before they reach the machine's cartridge filter.

Installing:

Washable Pre-filter

1. Loosen the drawstring on the Pre-filter and slide over the top of the fitted Cartridge Filter.
2. Tighten the drawstring.

Easy Fit Pre-filter

1. Insert the Easy Fit Pre-filter directly into the vacuum cleaner's tank. *N.B. Fit dust bag first if you are using one.*

STEP THREE - DUST BAGS



All Vacmaster vacuum cleaners can be used without dust bags. However, dust bags offer a convenient and hygienic method of waste disposal.

Installing:

1. Fit Dust Bag flange onto the inlet stub located inside the Vacuum Cleaner tank.
2. Replace Power Head and securely clip into place.

Wet Suction

STEP ONE - FILTER

WET FILTER

FILTER	USED FOR	FITS ONTO
 Foam Sleeve Filter	Extracting liquids directly into tank	 Power Head



Installing:

1. Unclip and remove your vacuum's Power Head and place in upside down position.
 2. Remove Dust Bag (if using) from the container/tank.
 3. Remove dry filter(s) from the filter cage. Remember to unlock retainer lid before removing Cartridge Filter.
 4. Slide Foam Sleeve Filter down over the filter cage, making sure the whole cage is covered.
 5. Replace Power Head and securely clip into place.
- N.B. Allow Foam Sleeve Filter to air dry before installing and using again.