


## **IBEA**

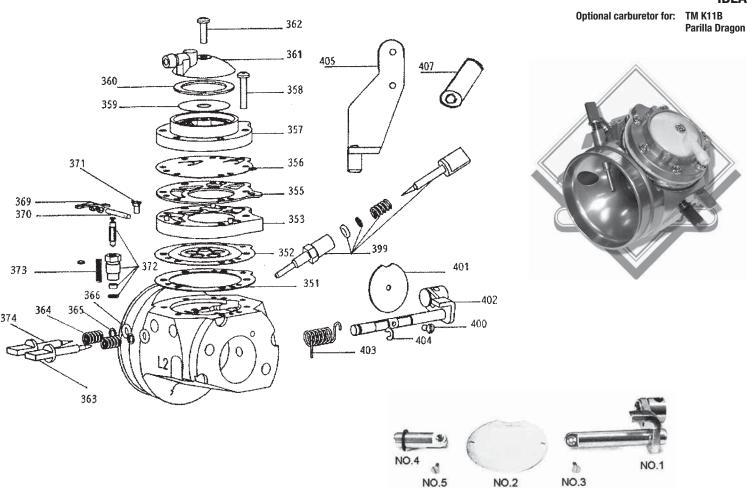

## **SPECIAL SHAFT - Assembly:**

First No.1 next to No.2 Shutter attach with No.3 Screw with a little bit of Loctite. Draw in the screw only a little bit. Next, attach No.4 to No.2 Shutter with No.5 Screw with a little bit of Loctite and draw in strong. Now draw in No.3 Screw strong.

FIG	PART NUMBER	DESCRIPTION
351	351	Diaphragm Gasket
352	352	Diaphragm
353	353	Diaphragm Cover
355	355	Fuel Pump Gasket
356	356	Fuel Pump Diaphragm brown
356/1	356/1	Fuel Pump Diaphragm transparent
357	357	Fuel Pump Body
358	358	Fuel Pump Screw
359	359	Fuel Strainer Screen
360	360	Fuel Strainer Cover Gasket
361	361	Fuel Strainer Cover
362	362	Fuel Strainer Cover Ret. Screw
363	363	Idle Mixture Screw L.
364	364	Idle Mixture Screw Spring
365	365	Idle Mixture Screw Washer
366	366	Idle Mixture Screw Packing
369	369	Inlet Control Lever

PART NUMBER	DESCRIPTION	
370	Inlet Control Lever Fulcrum	
371	Inlet Control Lever Screw	
372	Inlet Needle Seat & Gasket	
372/1	Inlet Needle only	
372/2	Rubber for Inlet Needle Seat	
372/3	Cupper Washer for Needle Seat	
373	Inlet Tension Spring 5/6/6,5/7 gr.	
374	High Speed Mixture Screw H	
400	Screw for Butterfly	
401	Shutter L6 / L9	
402	Shaft	
402/1	Special shaft with shutter L6/L9	
402/3	Special shaft with shutter L4	
403	Spring for Shaft	
404	Shaft Clip	
406	Support for Cable L4 / L6 /L9	
407	Special nut M6	
408	Kit Membrane	
409	Kit complete	
Special Shaft Assembly		
402/1	IBEA Special Shaft Assembly	
	370 371 372 372/1 372/2 372/2 372/3 373 374 400 401 402 402/1 402/3 403 404 406 407 408 409  Shaft Assembly	