

TRAIL RIDGE 4, 6, and 8



Trail Ridge 6 pictured

In order to familiarize yourself with your new tent, we recommend you "test pitch" before your first camping trip. For additional information please visit www.kelty.com.

Package Includes: Tent carry bag, tent body, tent fly, two main pole lines, ridge pole line, footprint, gear loft, guy line cord, and tent stakes.

1



On an even piece of ground lay out tent body and stake corners. Assemble poles, making sure all pole sections are fully connected at joints. Slide main (long) poles through pole sleeves, be sure the green pole sections meet green stake loops. Set green ridge pole aside for now.

2



Insert pole tips into the Kelty Connect pole connector at back corners, flex pole to stand up and insert pole tips into pole connectors at front corners. Be sure to lift tent body as well as pole.



Kelty Connect pole connector and stake loop.



Kelty Hug clip



Kelty Connect ridge pole connector.



Kelty Connect fly attachment

3



Work your way around the tent to attach all Kelty Hug Clips to poles. Slide ridge pole through pole sleeve above door, and attach Kelty Connect ridge pole connector on each side.

4



Lay tent fly over tent matching colored cord on tent fly to colored stake loop on tent body. Attach guy out hook & loop pole warp on underside of fly to pole. Place bead of Kelty Connect fly attachment in the notch of pole connector, tighten cord as needed. Stake out vestibule doors and guy lines as needed.