

## SPVG activation

Thank you for your purchase of the SPVG Systems tools!  
There is 5 digit Serial Number on the label of the interface. This number is always used to communicate with our company.

---

## Minimal hardware requirements

Operating system Microsoft Windows 10/11

RAM memory RAM 4 GB.

Free disk space 50 GB.

Monitor with resolution 1920 x 1080 px.

Port USB 2.0

Bluetooth 2.0

---

## Installation

It's necessary to create an SPVG account. If you have not yet created an SPVG account, please click here for a new account [SPVG registration](#)  
This account will be used to sign into the SPVG program.

Link for download SPVG program: [spvgsystems.com/download](https://spvgsystems.com/download)  
Open the downloaded installation file stored on your computer and follow the instructions of the program.

Detailed installation instructions can be found [here](#)

---