

# Installation Instructions

## Adjustable Strike Bracket

### Adjustable Strike Bracket Components

- L-shaped bracket x 1
- 3" (76mm) U-bolt and plate x 1 and fixing nuts x 2
- 6 1/2" (165 mm) Gate Stop Bracket
- Adaptor for Non-ANSI Strikes x 1

### Installation Instructions

**Note** After installation of your weldable Gate Box and chosen Codelock, familiarise yourself with the installation instructions below before installing the Adjustable Strike Bracket.

1. For Codelocks CL200, CL400, CL500 CL4500 locks, install the Non-ANSI Strike adaptor along with the small strike plate supplied with the lock.

For Codelocks CL600 and CL5500 locks, attach the ANSI Strike plate supplied with the lock directly to the L-Shaped Bracket, using the self-tapping screws provided.

2. Position the L-shaped bracket on the inside of the gate post ensuring the strike plate aligns with the latchbolt. The L-Shaped bracket is adjustable to accommodate a gap of up to 2" (51mm).
3. When satisfied, secure the U-bolt with the plate and fixing nuts to the L-shaped bracket around the gate post. The Gate Stop Bracket can be added and used as a stop, ensuring gate does not pass-through strike plate mounted on post.
4. From the inside, open and close the gate to ensure it is closing properly in alignment with the strike bracket.

**DO NOT close the gate from the outside until you are sure that the lock's code works and the installation is operating correctly.**

All Programming & Operating Instructions and Installation Instructions are available to view on our support site: [www.codelockssupport.com](http://www.codelockssupport.com)

**Codelocks Ltd. UK**  
sales@codelocks.com  
www.codelocks.com

Helpline, service & spares  
Freephone: 0800 393 405

Albury Way, Greenham  
Business Park, Newbury,  
Berkshire, RG19 6HW

**Codelocks EU BV**  
sales@codelocks.eu  
www.codelocks.eu

Helpline, service & spares  
Freephone: +44 (0) 1635 239645

Hofplein 20,  
Rotterdam,  
3032 AC Netherlands

**Codelocks Inc. US**  
sales@codelocks.us  
www.codelocks.us

Helpline, service & spares  
Toll free: 1.877.codelock

10532 Acacia St. Suite B10  
Rancho Cucamonga  
CA 91730, USA

**Codelocks (Australia) Pty. Ltd.**  
sales@codelocks.com.au  
www.codelocks.com.au

Helpline, service & spares  
Toll free: 1800 052 131

Unit 222/354 Eastern Valley Way  
Chatswood  
NSW, 2067

