

INSTRUCTIONS FOR INSTALLING SINGLE CYLINDER DEADBOLT

4. INSTALL EXTERIOR MECHANISM



TORQUE BLADE SHOULD BE HORIZONTALLY INSERT INTO LATCH CRANK

A. Press cylinder side flush against door making certain the torque blade is properly positioned in latch crank. Tapped holes in mounting plate of exterior cylinder should be lined up with latch holes. Key hole should be in down position.




INSTRUCTIONS FOR INSTALLING DOUBLE CYLINDER DEADLOCKS

7. INSTALL EXTERIOR CYLINDER



NOTE: This assembly is placed through latch first.


5. INSTALL INTERIOR MECHANISM

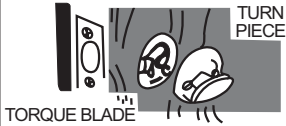

TORQUE BLADE

TURN PIECE


A. Slide thumb bar and interior rosette onto torque blade.

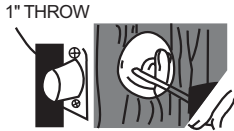

1" THROW

B. Insert machine screws through holes engaging holes in cylinder and tighten.

 8. INSTALL INTERIOR CYLINDER



INTERIOR TORQUE BLADE

NOTE: The interior torque blade is inserted into the exterior blade.

6. INSTALL STRIKE

A. Close door against door stop. Insert edge of template against the flat side of latch bolt, and mark template at edge of door jamb to locate strike opening. Move 3/8 toward door stop to locate center line for screws and 1" hole. This will insure the proper location of the strike.



JAMB

B. Chisel 1/16" deep for strike matching 1" hole in door jamb. Insert and tighten screws.



A. Press interior assembly flush against door making certain the torque blade is properly positioned in latch hole. Key hole should be in down position.



B. Insert (2) two screws through countersunk holes engaging holes in exterior cylinder and tighten.

