

(V.117050)

SAFE BOX

INSTRUCTION MANUAL

Attention:

- 1) Press "CLEAR(*)" to erase when code is wrong.
- 2) If code is wrongly input, "E-CODE" will display, you can re-enter the code after beep sound.
- 3) wrongly input code by 3 times, "HOLD-5" display ,the safe will freeze for 5 minutes.
- 4) In case of the master code is forgotten, please find reset button on the PCB, press it and hold, disconnect the power supply on the safe box and then reconnect, "RESET" display, master code restore to factory default code (000000).

Thank you for using our smart safe box ,be able to operate the safe box better , please read manual first.

1.Security alerts

Make it installed before using of the safe box.

After installation, we recommend you to modify the Master Code immediately. In addition, don't put mechanical key in the safe.

2.Main features

- 1) Solid, arc-welded heavy-gauge steel construction.
- 2) 18mm solid steel bolt for maximum security and durability.
- 3) Powered by 4 x AA 1.5V. Automatic low battery level alert.
- 4) Digital display screen.
- 5) Inside Carpet.
- 6) Pre-drilled mounting holes on back and bottom.
- 7) 3-6 digit guest code and 6 digit master code.
- 8) 5 minutes freeze system in case of wrong code for 3 times.
- 9) Override mechanical key.

3.Lock the safe

Input any 3-6 digit code, then press "LOCK(#)", "CLOSED" display, the safe is closed.

To press "clear(*)" before inputting digit code, the code is hidden on screen.

4.Open the safe

1) open by personal code

Input your 3~6 digit code then "OPENED" display, the safe is opened.

2) open by master code

Press "#" twice, "SUPER" display, then input Master code (factory default code is "000000"), "OPENED" display, the safe is opened.

3) Open by mechanical key (in case code forgot or failure of electronic system): insert key and turn it clockwise, the door is opened, while "opened" display, then enter new 3~6 digital code, press "LOCK(#)", the door closed, then take out the key.

DO NOT use the key to open the safe on a regular base.

5.change personal code

Input 3-6 digit new personal code, press "LOCK(#)"

6.To change the master code

1. Open the Safe.

2. Press "CLEAR(*)" key twice, the display will show "PROG".

3. When "PROG" disappears, press "000000" within 5 seconds, then press "LOCK(#)".

4. The Master Code (Factory Default Master Code is "000000", if input password does not match with existing password then "ERROR" will be displayed.)

5. Display will show "NEU", input 6 digit new Master Code & press "LOCK(#)".

6. The display will show "done" to indicate new Master Code has been set up successfully.

(Note: Always perform the password changing operations with the door open and verify it 3-4 times before closing.)

WARNING:

For security purposes, you should change the factory default code as soon as possible. We shall not be responsible for the theft caused by such negligence.