

# TEX BLE Upgrade Kits User Manual

<b>BLE Upgrade Kits function description</b>			
Button	Power button	Battery power ON/OFF	
	Pair button	Pair BT device	Press 3 sec
<b>Keyboard Fn shortcuts function description</b>			
Keyboard shortcuts	FN + Mute	Switch to BT device 1	Need to pair first
		Pair BT device 1	Press 3 sec
	FN + Vol-	Switch to BT device 2	Need to pair first
		Pair BT device 2	Press 3 sec
	FN + Vol+	Switch to BT device 3	Need to pair first
		Pair BT device 3	Press 3 sec
	FN + ESC	Switch to USB-HOST device * Need to connect Host-PC with USB cable	
	<b>Notification</b>		
<b>May cause BLE upgrade PCBA damage !!</b>			
Please make sure turn off battery power switch and remove USB cable power before you install BLE module to keyboard's SATA connector.			

BLE status	LED position	LED status
Standby	CapsLock LED	Slow blinking
Pairing		Fast blinking
Connect		Light for 1 sec
Low battery		Continuous blinking