

Jabees®

Love Life Love Music

Duobees


Quick Reference Guide

www.jabees.com

Jabees Duobees is the Bluetooth V5.0 Neckband Headphones featuring the dual-driver which provides a much wider range than most single driver headphones.

OVERVIEW of Duobees

- (1) Dual-driver
- (2) Magnetic Lock Earbuds
- (3) USB Charging Contact
- (4) LED Light
- (5) MF Button (Multifunction Button)
- (6) Volume Up/Next Song
- (7) Volume Down/Previous Song
- (8) Microphone
- (9) Battery

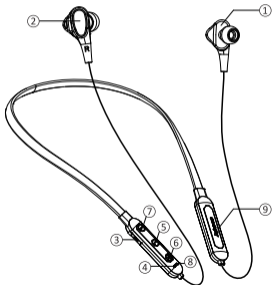

INTRODUCTION

Thank you for purchasing Jabees Duobees Bluetooth 5.0 Neckband Headphones. This manual will help you to accurately operate Duobees, but you should familiarize yourself with the Bluetooth function of your mobile phone or other devices before using Duobees.

CHARGING UP Duobees

1. Plug one end of the USB charging cable into the charging contact of Duobees, and put the other end into your computer or AC charger with USB port.
2. When charging begins, the LED indicator light turns on in red.
3. When the battery is fully charged, the LED indicator light turns on in blue.


WHEN THE BATTERY IS LOW

When you hear the voice prompt 'Battery Low', please charge your Duobees Bluetooth Neckband Headphones.

Battery meter on iOS devices and some Android smart phones.

IMPORTANT

- Charge Duobees before your first use.
- You should recharge Duobees if it has not been used for more than 12 months.
- Use only the included USB charging cable to charge Duobees.

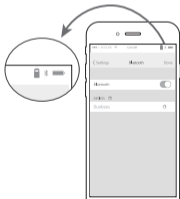



MULTIFUNCTION BUTTON

Power On/Off; Answer/End/Reject calls; Play/Pause Music; Redial; Factory Reset; Voice Assistant (Siri/Google Assistant).

TURNING Duobees ON/OFF

To turn on:

Press and hold the MF Button for 3 seconds. The LED light flashes in blue with a voice prompt 'Power On'. The headphones are now turned on.

To turn off:

Press and hold the MF Button for 5 seconds. The LED light flashes in red with a voice prompt 'Power Off'. The headphones are now turned off.

PAIRING Duobees WITH A MOBILE PHONE

1. After turning on the Duobees, the headphones will go into pairing mode automatically. Or you can manually put the headphones into pairing mode by pressing MF Button for 5 seconds until you see the LED lights flash in red and blue alternatively with a voice prompt 'Pairing'.
2. Activate the Bluetooth function on your mobile phone.
3. Set your phone to discover 'Duobees'.
4. If password or PIN-code is required, confirm with 0000.

PAIRING Duobees WITH THE SECOND MOBILE PHONE

Duobees supports multipoint technology, which means that it can be paired and connected with two Bluetooth-enabled mobile phones and use at the same time.

1. Pair and connect Duobees with the first mobile phone.
 2. Turn off the Bluetooth function of the first mobile phone and Duobees.
 3. Turn on Duobees and pair with the second mobile phone.
 4. Turn off Duobees.
 5. Turn on the Bluetooth function on first mobile phone.
 6. Turn on Duobees again and it will automatically connect to the second mobile phone, then manually connect the Duobees with the first mobile phone.
- (Some mobile phones can be connected automatically.)

MAKING CALLS

Once Duobees is successfully connected to your mobile phone, you can use it to make and receive calls.

1. Normal Dialing

Enter and dial the number on your mobile phone as you normally do. Once the call has been set up, the sound will be transmitted to your headphones automatically.

2. Redial

Double click MF Button to redial the last number you called.

ANSWERING/ENDING/REJECTING CALLS

When the headphones are turned on and connected to the mobile phone, and there is an incoming call, you will hear the tone.

- Press MF Button to answer the call.
- Press MF Button to end the call.
- Double press MF Button to reject the call.

PUT THE CALL ON HOLD

Press once the MF Button to put the current call on hold and accept the call waiting.

Press once the MF Button to switch between two calls.

Press and hold the MF Button for about 2 seconds to end the current call and answer another call waiting.

ADJUSTING THE VOLUME

Increase Volume: Press once the Volume Up Button

Decrease Volume: Press once the Volume Down Button

PLAYING/PAUSING MUSIC

Press the MF Button to play or pause music.

Long press Volume Up Button for 2 seconds to play next song.

Long press Volume Down Button for 2 seconds to play previous song.

VOICE ASSISTANT

Long press the MF Button for about 1 second to activate Siri or Google Assistant.

NOTE: 1. The Voice Assistant cannot be activated when making calls or listening to music.

2. You may encounter the problem to wake up Google Assistant from lock screen or when the screen is off. If so, please unlock the screen and try again.

MAGNETIC LOCK EARBUDS

Clasp two magnetic earbuds together when not in use.



CONNECTING WITH A PC

You can connect Duobees with a Bluetooth-enabled computer that supports headphones or handsfree profiles. Please refer to the user manual of your computer for setup instruction.

FACTORY RESET

When Duobees is turned off, long press the MF Button for about 8 seconds, the LED lights flash in blue and red at the same time with the tone. Now the factory reset is successful.

GUARANTEE

Jabees is a registered trademark of FreeTek International Co, Ltd. Other brands and product names are trademarks of their respective owners. Jabees warrants this product against all defects in material and workmanship for a period of twelve (12) months from the date of original purchase of the product. The conditions of this guarantee and the extent of responsibility of Jabees under this guarantee can be read in the Warranty Card.

WARNING

Permanent hearing loss may result from long-term exposure to sound at high volumes. Use as low a volume as possible and avoid prolonged use of the earphone at excessive levels. Please read the

safety guidelines below prior to using this earphone.

Prior to using this product follow these steps

1. Before putting on the earphone, turn the volume control to its lowest level.
2. Put the earphone on, and then slowly adjust the volume control to a comfortable level.

During the use of this product

1. Keep the volume at the lowest level as possible.
2. If increased volume is necessary, adjust the volume control slowly.
3. If you experience discomfort or ringing in your ears, immediately discontinue using the earphone. With continued use at high volume, your ears may become accustomed to the sound level, which may result in permanent damage to your hearing without any noticeable discomfort.

SAFETY INFORMATION

1. If you have a cardiac pacemaker or other electronic medical equipment, you should consult your physician before using this product.
2. This product contains small parts that may be hazardous to children. Keep out of the reach of children. The bags themselves or the many small parts they contain may cause choking if ingested.
3. Never attempt to disassemble the product yourself, or push other objects into this product, as this may cause a short circuit, which could lead to fire or electrical shock.
4. None of the components can be replaced or repaired by users. Only an authorized dealer or service center may open the product.
5. If any parts of your product require replacement for any reason, including normal wear and tear or breakage, please contact your dealer.
6. If the product overheats, has been dropped or damaged or has been submerged in a liquid, discontinue use.

REMEMBER

Drive safely, avoid distractions and follow local laws.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.