 




# MAGNETIC STANDING ELLIPTICAL WITH HANDLEBARS

## SF-E3988

### USER MANUAL

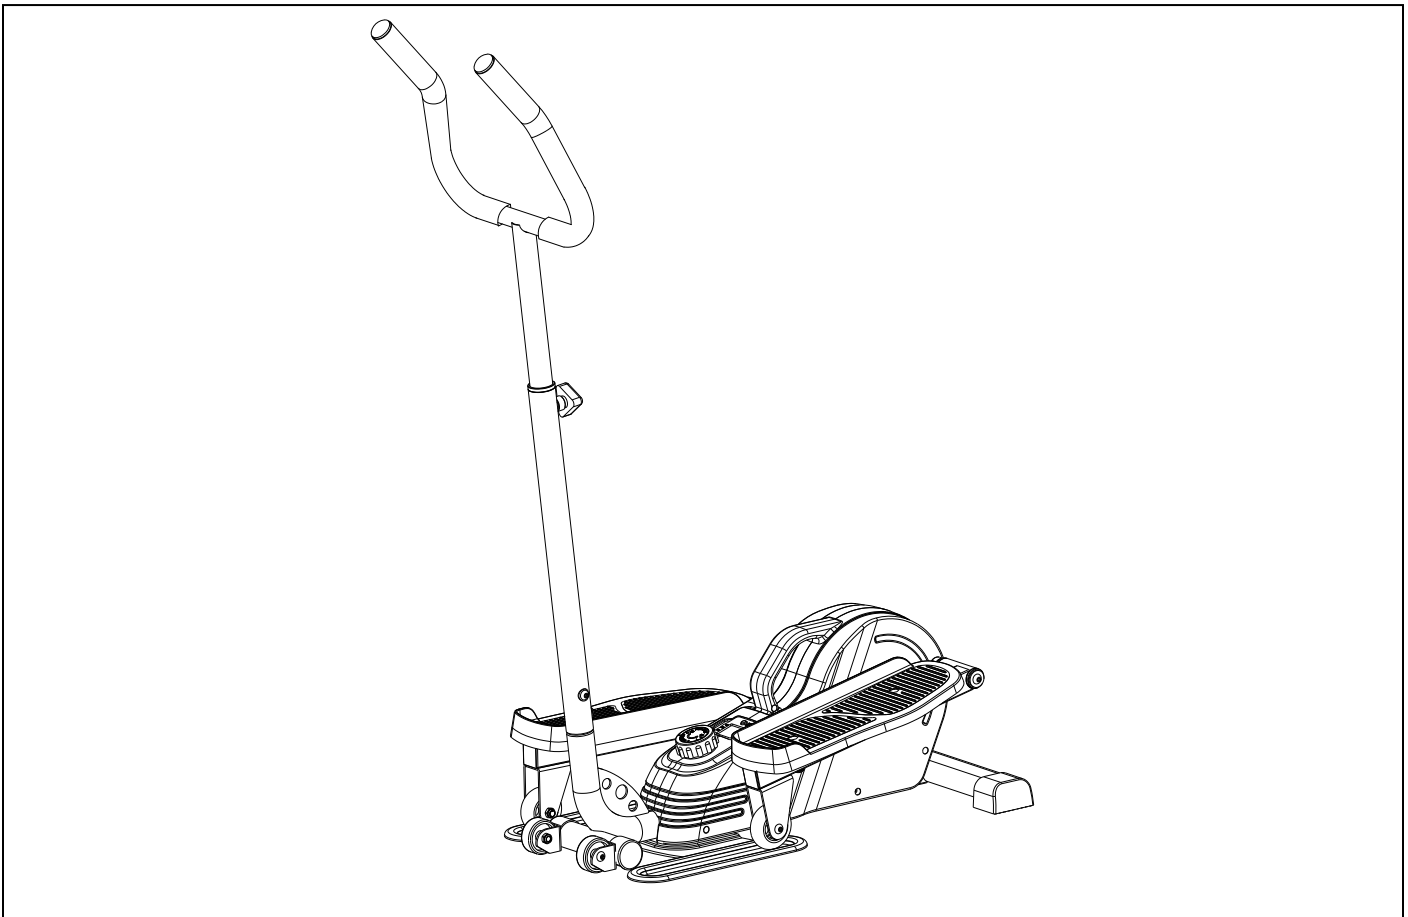

**IMPORTANT!** Please retain owner's manual for maintenance and adjustment instructions. Your satisfaction is very important to us, **PLEASE DO NOT RETURN UNTIL YOU HAVE CONTACTED US:** [support@sunnyhealthfitness.com](mailto:support@sunnyhealthfitness.com) or 1- 877 - 90SUNNY (877-907-8669).



[WWW.SUNNYHEALTHFITNESS.COM](http://WWW.SUNNYHEALTHFITNESS.COM)

 
# **IMPORTANT SAFETY INFORMATION**

We thank you for choosing our product. To ensure your safety and health, please use this equipment correctly. It is important to read this entire manual before assembling and using the equipment. Safe and effective use can only be achieved if the equipment is assembled, maintained, and used properly. It is your responsibility to ensure that all users of the equipment are informed of all warnings and precautions.


1. Before starting any exercise program, you should consult your physician to determine if you have any medical or physical conditions that could put your health and safety at risk or prevent you from using the equipment properly. Your physician's advice is essential if you are taking medication that affects your heart rate, blood pressure, or cholesterol level.
2. Be aware of your body's signals. Incorrect or excessive exercise can damage your health. Stop exercising if you experience any of the following symptoms: pain, tightness in your chest, irregular heartbeat, shortness of breath, lightheadedness, dizziness, or feelings of nausea. If you do experience any of these conditions, you should consult your physician before continuing with your exercise program.
3. Keep children and pets away from the equipment. The equipment is designed for adult use only.
4. Use the equipment on a solid, flat level surface with a protective cover for your floor or carpet. To ensure safety, the equipment should have at least 2 feet (60 CM) of free space all around it.
5. Ensure that all nuts and bolts are securely tightened before using the equipment. The safety of the equipment can only be maintained if it is regularly examined for damage and/or wear and tear.
6. Always use the equipment as indicated. If you find any defective components while assembling or checking the equipment, or if you hear any unusual noises coming from the equipment during exercise, discontinue use of the equipment immediately and do not use until the problem has been rectified.
7. Wear suitable clothing while using the equipment. Avoid wearing loose clothing that may become entangled in the equipment.
8. Do not place fingers or objects into the moving parts of the equipment.
9. The maximum weight capacity of this unit is 220 pounds (100KG)
10. To avoid bodily injury and/or damage to the product or property, proper lifting and moving are required.
11. Your product is intended for use in cool and dry conditions. You should avoid storage in extreme cold, hot or damp areas as this may lead to corrosion and other related problems.
12. This equipment is designed for indoor and home use only; it is not intended for commercial use.

**IMPORTANT NOTE:** Please remove the plastic tab from the meter before use!

# EXPLODED DIAGRAM

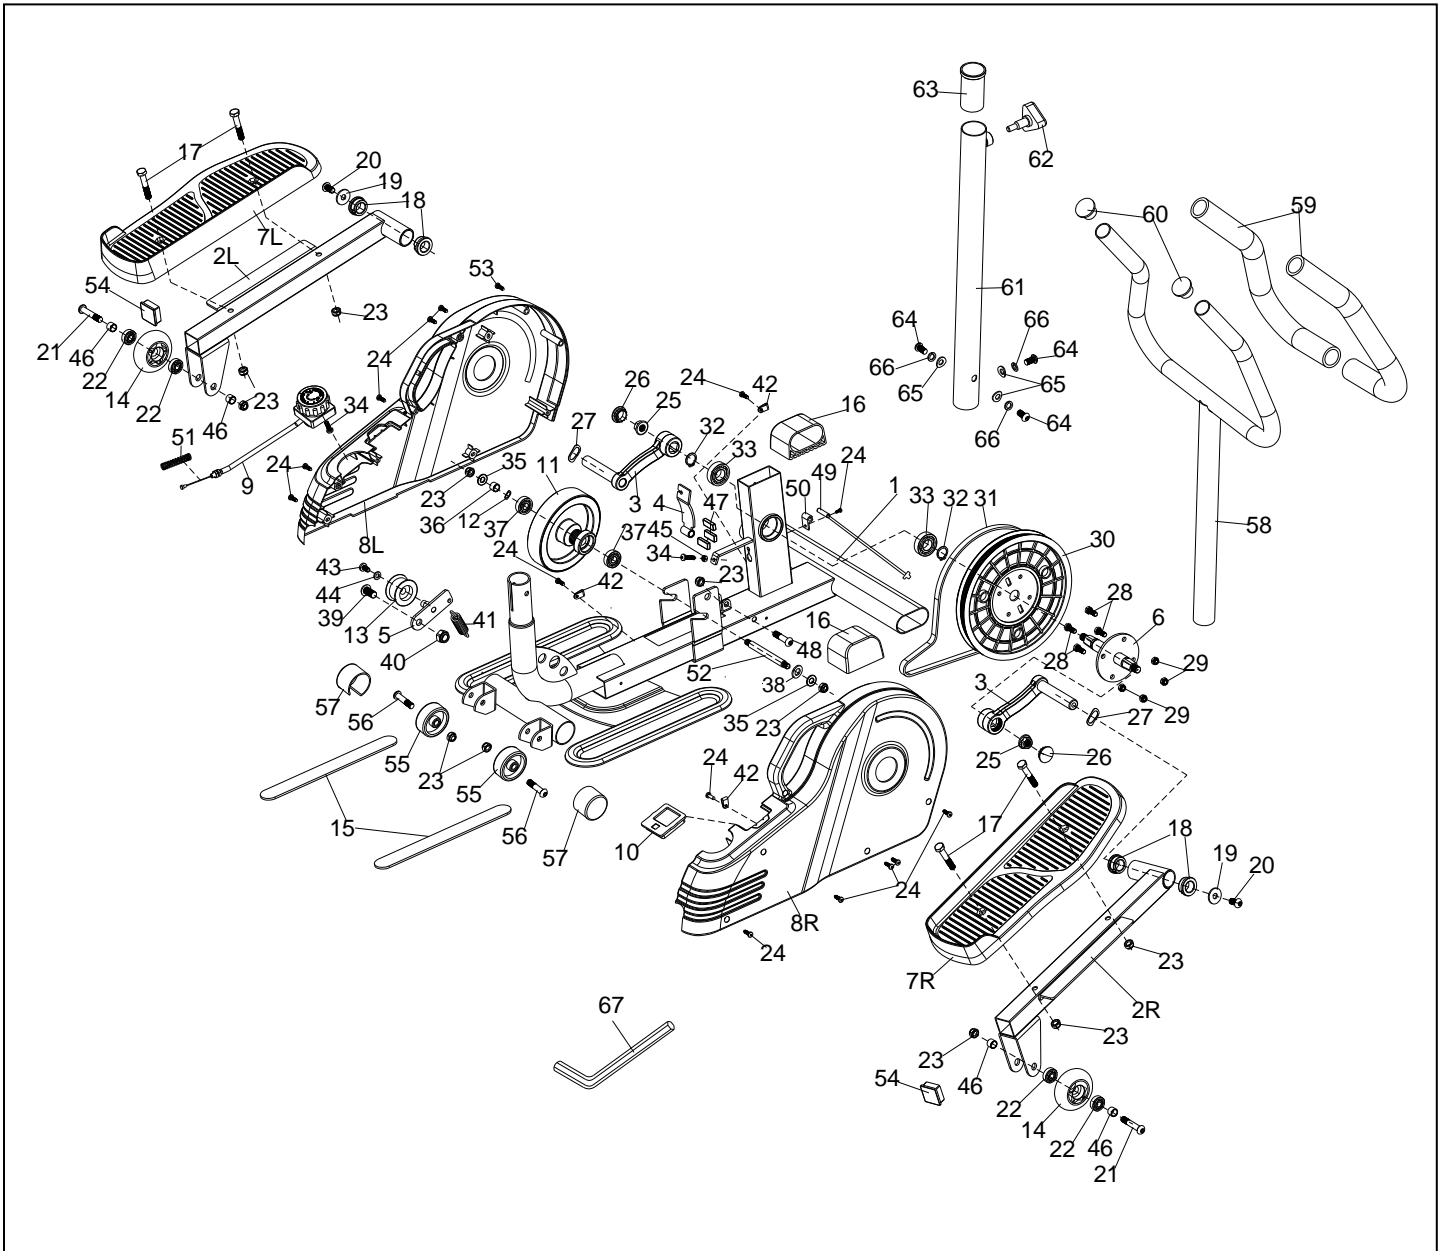

# HARDWARE PACKAGE

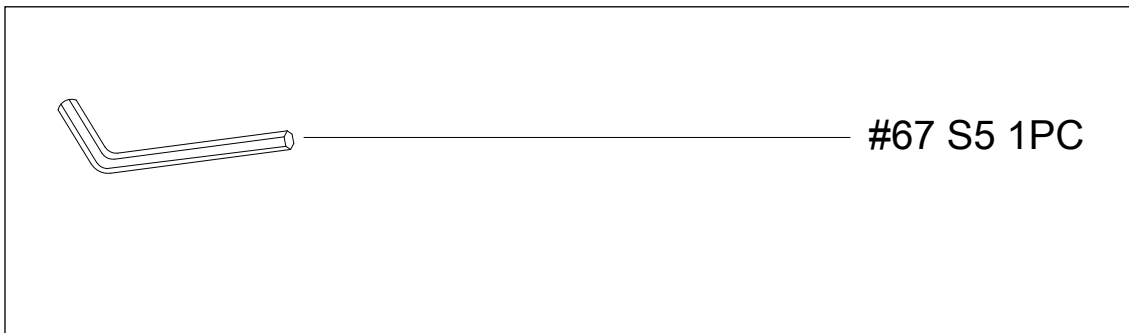 

# PARTS LIST

No.	Description	Spec.	Qty	No.	Description	Spec.	Qty
1	Main Frame		1	34	Screw	M5*15	2
2R	Pedal Frame (R)		1	35	Flat Washer	Φ8.2*Φ16*1.5	2
2L	Pedal Frame (L)		1	36	Sleeve		1
3	Crank		2	37	Bearing	6000	2
4	Magnetic Board		1	38	Washer	Φ10.2*Φ20*1.5	1
5	Idler Wheel Shaft		1	39	Screw	M10*20*12	1
6	Axle for Crank		1	40	Nylon Nut	M10	1
7L/R	Pedal		2	41	Spring		1
8L/R	Belt Cover		2	42	Wire Clip		3
9	Tension Control Knob		1	43	Screw	M6*12	1
10	Meter		1	44	Flat Washer	Φ6.4*Φ12*1.2	1
11	Inertial Wheel		1	45	Nut	M5	1
12	Wave Washer	Φ10.2*Φ15*0.2	1	46	Sleeve		4
13	Idler Wheel		1	47	Magnet		3
14	Slide Wheel		2	48	Bolt	M8*35*15	1
15	EVA Non-slip Pad		2	49	Inductor		1
16	End Cap		2	50	Inductor Seat		1
17	Bolt	M8*45*15	4	51	Spring		1
18	Alloy Wrap		4	52	Spindle		1
19	Flat Washer	Φ8.2*Φ25*1.5	2	53	Screw	ST3.5*15	1
20	Screw	M8*16	2	54	End Cap		2
21	Hex Bolt	M8*45*15	2	55	Transportation Wheel		2
22	Bearing		4	56	Bolt	M8*35*15	2
23	Nylon Nut	M8	11	57	End Cap		2
24	Screw	ST4.2*15	14	58	Handlebar		1
25	Flange Nut	M10	2	59	Foam Grip		2
26	End Cap		2	60	End Cap		2
27	Wave Washer	Φ17*Φ21*0.4	2	61	Upright Post		1
28	Bolt	M6*12	4	62	Triangle Knob		1
29	Nylon Nut	M6	4	63	Bushing		1
30	Belt Wheel		1	64	Screw	M8*15	3
31	Belt	J300	1	65	Arc Washer	Φ8.2*Φ16*1.5	3
32	C-clip		2	66	Washer	Φ8.1*Φ10.2*2	3
33	Bearing	6003	2	67	Allen Wrench	S5	1

## Ordering Replacement Parts (U.S. and Canadian Customers only)

 
Please provide the following information in order for us to accurately identify the part(s) needed:

- ✓ The model number (found on cover of manual)
- ✓ The product name (found on cover of manual)
- ✓ The part number found on the “EXPLODED DIAGRAM” and “PARTS LIST” (found near the front of the manual)

Please contact us at [support@sunnyhealthfitness.com](mailto:support@sunnyhealthfitness.com) or 1- 877 - 90SUNNY (877-907-8669).

# ASSEMBLY INSTRUCTIONS


We value your experience using Sunny Health and Fitness products. For assistance with parts or troubleshooting, please contact us at [support@sunnyhealthfitness.com](mailto:support@sunnyhealthfitness.com) or 1-877-90SUNNY (877-907-8669).

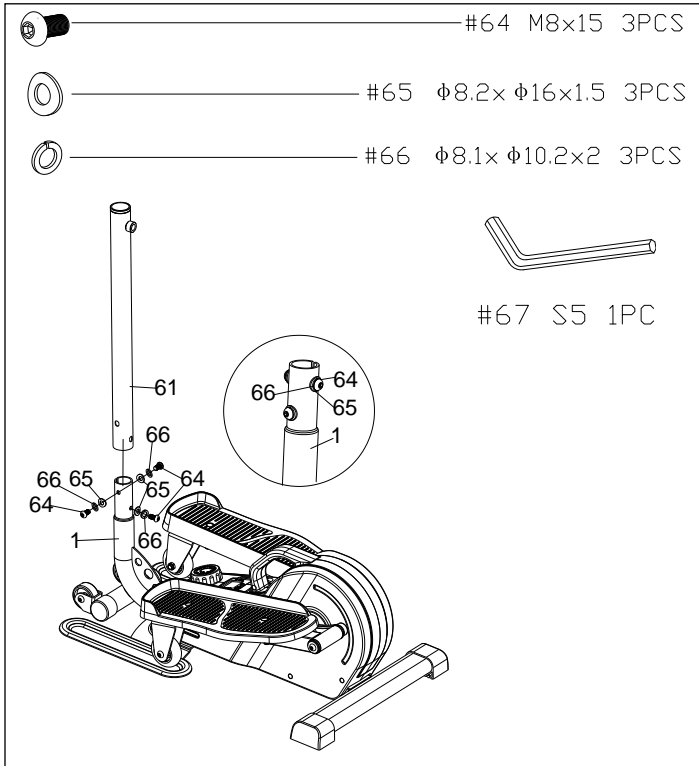

## STEP 1:

Remove 3 **Screws (No. 64)**, 3 **Washers (No. 66)** and 3 **Arc Washers (No. 65)** from **Main Frame (No. 1)** with **Allen Wrench (No. 67)**.

 Insert **Upright Post (No. 61)** into **Main Frame (No. 1)** using 3 **Screws (No. 64)**, 3 **Washers (No. 66)** and 3 **Arc Washers (No. 65)** that were removed. Tighten and secure with **Allen Wrench (No. 67)**.

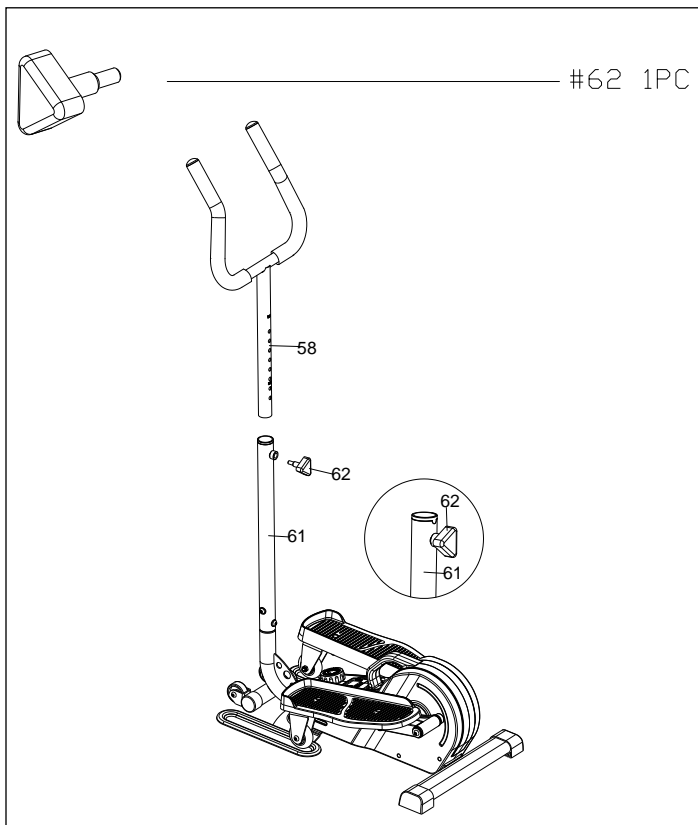

## STEP 2:

Remove **Triangle Knob (No. 62)** from **Upright Post (No. 61)**.

 
Insert **Handlebar (No. 58)** into **Upright Post (No. 61)**, adjust the **Handlebar (No. 58)** to desired height, and tighten with **Triangle Knob (No. 62)**.

*The assembly is complete!*

# EXERCISE COMPUTER

## SPECIFICATIONS

SPEED-----0.0~999.9MPH (Mile/Hour)  
TIME -----0:00~99:59MIN  
DISTANCE-----0.0~9999M (Mile)  
CALORIES-----0.0~9999KCAL

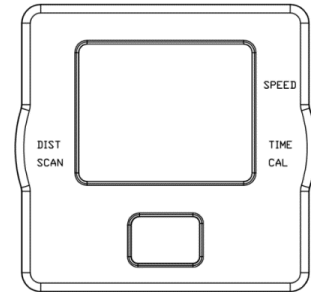

## FUNCTION KEYS:

**MODE:** Press the red key repeatedly to select the desired value (Time, Speed, Distance, Calories, Scan). Hold the key for 4 seconds to have all function values reset (total reset).

## FUNCTIONS:

**SPEED:** Displays current speed.

**TIME:** Counts the total time of the exercise from start to finish.

**DISTANCE:** Counts the distance of the exercise from start to finish.

 
**CALORIES:** Counts the total calories burned during an exercise from start to finish.

**SCAN:** Displays functions automatically in the following order: TIME, CALORIES, and DISTANCE.

## NOTE:

1. Please use 1pc of BUTTON CELL LR44 1.5V battery as a power supply. If there is an abnormal display on the meter, please replace the battery.
2. The meter will automatically power on when pedals are in motion or the MODE key is being pressed.
3. The meter will automatically start calculating when exercise begins.
4. All functions will automatically stop calculating with a "STOP" sign on the upper left corner of the meter when there is no movement for about 4 seconds. "STOP" sign will be off and the meter will automatically start calculating as soon as the machine is in motion.
5. The meter will automatically shut off if there is no movement for 4 to 5 minutes.


# ADJUSTMENTS & USAGE GUIDE

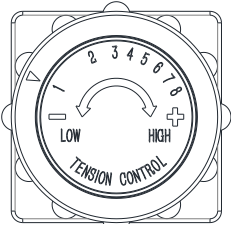

## ADJUSTING THE TENSION


Adjust the tension by turning the **Tension Control Knob (No. 9)** *clockwise* to increase the level of resistance or turning *counter-clockwise* to decrease the level of resistance.

 Tension levels are set at Level 1 being the lowest and Level 8 being the highest.

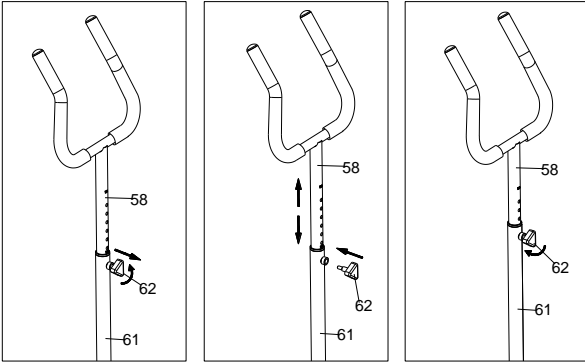

## ADJUSTING THE HEIGHT OF HANDLEBAR


 
Turn the **Triangle Knob (No. 62)** *counter-clockwise* and remove it from **Upright Post (No. 61)**. Adjust the **Handlebar (No. 58)** to desired position, then re-tighten the **Triangle Knob (No. 62)** by turning it clockwise.

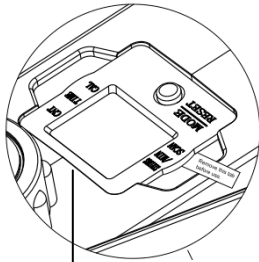

Plastic Tab

**IMPORTANT NOTE:** Please remove the plastic tab from the meter before use!

# BATTERY REPLACEMENT

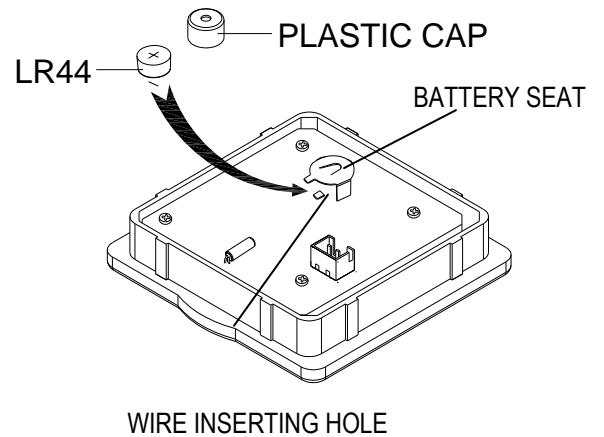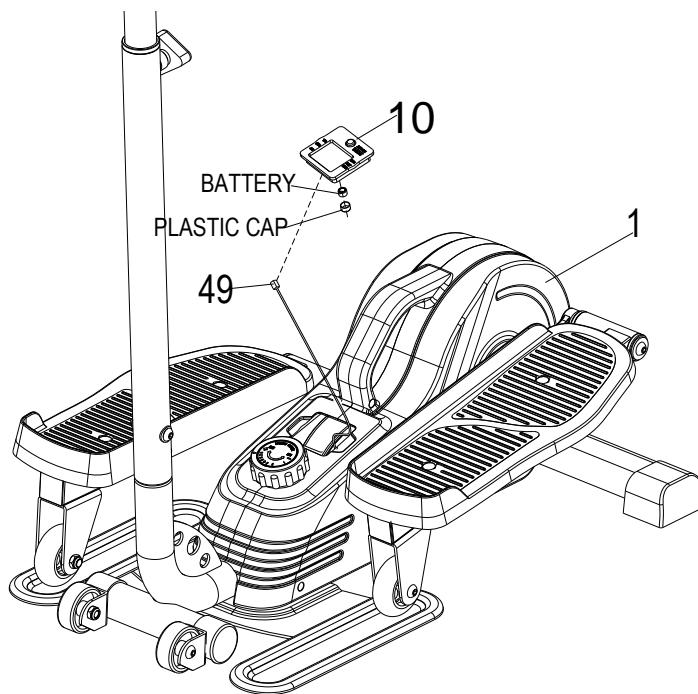  

1. Remove the **Meter (No. 10)** from **Main Frame (No. 1)**. Then disconnect the link wire of **Inductor (No. 49)** from the **Meter (No. 10)**.
2. Remove the plastic cap from the back of **Meter (No. 10)**.
3. Remove the old battery and insert the new battery using your fingers. Ensure that the positive side of the battery which is labeled with a + sign is facing upward once the battery is in place.
4. Put the plastic cap onto the battery seat.
5. Reconnect the link wire of **Inductor (No. 49)** to the back of **Meter (No. 10)**.
6. Reattach **Meter (No. 10)** onto **Main Frame (No. 1)**.

*The replacement is complete!*

Version 1.1



# CONNECT WITH US

FOR FITNESS  
ARTICLES, VIDEOS  
& WORKOUTS



@SUNNYHEALTHANDFITNESS



@SUNNYHEALTHFITNESS



@SUNNYHEALTHFIT



/SUNNYHEALTHFITNESS



/SUNNYHEALTHANDFITNESS

WWW.SUNNYHEALTHFITNESS.COM