

ICECO

JP40/50 PRO




Please email us at: official@icecofreezer.com


Catalogue

1	Supply Details	-----	1
2	Operation	-----	2
3	Cleaning And Maintenance	-----	9
4	Error Codes & Solutions	-----	11
5	Warranty & Return Policy	-----	13
6	Troubleshooting (Q & A)	-----	14
7	Safety Instructions	-----	19
8	Protective Cover	-----	24


1 Supply Details

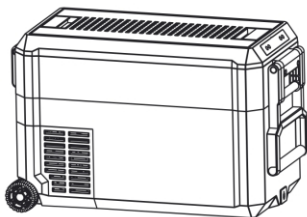


Refrigerator x1

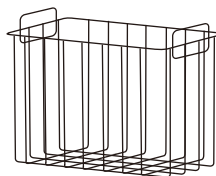

Wire Basket x1

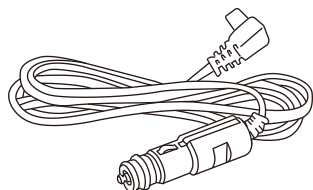

 
12/24V DC Cigarette Lighter Plug Cable x1



110V AC Wall Outlet Cable x1


MODEL	JP40 PRO	JP50 PRO
Dimensions LxWxH	28.5x13.8x18 inch	28.5x13.8x21 inch
	725x350x458 mm	725x350x533 mm
Net Weight	38.4 lbs	40.8 lbs
	17.4 kg	18.5 kg
Storage Volume	40.7 quarts	51.7 quarts
	37 liters	47 liters
Voltage	DC 12/24V AC 110V-240V	
Refrigerant	R513A	
Temperature Range	-20°C to +20°C (-4°F to 68°F)	

2 Operation

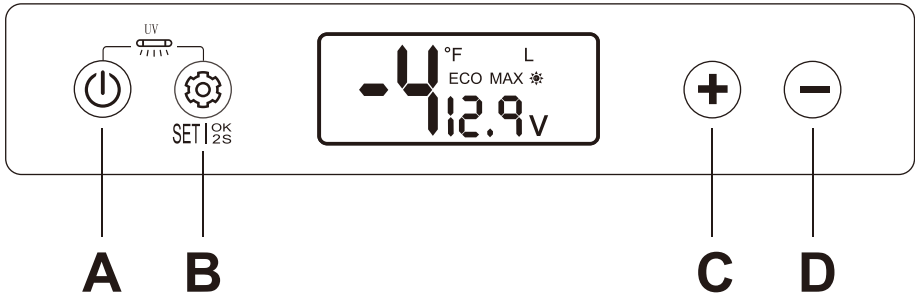

- A** Power (Press & Hold to turn on/off)
- B** Compressor Speed(MAX/ECO Mode)
- C** Temp. Setting UP
- D** Temp. Setting DOWN


2.1 Setting Temperature

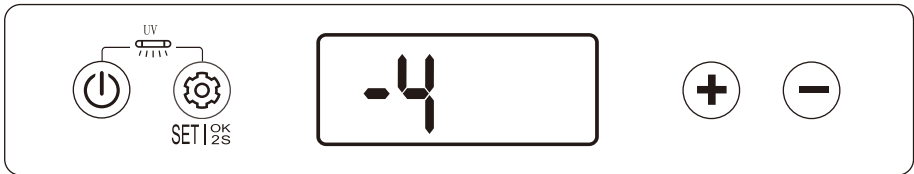



After the fridge turned on, press “+” or “-” to raise or low the set temperature.

Press & hold “+” or “-” to linear adjust the temperature.

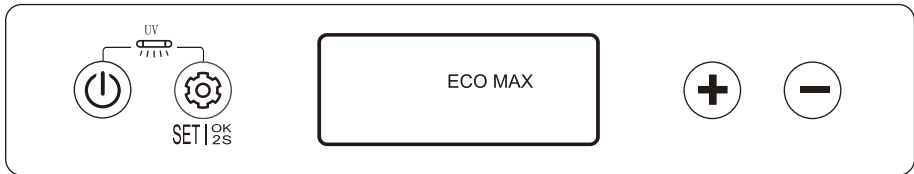2.2 MAX & ECO Mode




After the fridge turned on, press & hold “” for 2 seconds. Fridge will enter the setting mode.

Press the “” to adjust the compressor efficiency and the corresponding icon (MAX, ECO) on the display board will be FLASHING, press the “+” or “-” to switch different mode. Wait 5 seconds for the system to finish the mode change.

There are two mode “MAX” or “ECO” (the display board will show the running mode).

The factory settings is MAX mode.


2.3 Battery Protection


When enter the fridge setting mode, press the “” to adjust the battery protection level and the corresponding icon (H, M, L) on display board will be FLASHING. Press the “+” or “-” to switch different level. Wait 5 seconds for the system finish the level change.

VOLTAGE	DISPLAY	12V		24V	
PROTECTION POSITION		CUT OFF (V)	CUT IN (V)	CUT OFF (V)	CUT IN (V)
LOW	1 Bar ---	9.6	10.9	21.3	22.7
MED	2 Bars ===	10.4	11.7	22.8	24.2
HIGH	3 Bars ≡≡≡	11.1	12.4	24.3	25.7

The factory settings is M level.


2.4 Switch Between °C and °F

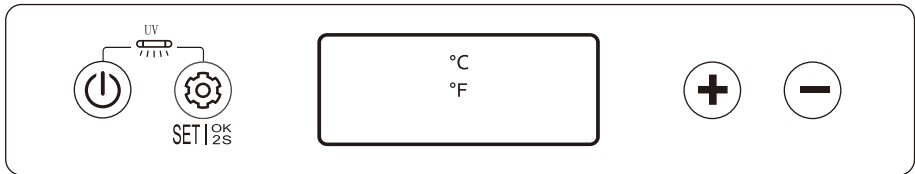

When enter the fridge setting mode, press the “” to adjust the temperature scale and the corresponding icon (°C, °F) on display board will be FLASHING, press the “+” or “-” to switch different scale. Wait 5 seconds for the system finish the scale change.

The factory settings is °F.

2.5 UV Sterilizer Settings

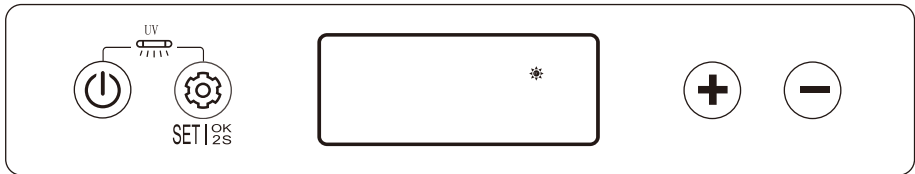


After the fridge turned on, the UV light will work automatically. The UV light will finish work after 30 minutes.

When the lid opened the UV light will turn off immediately.

If want to cancel the UV sanitizing function. After the fridge turned on, press & hold “⏻” and “⚙️” at the same time, the function will turn off. Restart the function please repeat the previous step.

2.6 Alarm For Lid Not Closed Properly

This icon will flash if lid not closed completely.

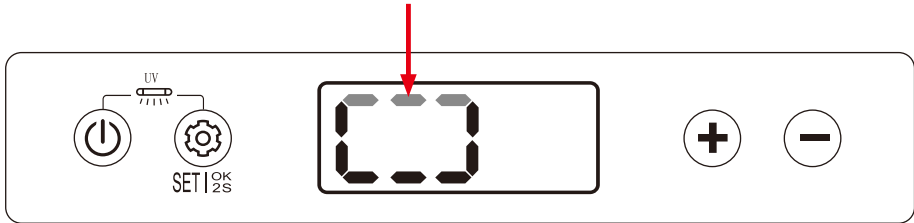

When the refrigerator door is opened continuously for more than 1 minute, the fridge will ring, and the refrigerator will display the following pattern to notice the user to close the door.

When the refrigerator door is closed fasten, the refrigerator resumes normal display.

3 Cleaning And Maintenance



3.1 Cleaning

- Always unplug the fridge before cleaning the fridge.
- You can clean the interior and exterior of the fridge by using warm water, mixed with a gentle non-abrasive detergent.
- You may use a soft sponge, or micro fiber cloth.
- When not in use, it's better to leave the lids open to reduce odors.
- If odors occur, please clean the fridge thoroughly, or use baking soda in a bowl to absorb odors.

3.2 Danger Behavior

- ⚠ Use pointed objects to scrape, or defrost ice.
- ⚠ Use abrasive detergents to clean.
- ⚠ Use heavy duty sponges (due to scratching).
- ⚠ Clean the fridge with running water or pressure washer.
- ⚠ Clean the fridge without power input covers secured.

3.3 USB Connector

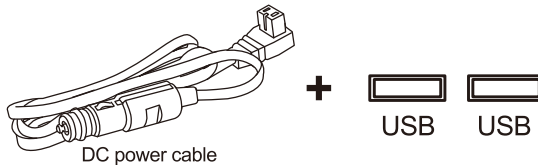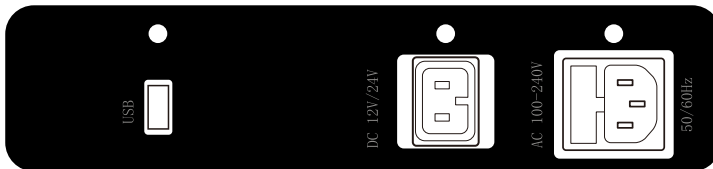

⚠ NOTICE: USB connector only takes effect when charging in DC power cord.

4 Error Codes & Solutions

Code	Description
E1	The DC voltage is under the protection setting and the battery protection mode is activated.
E2	The cooling fan overloads with more than 1A of current.
E3	Motor start error The motor of compressor is blocked or the pressure difference in the refrigeration system is too high.
E4	Minimum motor speed error The compressor overloads and the motor can not maintain its minimum speed 1850 rpms.
E5	Thermal cut-out of electronic unit Thermal cut-out error If the refrigeration system overloads, or the ambient temperature is too high, the thermal sensor is overheated.
E6	NTC failure Open circuit or short circuit.

Solutions

- If this error code appears when the fridge is operating on 12V DC, please try to lower the battery protection setting and see if the error is resolved. The battery protection mode may be triggered prematurely on certain vehicles due to small wiring imperfections, contributing to a measured DC voltage drop at compressor start-up. Lowering the battery protection setting may resolve this issue.
- Please also care about the reading of your battery voltage to make sure it is not depleted/discharged.
- If possible, please connect the AC power to try if the refrigerator appears error code.
- Please contact us directly if the error persists.

5 Warranty & Return Policy

- **30 days** refund guarantee upon receiving.
- **5 years** warranty on the compressor.
- **1 year** warranty for other parts or accessories.

For returns or exchanges, please call us, or fill out the following return and exchange registration form in the package as a proof of return. All materials must be returned in the original condition and packaging. Thank you for your cooperation.

If the product is received damaged or defective during transportation, you will need to contact our customer service within 2 business days. Make sure to provide relevant photos or videos, your order ID number, and your name. A customer service agent will help assist into solving the issue at a timely manner (Return, Exchange, or Discount Compensation). A free return label will be provided if needed.

6 Troubleshooting (Q & A)

1. Heat resistance & water resistance

Heat resistance

ICECO refrigerators are engineered to operate at an ambient temperature of up to 55 °C(131 °F).

Weather Proof

ICECO refrigerators can operate under light rain conditions. Please keep the vents above clear of water, and please add some clearances to the bottom of the fridge if the ground is wet.

We DO NOT recommend exposing the fridge to moderate or heavy rain.

As with all electrical appliances, over-exposure to moisture may shorten the fridge's life.

2. Why did it change back to the original temperature after setting the temperature?

The Solid/Non-Flashing number on the display is the CURRENT interior temperature.

The Flashing number is your SET temperature after adjustment. The compressor will shut off when the SET temperature is reached.

3. What should I do if the refrigerator is upside down when it is delivered?

Please leave your refrigerator upright for **24 hours** to allow the compressor lubricant to resettle before powering on the fridge.

Otherwise it may contribute to certain operation abnormalities.

4. What is the function of triple battery protection? How do they work?

The triple battery protection is designed to prevent over-discharge and battery depletion. When the measured DC voltage is below the set value, the compressor is shut off to prevent battery depletion.

VOLTAGE	DISPLAY	12V		24V	
PROTECTION POSITION		CUT OFF (V)	CUT IN (V)	CUT OFF (V)	CUT IN (V)
LOW	1 Bar ---	9.6	10.9	21.3	22.7
MED	2 Bars ===	10.4	11.7	22.8	24.2
HIGH	3 Bars ===	11.1	12.4	24.3	25.7

For example, when you switch to a LOW MODE, the battery voltage is under 9.6 volts, the refrigerator will automatically cut the power OFF;

The refrigerator will start again till the battery voltage reached back to 10.9 volts.

5. What is the power draw in max/ fast cooling mode?

Model	Electrical Power	Model	Electrical Power
GO12	50W	JP42	55W
GO20	50W	VL35 Series	65W
JP Series	60W	VL Series	85W
VL45 ProS	45W	VL60 ProS	47W
VL75 ProD	57W	VL90 ProD	61W
JP40 Pro	60W	JP50 Pro	60W

This data is only suitable for laboratory testing, and the actual power is subject to actual conditions.

6. Why is there a temperature difference (between the actual temperature of the refrigerator and the set temperature)?

Because of the sinking nature of cold air, the different temperatures may exist in different locations in the refrigerator (the temperature of the bottom will be the lowest). The panel only shows the average temperature of the refrigerator.

7. What kind of cable do I need to use in the car and at home?

The DC cable is provided. You can power it from your vehicle's cigarette lighter plug using the DC cable. You can also power it at home, but you need to use with AC cable as precondition.

8. What is the specification of the fuse of the refrigerator?

The supply line is protected by a 15A fuse located in the refrigerator.

7 Safety Instruction

SAFETY INSTRUCTIONS

Please read the user manual and safety instructions carefully before using the appliance.

By ignoring the safety instructions, the manufacturer cannot be held responsible for the damage.

The use of accessories that are not recommended by manufacturer can cause injuries and will invalidate any warranty that you may have.

The appliance shall not be exposed to moderate/heavy rain.

Place the refrigerator on a dry, secure surface, with adequate ventilation.

- ❗ Do not leave the refrigerator unattended in uncovered, outdoor areas exposed to the elements.**
- ❗ Do not use this appliance near direct heat sources, such as an open flame or radiator.**
- ❗ Do not place open containers of liquid inside the fridge.**
- ❗ Please don't put hot/warm food into the fridge directly without letting it cooling off. Place/arrange the content of your fridge securely when using the refrigerator inside a moving vehicle.**

To maximize energy savings, please make sure the lid is closed and secure, and only open the fridge when you need to.

The power cable must only be replaced by qualified technical personnel and by an assistant body authorized by the manufacturer.

Before carrying out any maintenance operations on the refrigerator, disconnect all power sources from the fridge.

This appliance is suitable for camping use.

WARNING!

- ! Please keep the fridge in a well ventilated area.**
- ! Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.**
- ! Do not use electrical devices inside the food storage compartments of the appliance, unless approved/recommended by the manufacturer.**
- ! Do not store explosive items, such as aerosol cans with a flammable propellant in this appliance.**
- ! Risk of fire and electrical shock.**
- ! Do not let hot items touch the plastic parts of the appliance.**
- ! Do not put flammable products or items in, near or on the appliance.**

- !** Do not touch the compressor or the condenser when the fridge is operating. They may be very hot.
- !** When setting up the appliance, ensure the supply cord is not trapped or damaged.

Further information is provided on the technical data label inside the product.

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

2. Children should be supervised to ensure that they do not play with the appliance.

3. This appliance is intended to be used in household and similar applications such as

- staff kitchen areas in shops, offices and other working environments;
- farm houses and by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;
- catering and similar non-retail applications.

4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.

5. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

6. **DANGER:** Risk of child entrapment. Before you throw away your old refrigerator or freezer:


*** Take off the doors.**

*** Leave the shelves in place so that children may not easily climb inside.**

8 Protective Cover

Care Instructions

- Clean the fabric with a soft cloth and a mix of soft detergent and warm water - do not use bleach or any abrasive cleaners.
- Do not dry in direct sunlight.

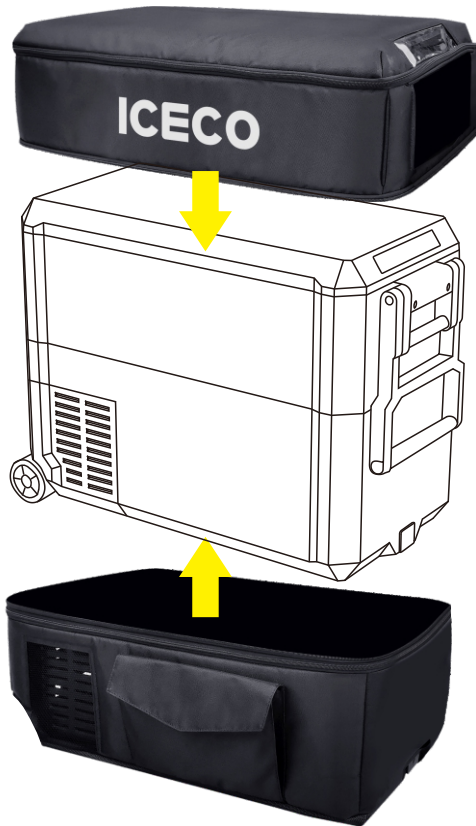

Available For
JP40 Pro / JP50 Pro



JP40 Pro



Open the flexible zipper



JP50 Pro

ICECO

Cooler Than A Cooler