

Reset

If the DVR stops working or won't power on, it may be necessary to reset it. Insert toothpick or other nonmetal equivalent into reset hole and press the reset button slightly to reset.

Set system time

The date and time of video recording is displayed in the top left corner of the screen (Example: 2010-01-01 10:08:28).

To reset or change the time, connect the unit to a PC and create a test file named *Time.txt* under the root directory of the removable disk. Open the file and change date and time information (see format above). Store the file, disconnect unit, and re-start.

Warranty Information

1. Warranty: Streetwise Security Products extends a 90 day warranty to the DVRCS for defects in materials or workmanship, with the following exceptions:

a) The warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care, moisture, or loss of parts.


b) The warranty will be voided if the unit has been opened or tampered with in any way (unless by an authorized dealer) or if any unauthorized replacement parts have been used.

2. NOTICE: Purchaser must check and abide by all local laws governing the possession and use of hidden DVRs. In addition, the DVR must only be used in a lawful manner.

3. Conditions of Sale: Purchase of this product is an agreement by the purchaser/user to hold all sellers and manufacturers harmless of all liabilities and damages.

4. To Obtain Service: Contact the Authorized Dealer from whom you purchased this unit for a Return Merchandise Authorization. The return unit must be sent postage prepaid and proof of purchase is required. Damage or loss occurring during shipment is not covered by this warranty.

Cross DVR Instructions

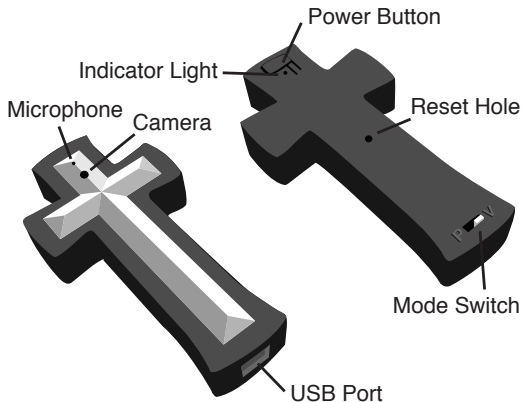

Video Recording

Make sure the Mode Switch is pushed to the right (V) to enable video recording. Press the Power Button for a second. The Indicator Light will glow yellow; when the Indicator Light turns blue, the unit is recording. Press the Power Button again for a second and the Indicator Light will turn yellow, indicating recording has stopped. Recording can not be resumed until the unit has finished storing the previous video. It takes a few moments to store files; do not attempt further operations until files have been stored. When videos are recorded consecutively, the system may store them as one video file. NOTE: If the battery is low, the system will store the video and power off automatically.

Taking Photos

Make sure the Mode Switch is pushed to the left (P) to enable picture-taking. Short press the Power Button to take a picture. The Yellow light will flash to indicate a photo has been taken and stored. NOTE: If the DVRC is left idle for a minute, it will power off automatically.

Changing Modes

In video mode, push the Mode Switch left to P to enter photo-taking mode. In photo-taking mode, push the Mode Switch right to V to enter video-recording mode and start recording. When shifting from video mode to photo mode, the system will store the

last recorded video before entering photo-taking mode.

Video Playback

Make sure the DVR is powered off. Using the included USB cable, connect DVR with PC or laptop. Open removable disc and click chosen video file to play. If the computer doesn't recognize the removable disk at first, try to reconnect. Before ejecting the DVR, please check to make sure it is ready to eject. When possible, use the Eject command before unplugging the device.

Power off

To turn the Spy Cross DVR off, long press the Power Button until the indicator light goes out. The unit is now powered off. In video mode, the DVSCR saves the video file before powering down.

Charging

Connect the unit to PC or laptop using the USB cable. If the battery is low, the Indicator Light glows yellow. When the Indicator Light turns blue, the unit is fully charged. We recommend turning the unit off while charging. For the first few charges, we recommend fully discharging the batteries before charging; this will optimize the battery's capacity and running time.