

Milly + COUP

Pixi



Stroller Product Manual

IMPORTANT! READ CAREFULLY
AND KEEP FOR FUTURE REFERENCE

Contents

- 3.** Safety warnings
- 5.** Parts checklist
- 6.** Unfolding the stroller
- 7.** Folding the stroller
- 8.** Safety harness
- 9.** Using your Pixi
- 9.** Rear brake
- 9.** Front swivel wheels
- 9.** Adjusting the canopy
- 10.** Reclining the seat
- 10.** Adjusting the footrest
- 10.** Using the belly bar
- 11.** Accessories
- 12.** Maintenance
- 14.** Cleaning instructions
- 15.** Spare parts
- 15.** Warranty

Tips to avoid tears

Pixi is designed and tested to comply with Consumer Protection Notice No. 8 of 2007, AS 2088:2022 and AS/NZS ISO 8124-3.

WARNING

- FOLLOW THE MANUFACTURER'S INSTRUCTIONS.
- PUT ON ALL THE BRAKES WHENEVER YOU PARK THE STROLLER.
- DO NOT LEAVE CHILDREN UNATTENDED.
- DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.
- MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER, OTHERWISE THEY MAY BE INJURED.

The biggest safety risks relating to lightweight, travel strollers include:

Tipping:

- Bags should never be hung from the handlebar as they will unbalance the stroller.
- The stroller is less stable when travelling over uneven terrain or up/down kerbs. Please take extra care.

Falls:

- Climbing into the stroller unassisted could result in a fall and potentially break the footrest.
- Securing your child in the safety harness is the simplest way to prevent falls.

Rolling:

- Due to their light weight, travel strollers can easily roll away from the user if the tether strap or brake are not being used. Please use these at all times.

Weight limits:

- Pixi is designed to be used from birth (with or without newborn parent facing pack).
- Maximum weight for a child in the seat is 22kg.
- Maximum age and weight limit for a child in the separate newborn parent facing pack is 22kg, although we recommend this separate seat be used from newborn to 6 months.
- Maximum weight limit for the basket is 5kg.

Tips to avoid tears


General Safety:

- Never use the stroller in a manner for which it is not designed.
- Do not allow your child to climb on, stand on or play with the stroller.
- The stroller should never be used as an unsupervised sleeping environment.
- Ensure you carefully explain usage and safety features to new carers before they use the stroller.
- Do not use parts or accessories that are not approved for use with the Pixi range. Doing so may be unsafe and void your warranty.
- Remove your child and take care when going up or down stairs or escalators.
- Take your child out of the stroller when travelling by bus, tram or train.
- Gentle sloping surfaces may be unstable. On steeper sloping and uneven surfaces, there is a possibility that the stroller may tip over and you may need to remove your child.
- Do not use or leave the stroller near open fire or an exposed flame.
- Only to be used for walking. Not suitable for running, rollerblading or skating etc.

Meet Pixi!

Parts Checklist

Please check that you have all the correct parts before getting started.



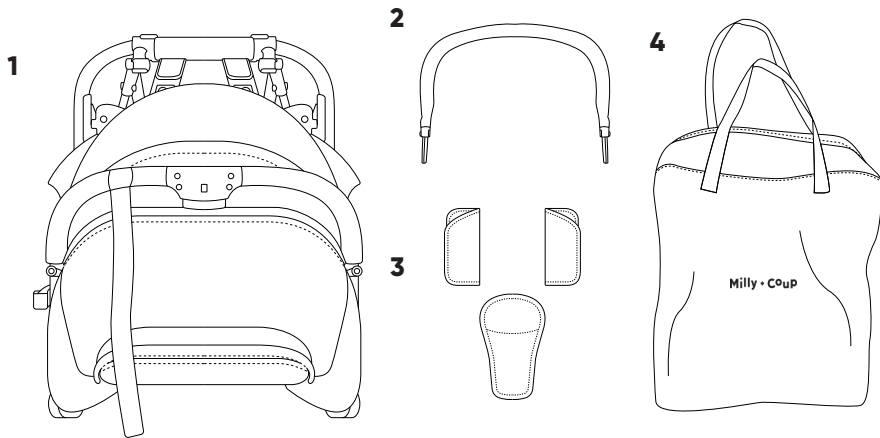


- 1 Stroller
- 2 Belly bar
- 3 Harness covers
- 4 Carry bag

Unfolding the stroller

Pixi comes fully assembled in the box ready for your adventure!

- +** With the handlebar facing up, undo the elastic loops connecting the backrest to the stroller frame. Release the frame lock on the left hand side of the frame and pull the handlebar up, swinging the bottom half of the stroller out and into position
- +** Pull the footrest downwards and press firmly until you feel the seat base click securely into place on the frame.

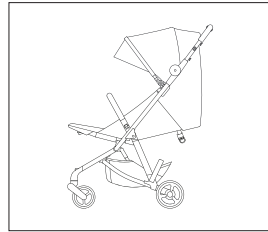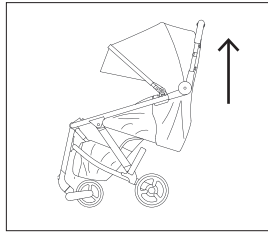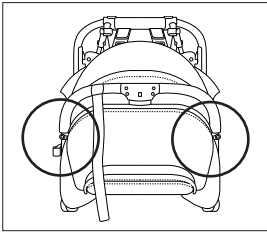

! WARNING

- ENSURE CHILDREN ARE OUT OF REACH OF THE STROLLER BEFORE FOLDING.
- TAKE EXTRA CARE WHEN FOLDING, LIFTING AND CARRYING THE STROLLER. ALWAYS LIFT AND CARRY YOUR STROLLER USING BOTH HANDS.
- TO AVOID POSSIBLE INJURY, ALWAYS ENSURE THAT THE FRAME LOCK IS SECURED BEFORE LIFTING AND CARRYING THE STROLLER.
- TO AVOID FINGER ENTRAPMENT, KEEP YOUR OWN AND YOUR CHILDRENS' FINGERS CLEAR OF ANY FOLDING PARTS.

Folding the stroller



Ensure the brake is on and the front wheel locks are not engaged.



Lift the footrest and seat upwards to meet the backrest.



Simultaneously push the lock button (A) and the release button (B) on the handlebar while pushing the handlebar forward and down so that the stroller folds onto itself.






Secure the elastic loops on the back of the backrest to the clips on either side of the frame.



Ensure the frame lock has engaged before lifting and carrying.

When carrying the stroller, grasp the handle and avoid lifting with a bent back.

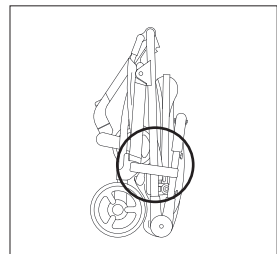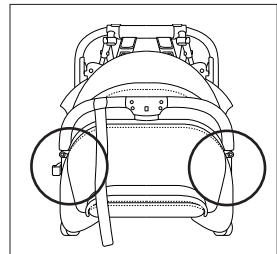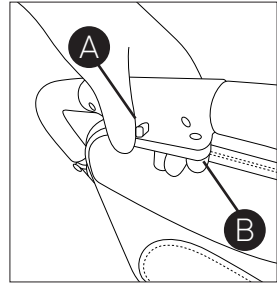


Safety harness

+ To secure the harness


Insert each of the four harness straps into the central buckle.

To release, press the button in the middle of the buckle.

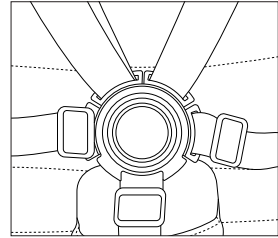


+ To adjust the length of the shoulder straps

Slide the buckle along the strap to the desired position.

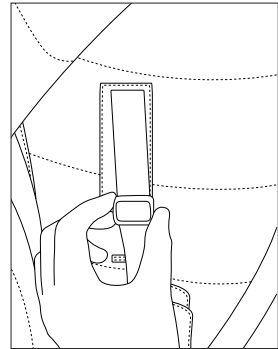

+ To adjust the height of the shoulder straps

Slide the buckle that is secured to the seat back up or down the strap to the desired position for your child.

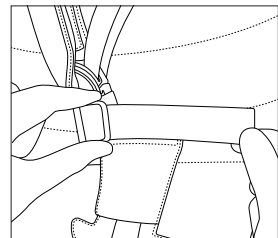

+ To adjust the length of the waist straps

Pull the adjustor buckle along the strap to the desired length.


! WARNING

- ALWAYS USE THE HARNESS WHEN YOUR CHILD IS IN THE STROLLER.
- ALWAYS ADJUST THE HARNESS APPROPRIATELY FOR YOUR CHILD'S SIZE.
- NEVER LEAVE THE HARNESS BUCKLED WHEN NOT FITTED TO YOUR CHILD IN THE STROLLER. THE HARNESS CAN FORM LOOPS WHICH MAY CAUSE A STRANGULATION HAZARD.

Using your Pixi

Rear brake


- + When stopped, use the brake at all times by pressing down on the bottom of the red brake paddle with your foot until you feel it click into place.
- + To start travelling again press down on the top of the red brake paddle with your foot to disengage the brake and off you go!

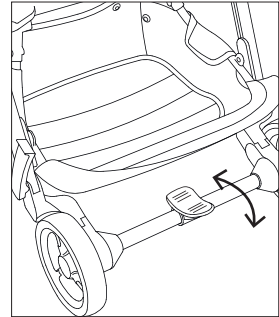

Front swivel wheels


When travelling quickly along straight surfaces or across uneven terrain, the front wheels may spin or cause what's commonly known as 'wheel shudder'.

- + To lock the front wheels into place. turn the wheels to their locked position and press the black button down on the back of the front wheel hub.
- + To go back to 360 swivel mode, pull the button up again.

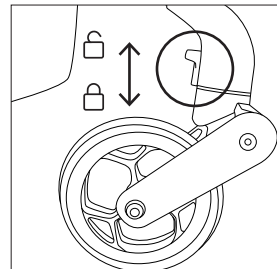

Adjusting the canopy



- + Simply pull or push the canopy forward or back. For maximum protection, undo the zip to extend the canopy to its maximum length to protect your child from the sun or wind. For additional air flow, open the peek-a-boo flap on the canopy.

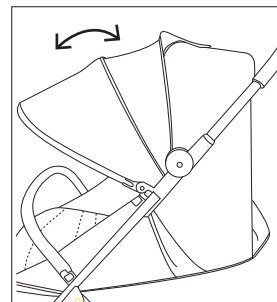

Using your Pixi


Reclining the seat

- + Squeeze the recline adjuster on the strap on the back of the seat, pulling it downwards to your desired position.
- + To raise the seat, hold the end of the recline strap with one hand and squeeze the recline adjuster while sliding it upwards, bringing the seat up to the desired position.

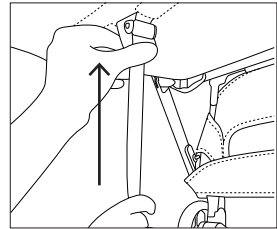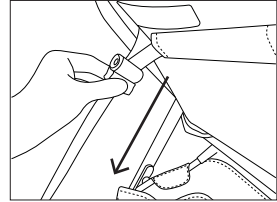


Adjusting the footrest

- + Lift the footrest to raise it into place.
- + To lower, simultaneously squeeze the two levers located underneath the footrest and lower into position.

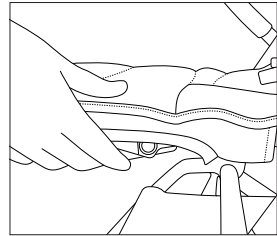

Using the belly bar

- + Simultaneously insert each end of the bar into the belly bar sockets.
- + To remove, press the release buttons on both sides of the bar and pull out.
- + The belly bar is flexible but does not pivot or swivel. Overly flexing the belly bar could distort its shape so take care when removing.

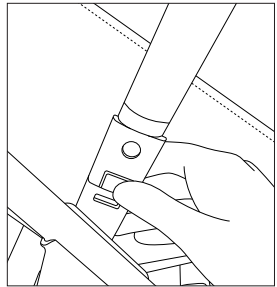

Accessories

+ Carry bag

Some airlines require that travel strollers be placed into a carry bag for storage in overhead compartments.


We offer a carry bag that is designed to hold the stroller while in overhead compartments. This bag is not designed to protect the stroller, it is for storage purposes only.



Damage incurred to your stroller as a result of airline travel is not covered by our warranty. We recommend checking if your airline covers any potential damage incurred.

+ Parent Facing Newborn Pack (sold separately)


We offer a separate newborn seat that is interchangeable with the stroller seat. This seat is parent facing and remains in the flattest, reclined position only. This seat is designed to be used from newborn to 6 months.

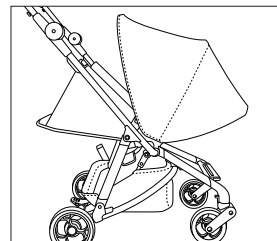

Accessories

+ Rain cover (sold separately)

Place the rain cover over the stroller as shown.

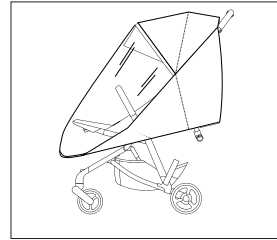

⚠ WARNING

- NEVER LEAVE THE STROLLER COVERED INDOORS, IN VERY HOT WEATHER OR NEAR A HEAT SOURCE.
- ALWAYS SUPERVISE WHILE THE STROLLER IS COVERED.

Pixi maintenance

Excessive wear can reduce the effectiveness and safety of your stroller. Please be gentle, don't overload it, avoid excessive off-road use and be sure to follow the maintenance instructions below to keep your stroller looking and feeling newer for longer!

Regular maintenance:

- Inspect the locking devices, levers, joints, buttons, brakes, wheels, safety harness and fixtures to ensure they are secure, moving freely and in full working order.
- If your front wheels or any parts of the stroller have become stiff, difficult to operate or begin to squeak, first ensure that dirt is not the cause and give

Pixi maintenance

them a good clean with a damp (not wet) cloth. Then try a light application of a sprayable silicone lubricant, ensuring that it penetrates between the components.

WARNING

POISONOUS, TOXIC SUBSTANCE. USE WITH CARE.

- ENSURE CHILDREN ARE NOT PRESENT WHEN APPLYING SILICONE LUBRICANT OR ALLOWING IT TO DRY.
- ALWAYS SPRAY OUTSIDE OR IN A WELL-VENTILATED AREA.
- ENSURE YOU USE MINIMAL PRODUCT AND WIPE AWAY EXCESS SOLUTION BEFORE USE.

Correct storage:

- Do not leave the stroller in direct sunlight for prolonged periods of time to avoid colour fade.
- Do not leave the stroller in your car on hot days or near any heat source or fire.
- Do not store the stroller with heavy items on top of it.
- Store the stroller in a dry, well-ventilated, and safe place.

Preventing rust and mould:

After exposure to wet or damp conditions (especially trips to the beach, snow or in the rain), leave the stroller fully open in a warm, well ventilated environment to prevent rust and mould.

You may need to dry the stroller with a soft, lint free cloth. Left damp it will encourage mildew, mould or rust to form causing damage.

Try to store your stroller in a dry, well-ventilated room inside your house. Ventilation is key.

Note: mould is an environmental issue caused by excess moisture in the air. If you live in a humid climate, please keep this in mind and take extra care to prevent mould.

Cleaning instructions

To keep your stroller looking and functioning like new, we recommend a deep, comprehensive clean every 6 months.

Refer to the care labels on your stroller. For a full guide on how to clean your stroller, please refer to our website.

DO NOT

- Do not immerse the seat or canopy in water, sponge clean only.
- Do not clean with abrasive materials or use ammonia, bleach, solvents, caustic or spirit-based cleaners.
- Do not press or iron.
- Do not rub or wring fabric.
- Do not tumble dry.
- Do not dry clean.

Tips to avoid tears

- Do not clean your stroller with children around.
- Do not remove, dismantle, or alter any part of the folding mechanisms, frame, brake axle or wheels for cleaning or any other reason.
- Do not use if any part is broken, torn, or missing. Replacement parts are available from our website or by contacting us.

Failing to adhere to these maintenance and cleaning instructions could damage or affect the safety of your stroller and may void your warranty.

Spare parts

The wheels are subject to normal wear and tear and should be replaced if necessary.

Spare parts are available for purchase on the Accessories and Spare Parts page of our website (millyandcoup.com). If the part you require is not listed, please email us for a quote at:

au.support@millyandcoup.com or **nz.support@millyandcoup.com**

Warranty

Pixi comes with a 3 year defects warranty to cover against faults in materials and workmanship when your stroller is used under normal conditions, according to our user manual and technical specifications.

Our goods come with guarantees that cannot be excluded under the Consumer Law in the country of purchase. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For full warranty terms and conditions or to make a claim, please visit the Warranty page of our website for details.



Contact Us:

au.support@millyandcoup.com | nz.support@millyandcoup.com

Model: Pixi **Version:** 1 - January 2023

Information subject to change. Please see website for current version.

millyandcoup.com