


User Manual



100.0 mm

57.0 mm

Power Bank Layout

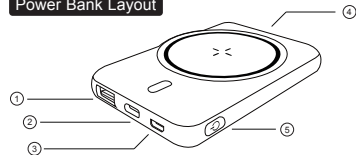

- ① USB OUT
- ② Type-C Input
- ③ Micro IN
- ④ Wireless OUT
- ⑤ Power Switch

Suitable for

- iPhone12 series/iPod/all smartphones.
- Most smartphones including Samsung, LG, Sony, HTC, Nokia, Huawei, Motorola, Black Berry,more.
- Smartwatches, fitness trackers,Digital cameras.
- Portable Bluetooth devices such as headset, hands-free car kit speaker etc.
- Portable hand-held gaming consoles.

Features

- Capacity: 5000mAh Magnetic Power bank
- Battery type: Lithium polymer
- Rechargeable more than 300 times
- Includes micro USB cable for charging and re-charging
- Built-in over charging and short circuit protection
- Micro/Type-C: DC 5V 2A
- Output: DC 5V 2.4A (max) wireless 5W
- Charging time: About 3-4 hours
- Size: 94mm(L) x64mm(W) x 15mm(T)

To Charge Power Bank

 
Charge via USB Wall Charger iPhone 12 Charge by Wireless Output



- Using the included micro-USB cable,connect the larger micro-USB connector to an AC wall adapter or USB port on a computer.
- Connect the smaller micro-USB connector to the input connector on the powerbank.
- During charging the LED's will flash to show charging status.
- When charging is complete the LED's will be permanently on.

To Charge Phone or USB Device

To Charge a Mobile Phone or other USB Device



- Using your phone or other USB device's charging cable, connect the USB Type A connector to the Output connector on the power bank.
- Connect the other end of the cable to your device.
- Charging should commence automatically.
- If your phone or device uses a standard micro-USB connector then you can also use the included cable to charge your device.
- When your phone or device is fully charged, the power bank will automatically turn itself off.

To Check Remaining Capacity

- Press On/Off button and LEDs will light to show remaining capacity.
- The LEDs will turn off automatically after about 35 seconds and keep press twice time will be trun off the led light immediately.

LED ● On/ ○ Off/ ● Flashing	Remaining Capacity
● ○ ○ ○	Less than 25%
● ● ○ ○	25% to 50%
● ● ● ○	51% to 75%
● ● ● ●	76% to 100%

Important Safety Instructions

- To maximize battery life span, fully charge power bank before first use.
- Store power bank in a cool and dry place.
- Do not store power bank in hot or humid environment.
- Do not charging and discharging at the same time.
- Do not charging Micro USB and Type-C at the same time.
- Operating temperature should be between -10c to 40c.
- If power bank is not used for long periods of time, you should charge and discharge once every three months.
- When charging a device, the power bank may feel warm, this is a normal operating condition and should not be cause for concern.
- In normal conditions, the battery performance will decline over several years.
- Do not dispose of power bank in heat or fire.
- Do not clean power bank with harmful chemicals or detergents.
- Misuse, dropping or excessive force may cause product damage.