 


1:12 Electric 4WD Climbing car

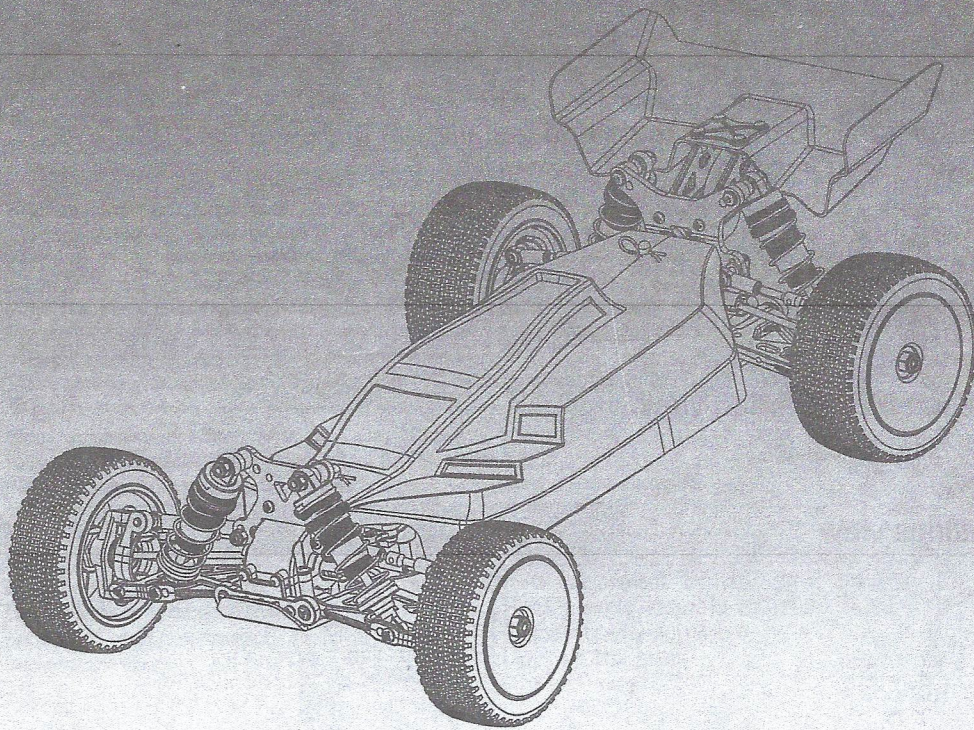

Caution: This model is not a toy, it is designed for user over 14 years of age.

Please use this instruction and the R/C system instruction at the same time.

The instruction is suitable for a type of model whose number is 124019

Safety and Cautions

Safety and caution 1-2

Troubleshooting • Product introduction 2-3

Instruction of common tools and installation the electronic part... 4

Practice and maintenance.....5

Assemble exploded view6-14

 
Fittings view15-19

*Never run the model on public roads or streets, as it could endanger traffic.
 *Never run the model in crowded areas, near or toward people or animals, to prevent property damage and/or personal injury.

*Never run the model near rivers, ponds or lakes as to prevent R/C car from dropping into the water.
 *Make sure that no one else is using the same frequency as yours in your running area. Using the same frequency at the same time, whether it is driving, flying or sailing, can cause loss of control with R/C model, resulting in serious accidents.


*To avoid a runaway R/C model or loss of control, always follow the procedure below:

1. Fully extend transmitter antenna.
 2. Switch on transmitter.
 3. Switch on R/C model.
- *Follow reverse procedure to shut down.
 *Never touch or hinder rotating tire.
 *Never run R/C model in the rain or let run over puddles, as water may cause trouble with R/C model.
 *Motor and battery get very hot after running. Take care when handle them.
 *Retract transmitter antenna when not in use.
 *Remove the batteries from model and transmitter when they are not in use.

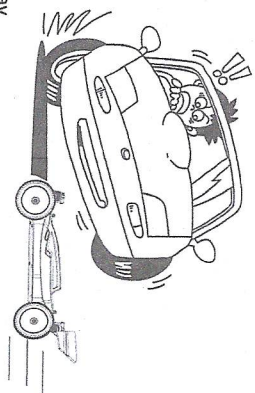


Cautions when handling batteries

 - *Do not dismantle the battery or charger and do not cut any battery cables. This may cause short-circuit and/or damage to the product.
- *Change battery with compatible charger following proper procedure that is called out in the instructions. Do not modify charger or charge battery in improper way.
- *Do not recharge battery that is still warm from use as it may damage the battery. Allow the battery to cool off prior to recharging.
- *Make sure to disconnect charger cables from R/C model and electric outlet when not in use.
- *Remove transmitter battery when not using it for a long time as it may leak and damage transmitter when left for a long period.
- *Never incinerate used batteries, as they can explode causing serious accidents.

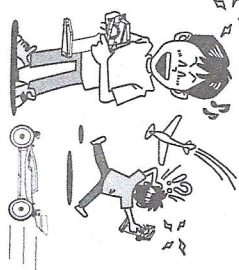


Safety precautions

 
Do not operate the model on public roads, in crowded places or near infants; it may cause accidents or injury.

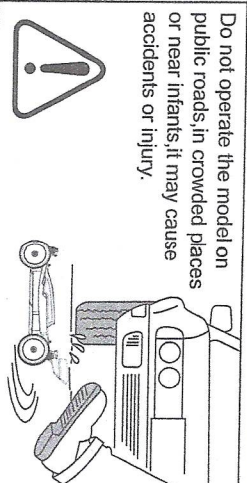

 
As the product includes small and sharp parts, assemble and store this product only in places out of the reach of children.

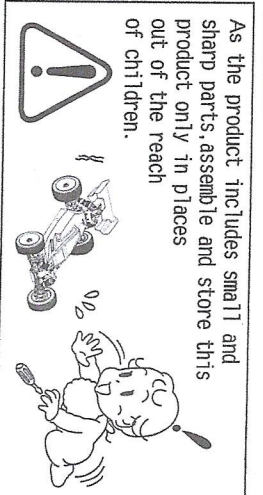

 
As the front end of the antenna may be dangerous, do not aim it toward faces.

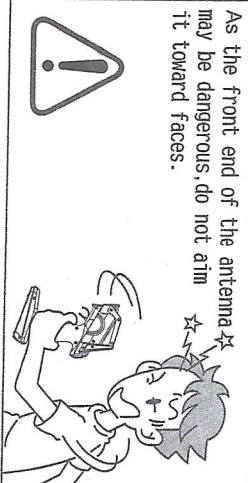

 During the car running and after, the motor will be hot. Please do not touch it until it has had time to cool down.

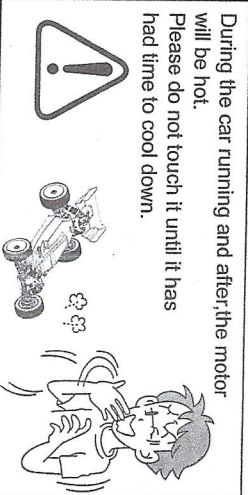

 Don't use the same frequency with others at the same time. Or the car will lose control or even lead to serious accidents.

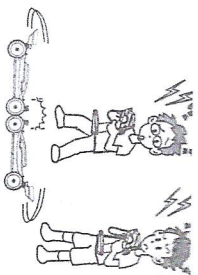

Troubleshooting


Description	Cause	Solution
The car does not operate at all.	Transmitter or receiver is off.	Turn on both transmitter and receiver.
	Batteries are not placed properly in the transmitter.	Place batteries in the transmitter properly.
The car does not follow your operation and control distance not enough long.	The drive battery is not charged enough.	Charge the drive battery.
	Someone else is using the same radio frequency as you are using.	Charge your radio frequency to the one no one else is using, wait until the driver using the same radio frequency finishes driving, or drive your car at a different place.
	There is not enough power in the transmitter or receiver batteries.	Replace the transmitter batteries with new ones and charge the drive battery.
	Not tighten antenna on the transmitter/not fully extend antenna.	Make sure insert antenna into the transmitter and fully extend antenna.




CAUTION

- * Please observe the operation manual or packing explanation to install and use, and some parts should be installed by adults.
- * The product contains small part, it may cause swallow or choke.
- * Never run an R/C model in the seep or rain, moisture areas, or it may cause the parts malfunction.
- * Please throw the wrapper in time to avoid danger for the children.
- * Regularly examine for damage to the charge, wire, plug, bodyshell or other parts. In the event of any damage, it must not be used until the damage has been repaired.
- * The charge, battery box and battery must insert with the appointed power source of product symbol same.
- * This product must only be used with the original collocation charger.
- * The product is contains the functional outshoots are may be dangerous to the children.

 
- ① Turn left the steering wheel, the car will turn left. Turning left angle can be adjusted by the degree of wheel twisting.

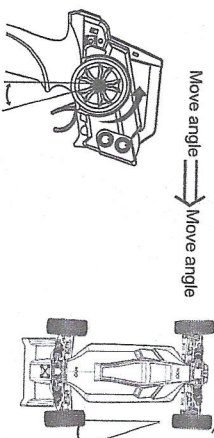

 
- ② Turn right the steering wheel, the car will turn right. Turning right angle can be adjusted by the degree of wheel twisting.

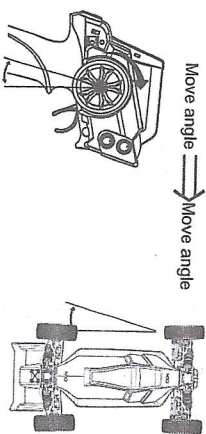

 - ③ Pull the throttle trigger backward, the car will forward. Adjusting the angle of throttle trigger can adjust forward speed of the car. During the car forward, quickly push the trigger forward to stop it.

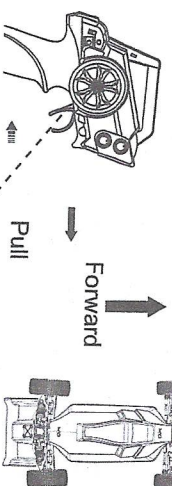


 - ④ Loosen the trigger to make it return the neutral position when brake. Push the throttle trigger forward, the car will backward. Adjusting forward angle of throttle trigger adjust backward speed of the car.

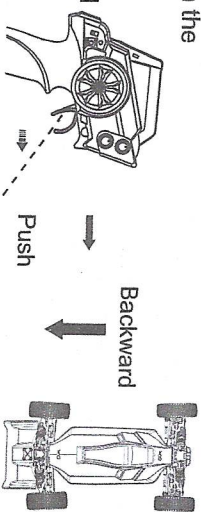



Introduce the common tools and assemble the electron parts

 Tools needed for assembly

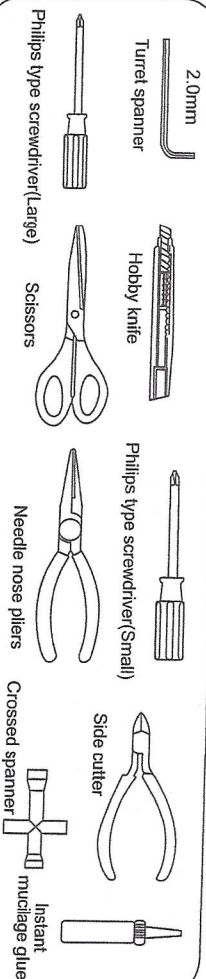


Operating program

  1. Turn on the power switch **1** on the remote and make sure the power indicator **2** flashes red, then turn on the model car's power switch.
2. The model car on the shelf, gently hook remote control on the trigger **3** to observe whether the car can move forward and backward.
3. Turn the remote control steering wheel **4** to the left or right and make sure that the front wheel's steering follows the command.
4. The model car on the ground, and standing behind the model car, gently hook the remote control throttle trigger **3**, if the model car does not go straight, rotate the remote control front wheel trim **5**, the model car to the right side, the front wheel Turn the trim to the left, the model car leans to the left, and the front wheel trims to the right to rotate until the model car can go straight.
5. Throttle speed adjustment **6** can adjust the model car speed, rotate to the right, hook the trigger model car speed becomes faster, turn left, hook the trigger model car speed becomes slower.
6. OK, ready to run.

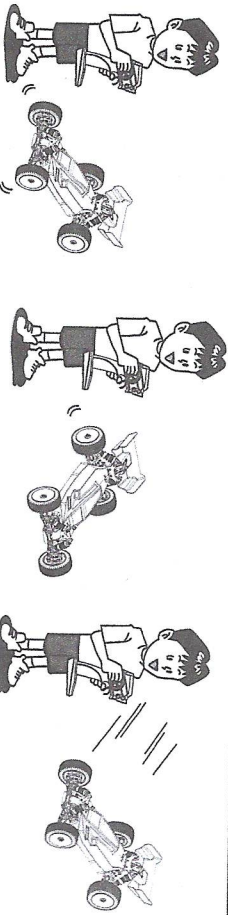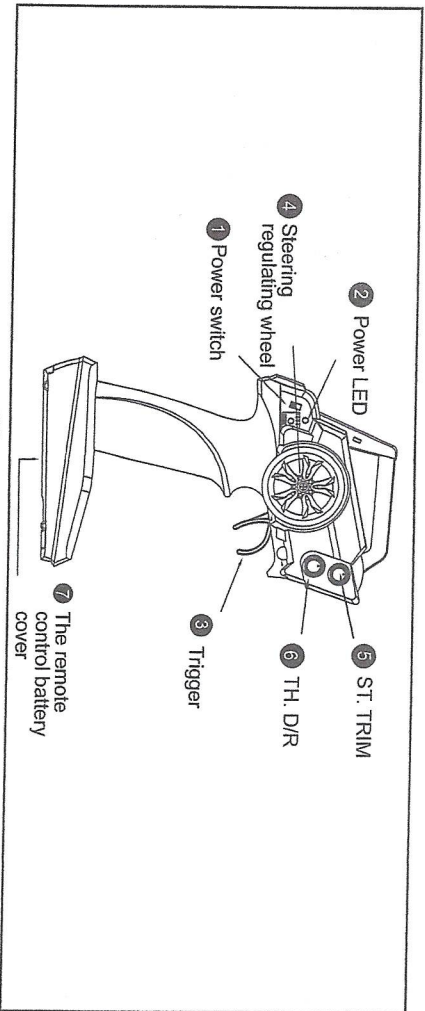


Practice

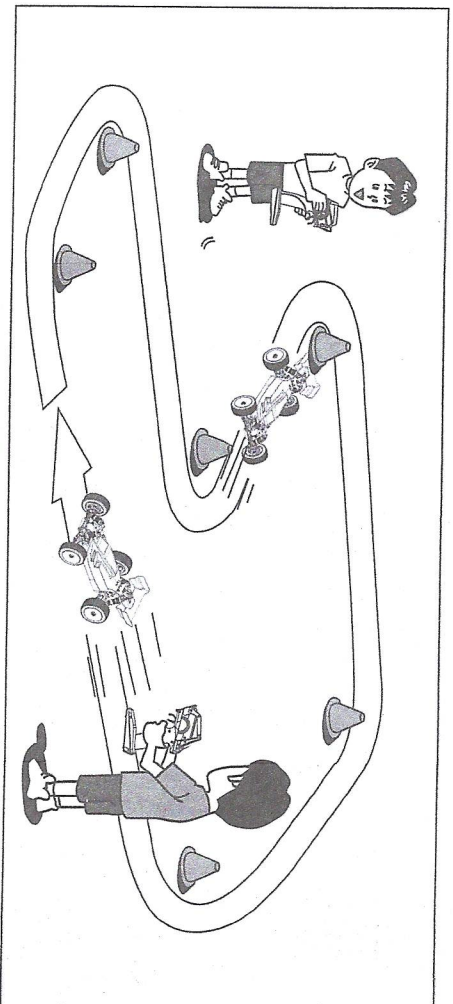 

Let's practice! Make R/C car circuit at a wide and safe location using corner pylons/separately available empty cans or such. Running fast at straight section and slow down at curved section is a basic speed control technique useful when driving R/C car.

 
Maintain

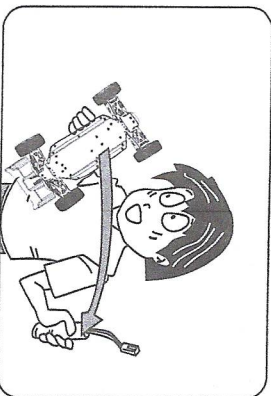


When the car is not in use, you should remove the battery from the car.








 
Completely remove sand, mud, dirt etc.













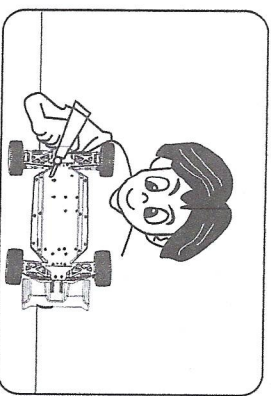


 
Metal outside should apply the rust prevention oil.

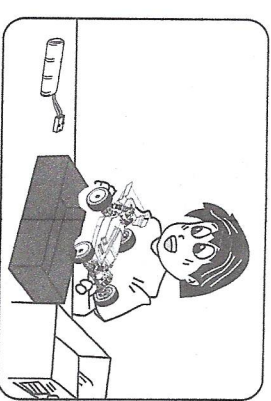

                    Store the car and batteries separately when not in use.

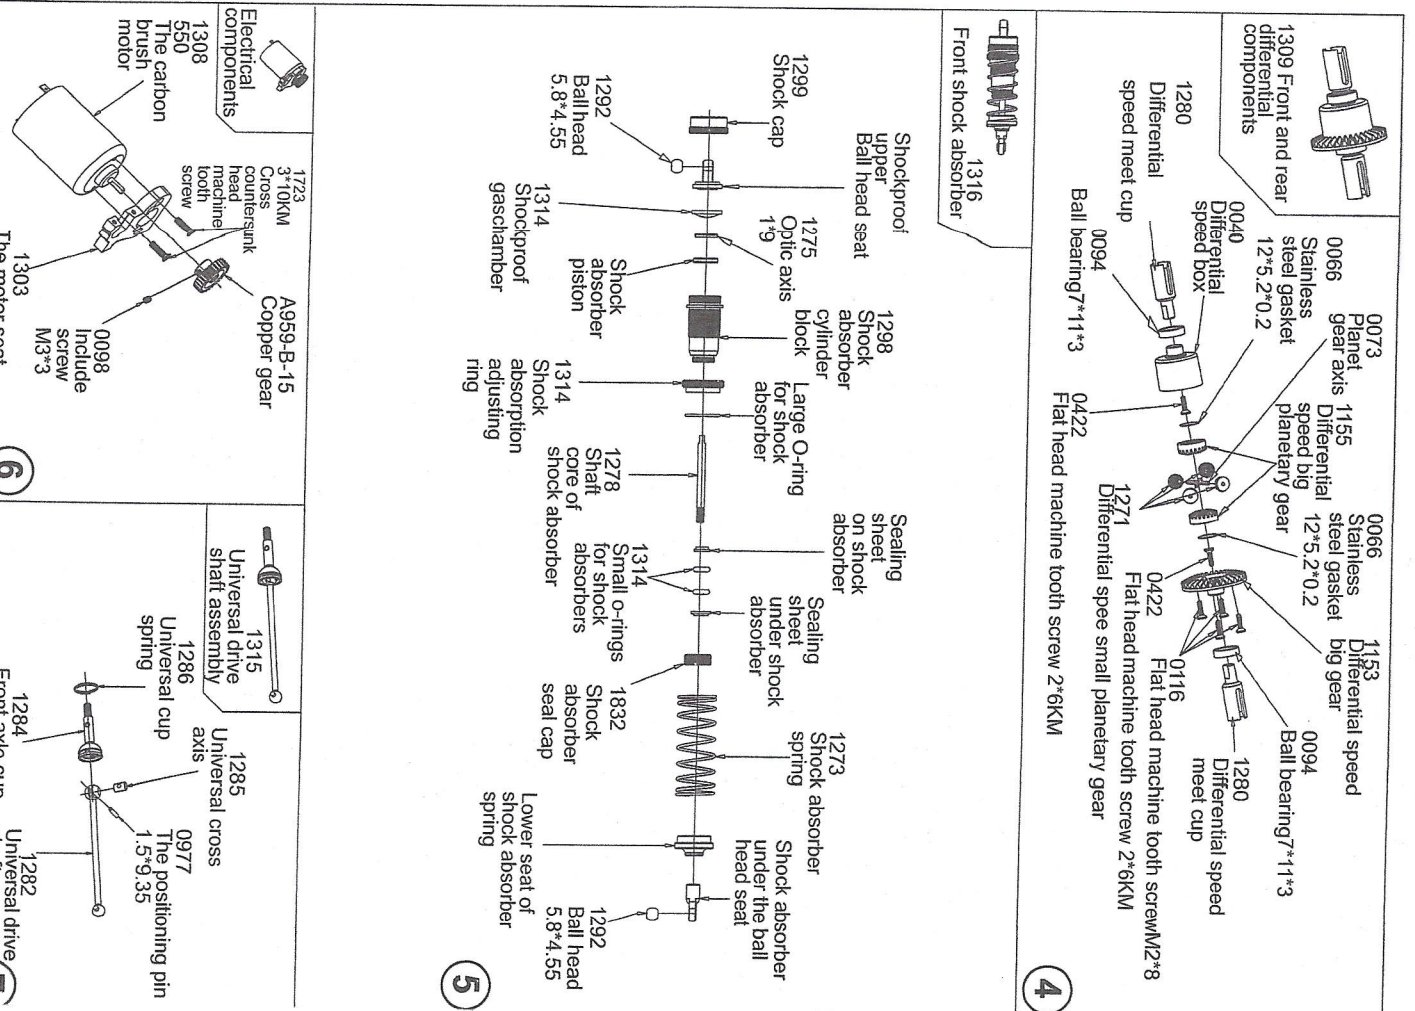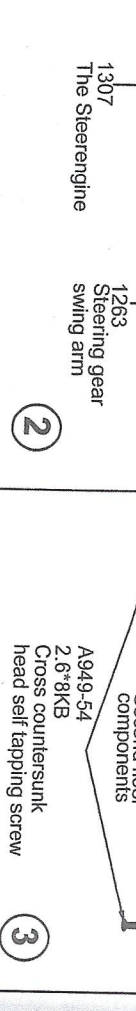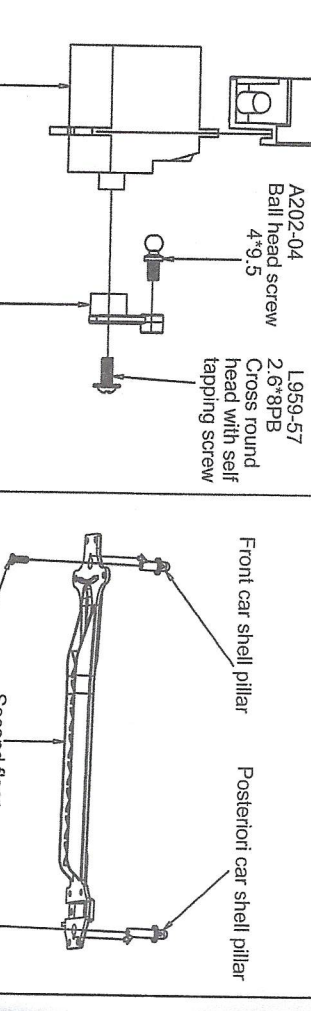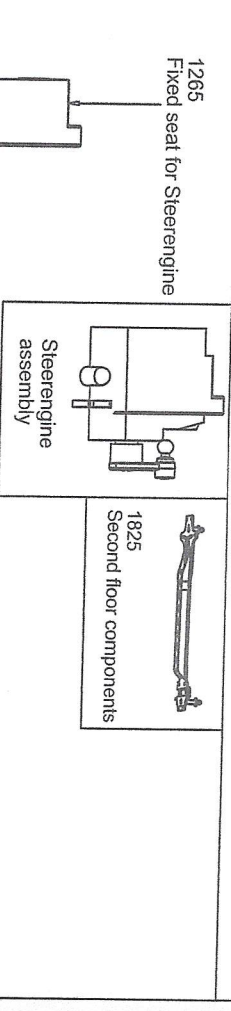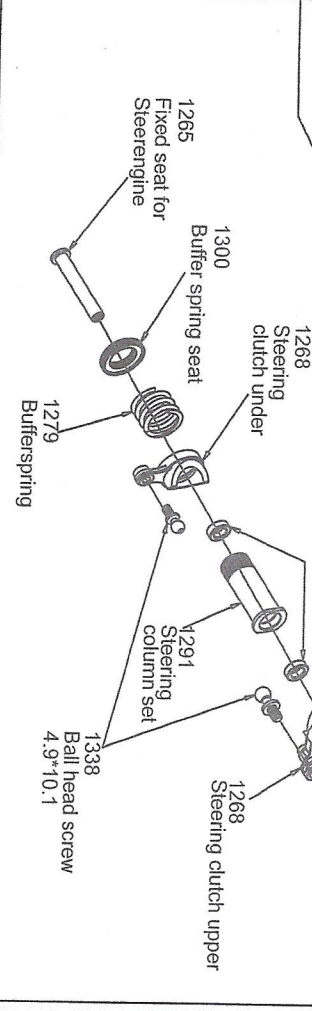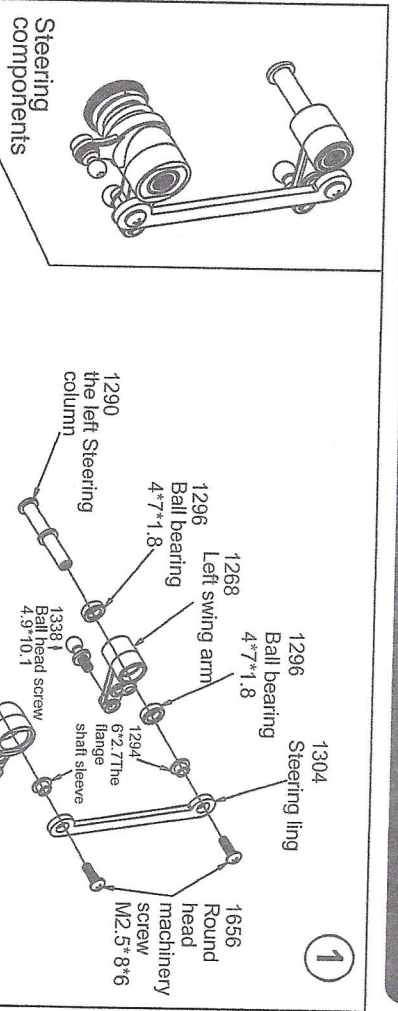


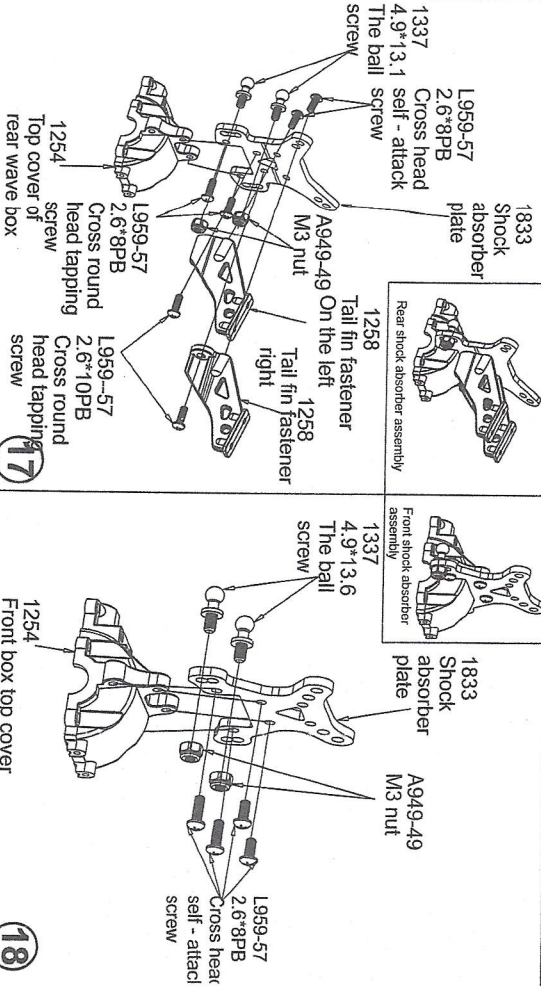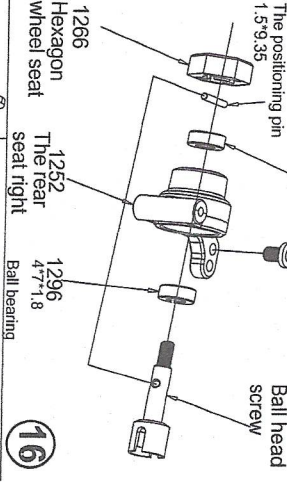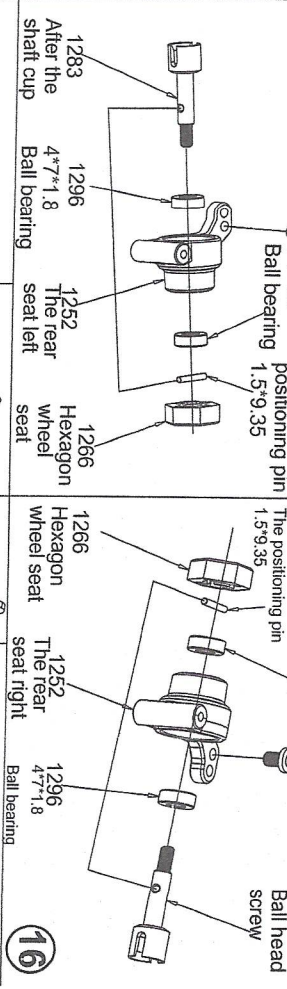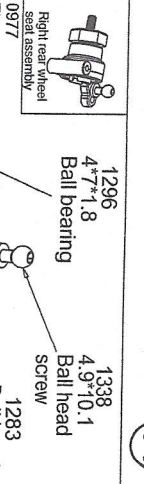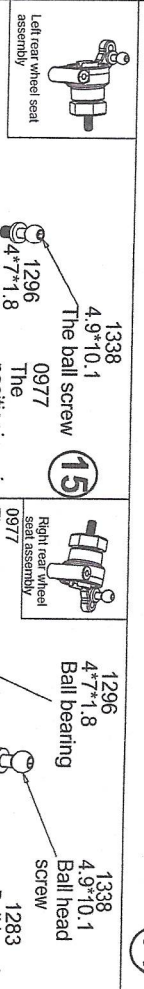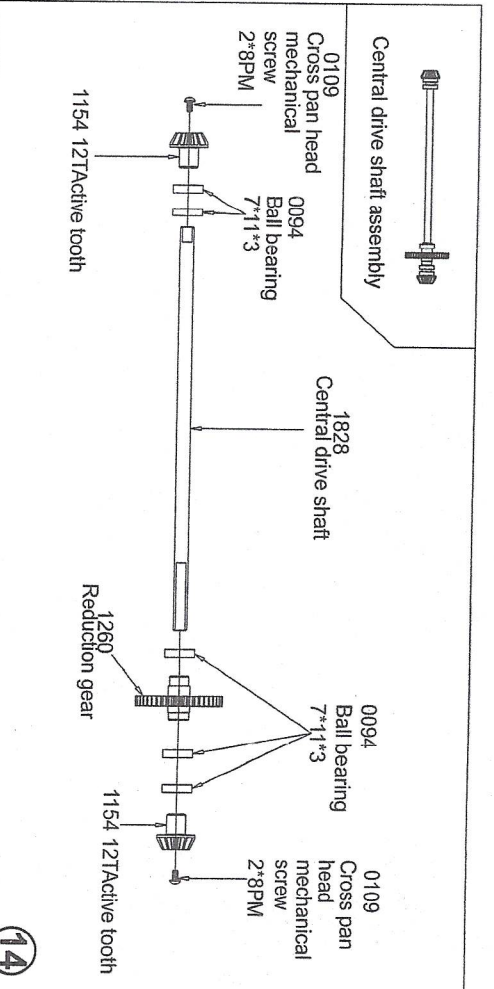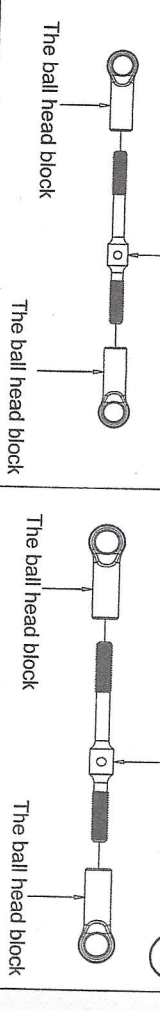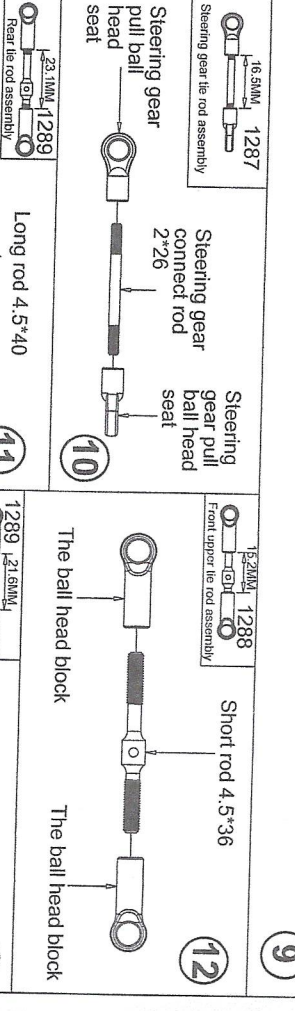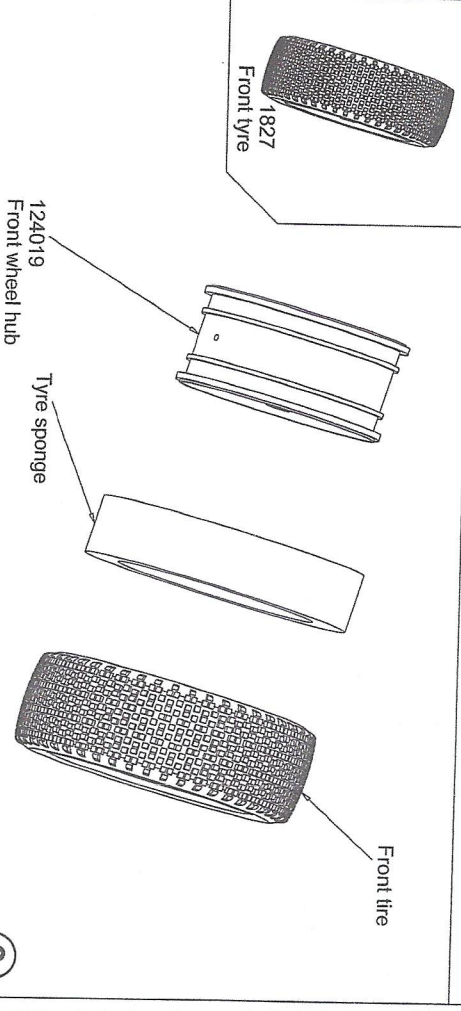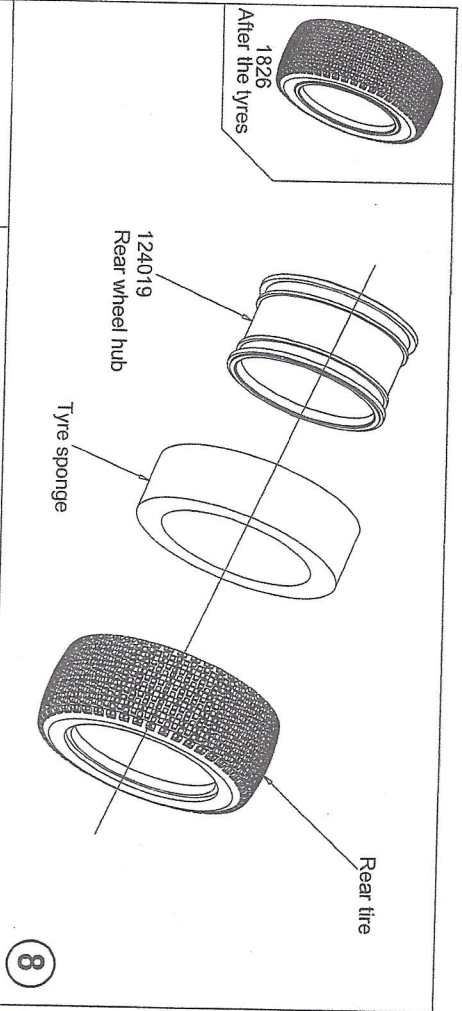

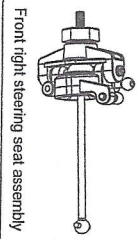

0102
2.5*10PM
Cross round
head machine
tooth screw

 
19

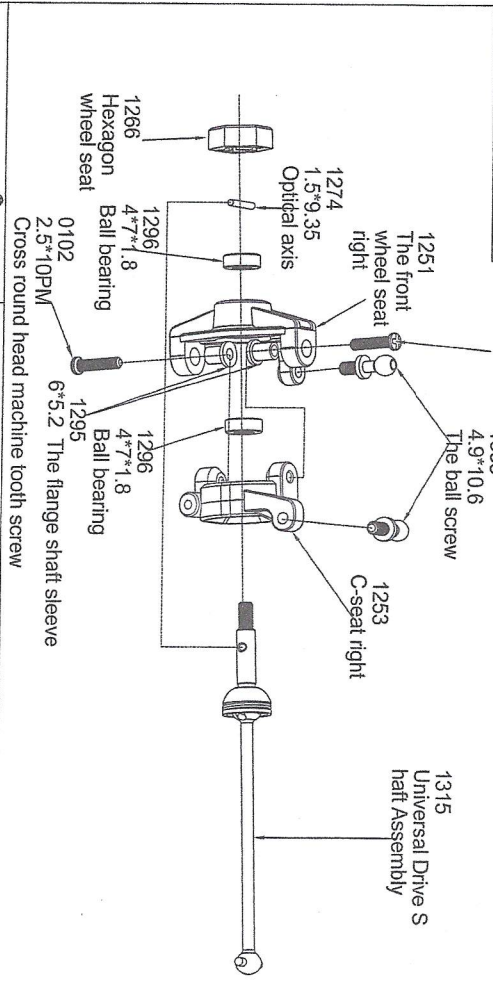


Front turn left to seat assembly

20

 1315
Universal Drive S
haft Assembly

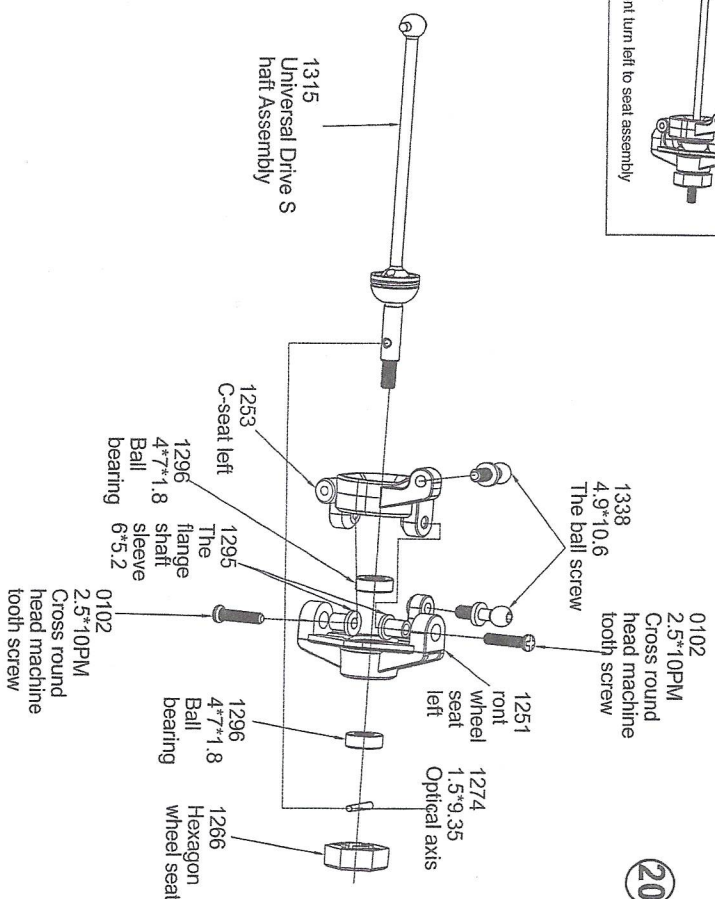


10

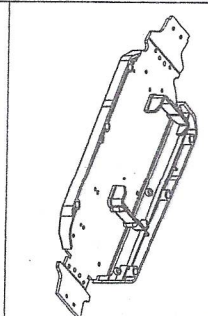 

1261
Battery
compartment
partition-A

 21

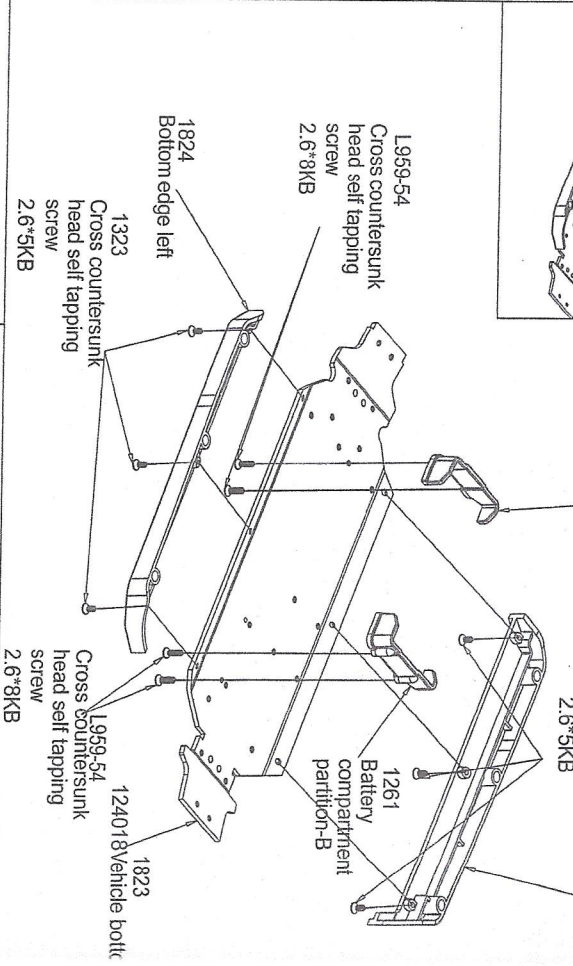


22

Motor assembly

1287
Steering gear tie rod assemb

 
0114
2.5*8KM
Cross countersunk head self tapping screw

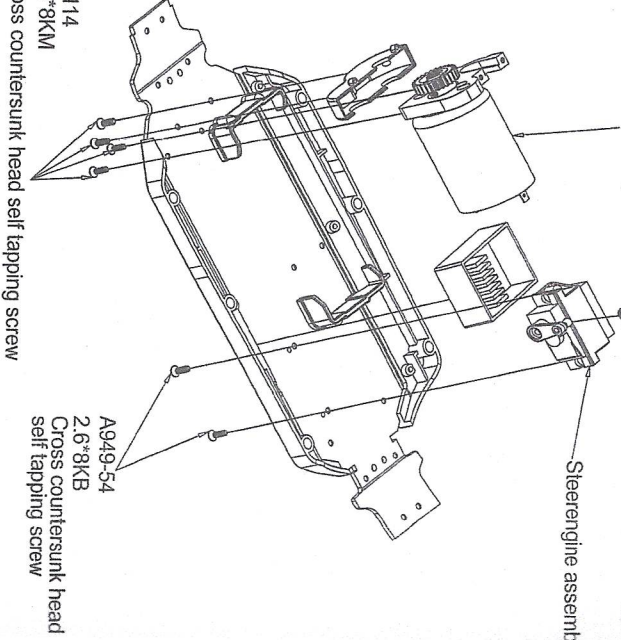

11



 
Rear wave box assembly

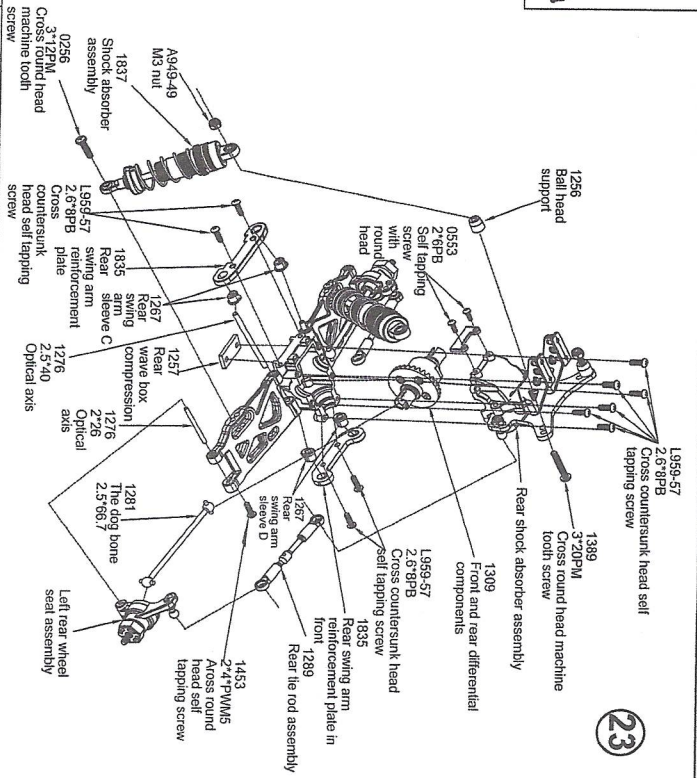


23



 
Front wave box assembly

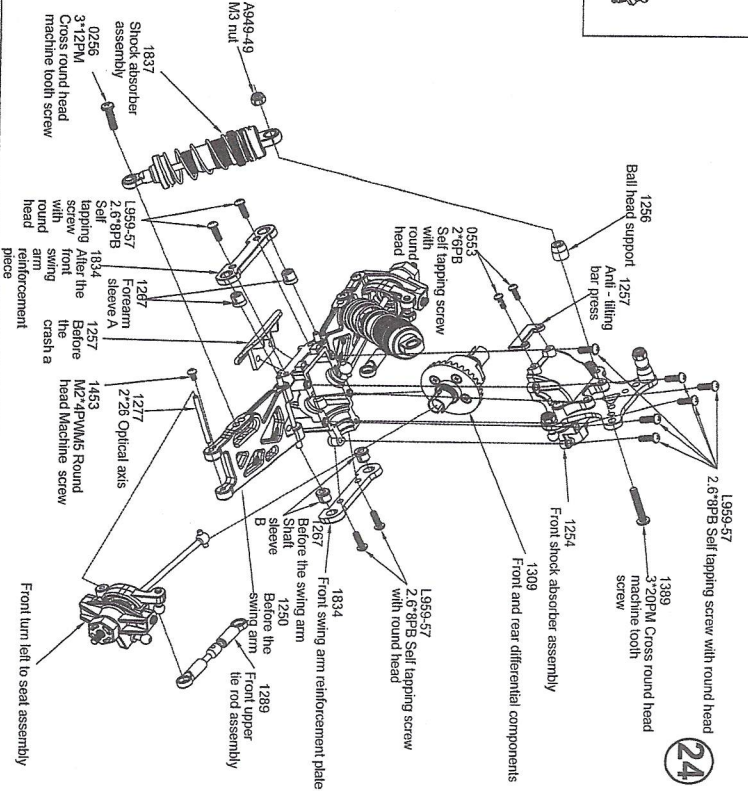


24

 


Motor seat presser

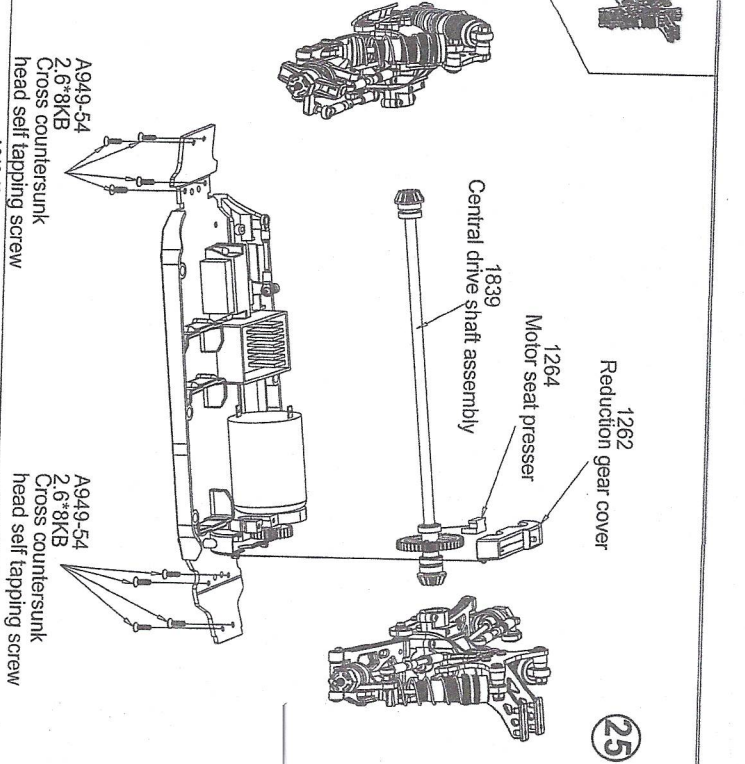 

25

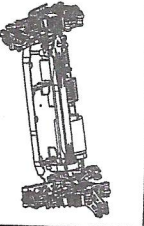 


Front wheel seat assembly

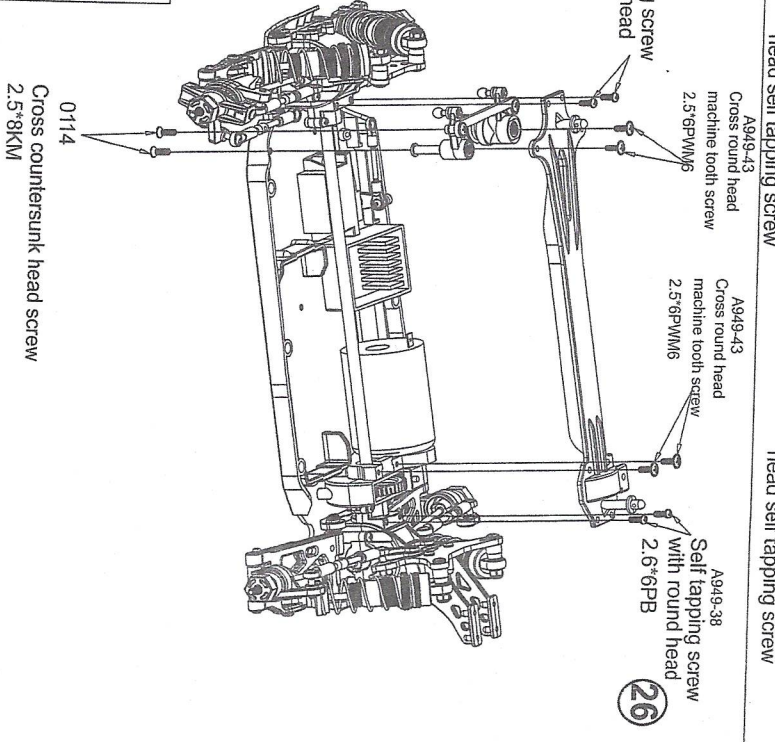 


26

 
Sale parts view

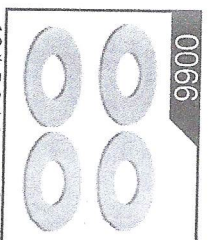


0066
12 * 5.2 * 0.2 gasket set assembly

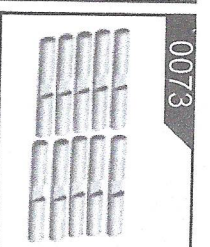 


0073
Differential shaft assembly

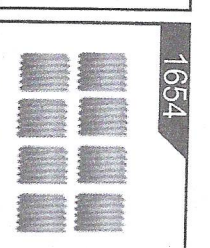 

 
1654
M3*3 Inner hexagonal screw assembly

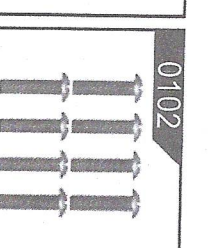


0102
2.5*10PM screw assembly

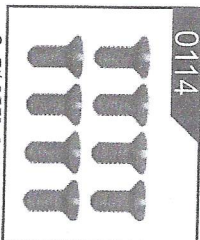 


0114
2.5*8KM screw assembly

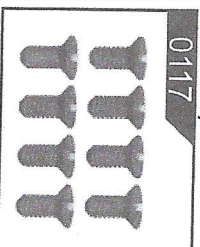 


0117
3*8KM screw assembly

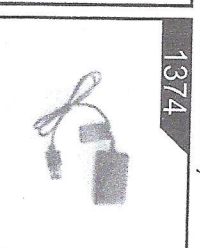 


1374
USB charging line

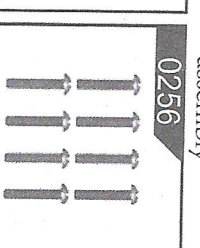 


0256
3*12PM screw assembly

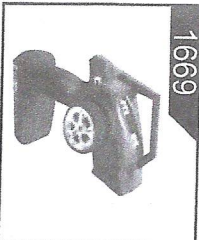 


1669
V2-144001 Remote controller

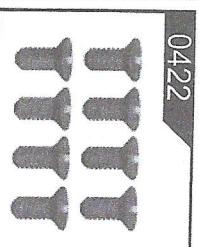 


0422
2 * 6KM screw assembly

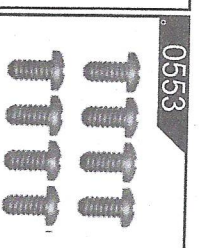 


0553
2 * 6PB screw assembly

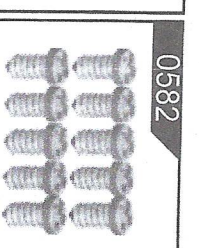 


0582
ST2*7PB screw assembly

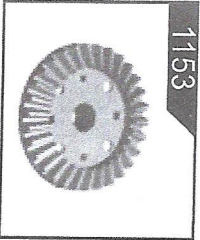 

 
1153
30T Differential Large Teeth(Hardware) Component

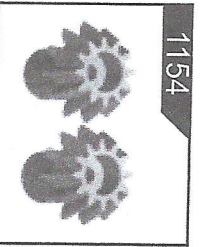


1154
12T Active Teeth(Hardware) Group

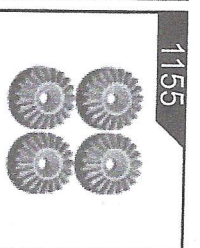 

 
1155
24T Differential Large Planetary Teeth(Hardware) Group

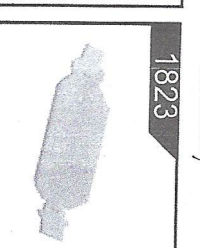


1823
car body assembly

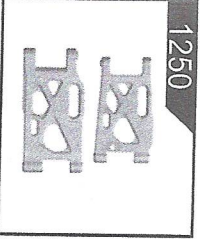 


1250
Front and rear arms

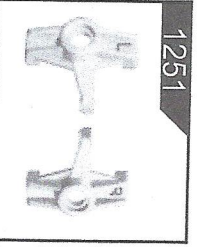 



1251
Front seat assembly

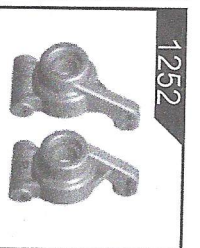 

1252
Rear seat assembly

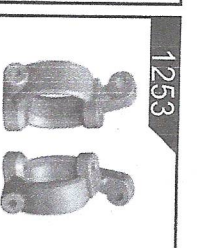 

1253
Type C Block Component

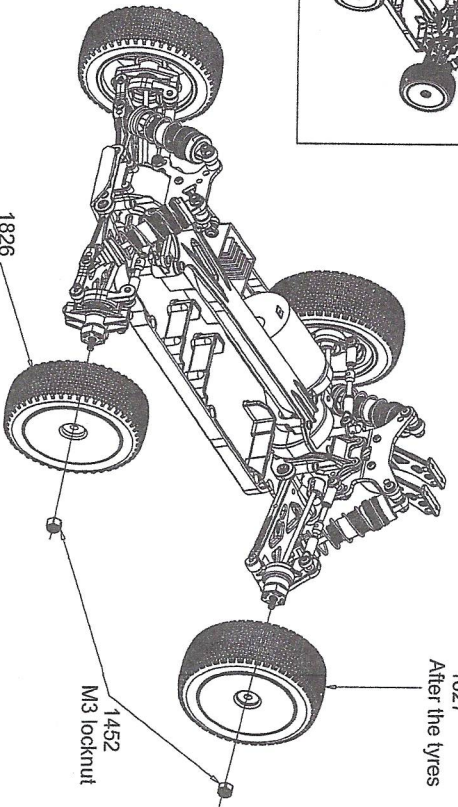 
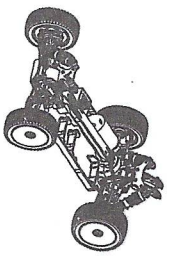 


1826
Front tyre

1452
M3 locknut

1827
After the tyres

  27

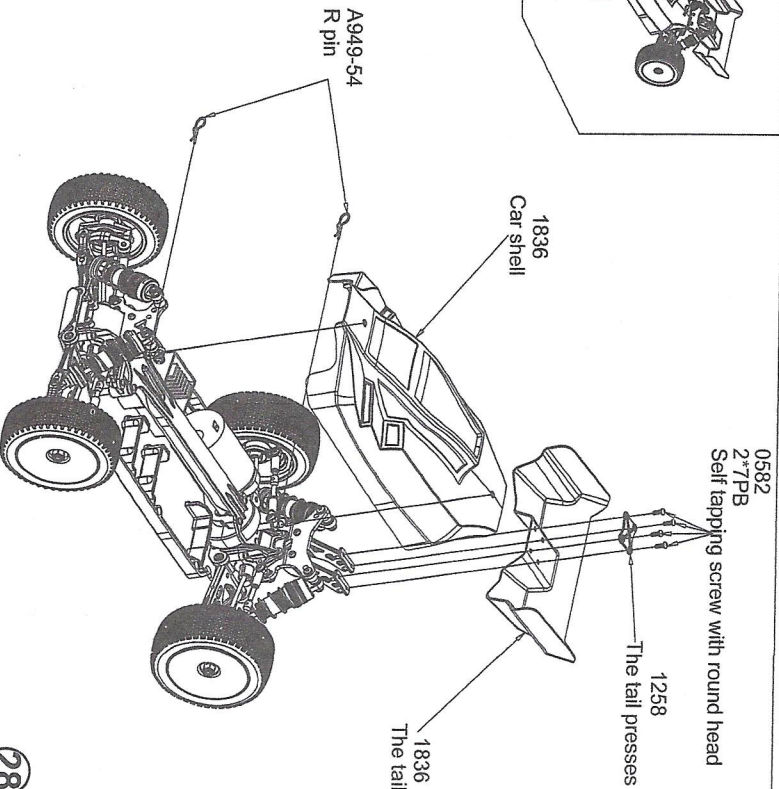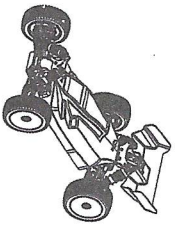

1836
Car shell

1258
The tail presses












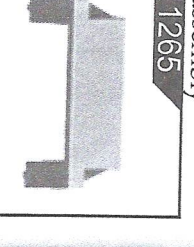
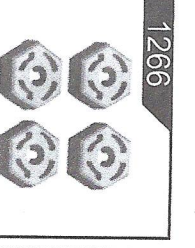
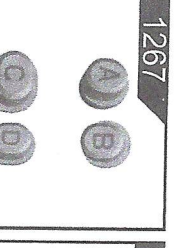
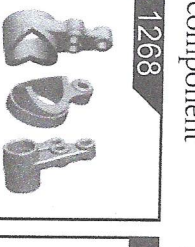
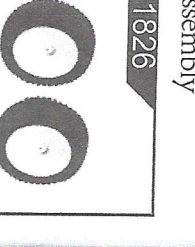
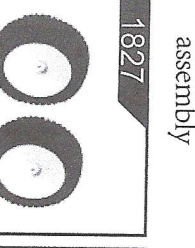
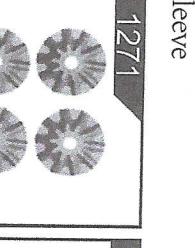
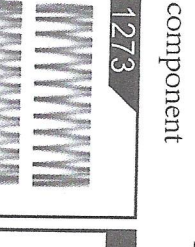
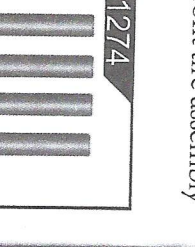
1836
The tail

0582
2*7PB
Self tapping screw with round head








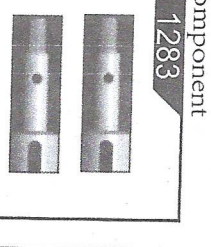
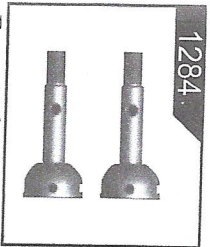
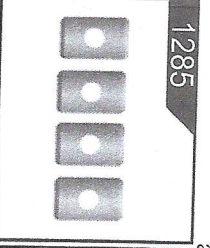
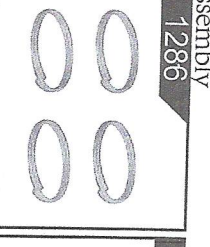
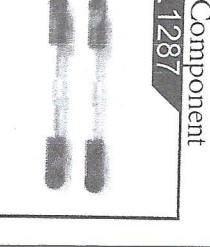
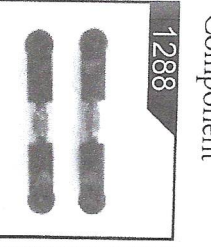
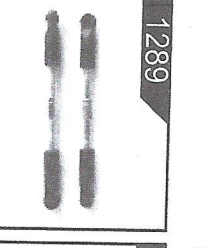
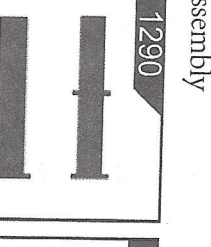
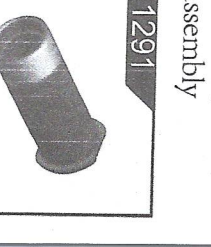
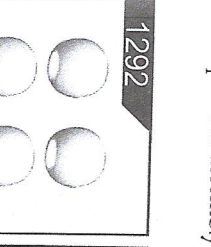
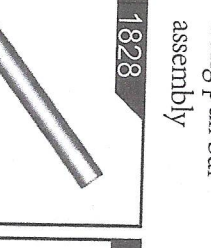
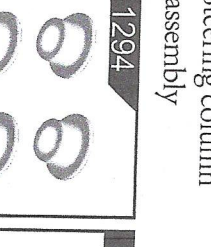
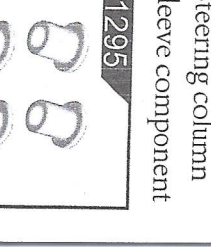
A949-54
R pin

28


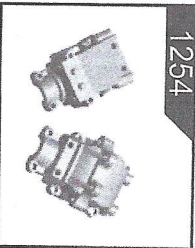
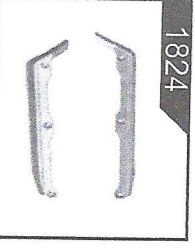
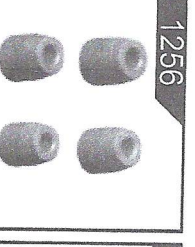
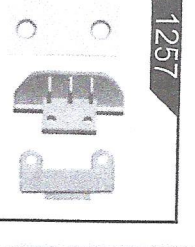
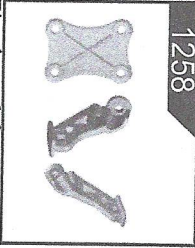
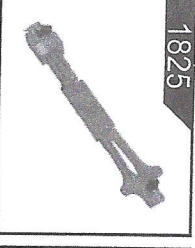
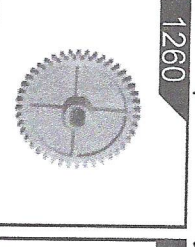
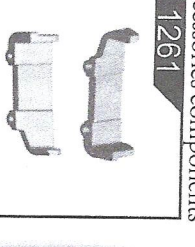

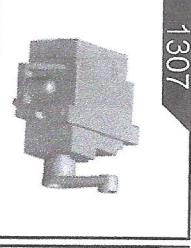
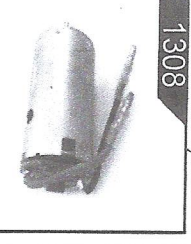

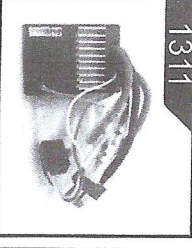




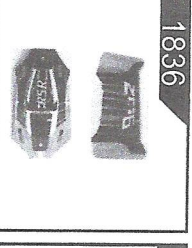
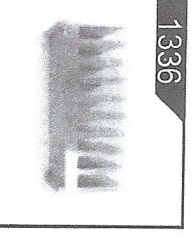
Sale parts view

 1254	 1824	 1256	 1257
 1258	 1825	 1260	 1261
 1262	 1263	 1264	 1265
 1266	 1267	 1268	 1826
 1827	 1271	 1273	 1274

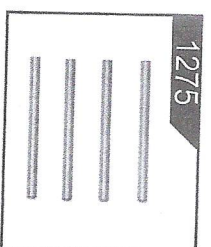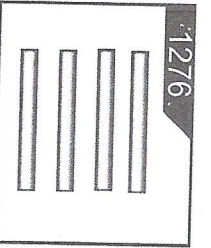
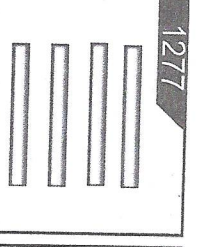
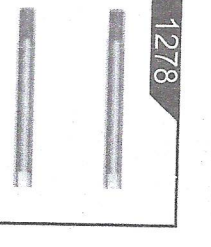
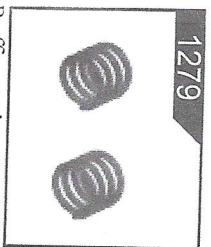
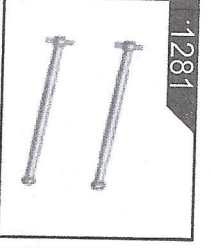

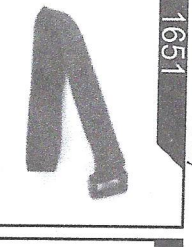
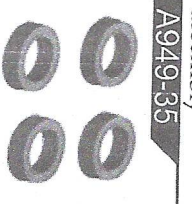

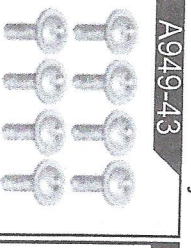

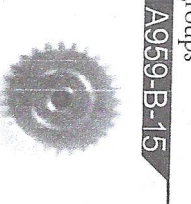

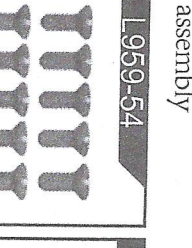
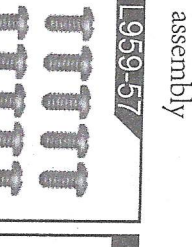
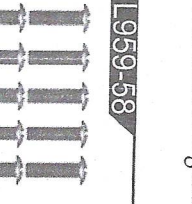
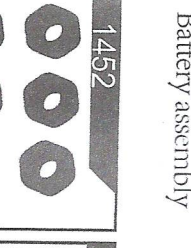
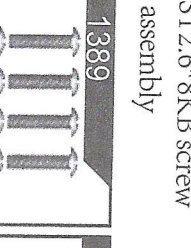
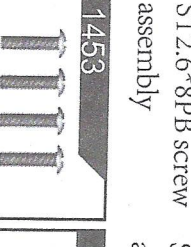
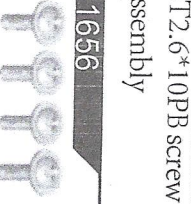
Sale parts view

 1275	 1276	 1277	 1278
 1279	 1281	 1282	 1283
 1284	 1285	 1286	 1287
 1288	 1289	 1290	 1291
 1292	 1828	 1294	 1295

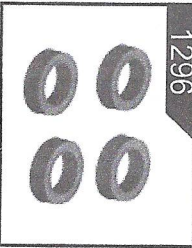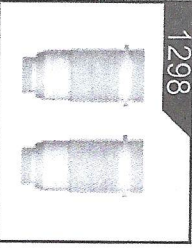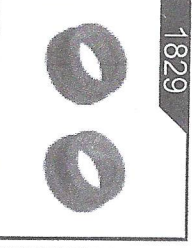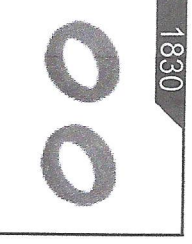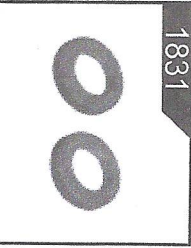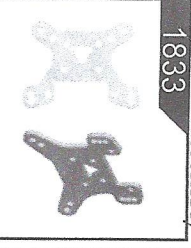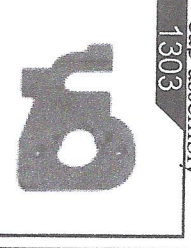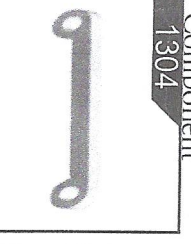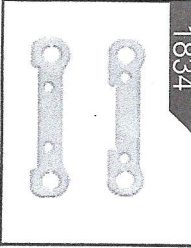
Sale parts view

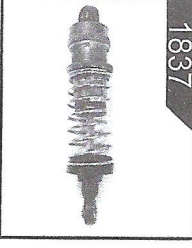	1296		1298		1829		1830
Ball bearing assembly		Shock absorber cylinder assembly		Shock absorber cap assembly		Regulate Ring Component	
	1831		1833		1303		1304
Spring seat assembly		Shock absorber assembly		Motor Block Component		Steering connecting rod assembly	
	1834		1835		1307		1308
Front swing arm reinforcement module		Backswing arm reinforcement module		Rudder assembly		Motor components	
	1309		1311		1314		1315
Differential		Receiver board assembly		Type 0 assembly		Coaxial component	
	1837		1323		1836		1336
Shock absorbers		ST2.6*5KB screw assembly		Car shell components		Heat Discharge Group	

Sale parts view

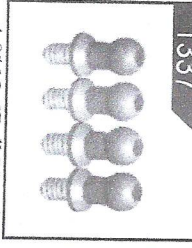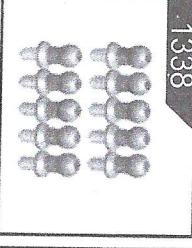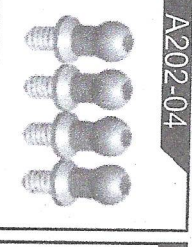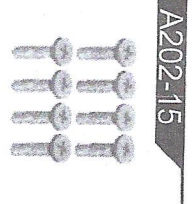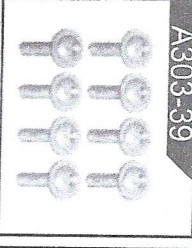	1337		1338		A202-04		A202-15
4.9*1.3 Ball Head screw assembly		4.9*10.6 Ball Head screw assembly		4.0*9.5 Ball Head screw assembly		ST2*8KB screw assembly	
	A303-39		1839		1651		A949-35
ST2.6*6PW/B6 screw assembly		Central drive shaft assembly		Magic paste group		Ball bearings 7 * 11 * 3 groups	
	A949-38		A949-43		A949-49		A959-B-15
ST2.6*6PB screw assembly		2.5*6PW/M6 Screw assembly		M3 Loose nut assembly		Motor teeth 27T group	
	1652		L959-54		L959-57		L959-58
Battery assembly		ST2.6*8KB screw assembly		ST2.6*8PB screw assembly		ST2.6*10PB screw assembly	
	1452		1389		1453		1656
M3 flange nut		3 * 20pm Cross round head machine screw		2*4P/M/5 Cross round head machine screw		2.5*8P/M/6 Cross round head machine screw	

 1832

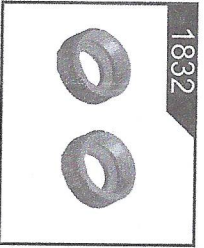

Shock proof sealing
cap 11 * 4.5 sets