



IMPORTANT SAFETY INSTRUCTIONS

ELECTRICAL SAFETY

- A battery-operated fan with integral batteries or must be recharged only with the specified charger for the battery. A charger that may be suitable for one type of battery may create a risk of fire when used with another battery.
- Use battery operated fan only with specifically designated battery pack. Use of any other batteries may create a risk of fire.

PERSONAL SAFETY

- Dress properly. Do not wear loose clothing or jewelry. Contain long hair. Keep your hair, clothing, and gloves away from moving parts. Loose clothes, jewelry, or long hair can be caught in moving parts.
- Avoid accidental starting. Be sure switch is in the off position before inserting fan power adapter. Carrying fans with your finger on the switch or inserting the battery pack or fan power adapter into a fan with the switch on invites accidents.

FAN USE AND CARE

- Do not use fan if switch does not turn it on or off. A fan that cannot be controlled with the switch is dangerous and must be repaired.
- Disconnect fan power adapter from fan or place the switch in the off position before making any adjustments, changing accessories, or storing the fan. Such preventive safety measures reduce the risk of starting the fan accidentally.
- Clean with a damp cloth. Periodically, clean any dust build-up by vacuuming the fan from the opposite direction of air flow.
- Fan service must be performed only by qualified repair personnel. Service or maintenance performed by unqualified personnel may result in a risk of injury.



FAN SAFETY WARNINGS

- Know your fan. Read operator's manual carefully. Learn its applications and limitations, as well as the specific potential hazards related to this fan. Following this rule will reduce the risk of electric shock, fire, or serious injury.
- Battery fans do not have to be plugged into an electrical outlet; therefore, they are always in operating condition. Be aware of possible hazards when not using your battery fan or when changing accessories. Following this rule will reduce the risk of electric shock, fire, or serious personal injury.
- Do not place fans or their batteries near fire or heat. This will reduce the risk of explosion and possibly injury.
- Do not crush, drop or damage battery pack. Do not use a battery pack or charger that has been dropped or received a sharp blow. A damaged battery is subject to explosion. Properly dispose of a dropped or damaged battery immediately.
- Batteries can explode in the presence of a source of ignition, such as a pilot light. To reduce the risk of serious personal injury, never use any cordless product in the presence of open flame. An exploded battery can propel debris and chemicals. If exposed, flush with water immediately.
- Do not charge fan in a damp or wet location. Following this rule will reduce the risk of electric shock.
- Do not incinerate the fan even if it is severely damaged. The batteries can explode in a fire.
- To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
- For general ventilating use only. Do not use to exhaust hazardous or explosive materials and vapors.
- To reduce the risk of personal injury and electric shock, the fan should not be played with or placed where small children can reach it.
- Save these instructions. Refer to them frequently and use them to instruct others who may use this fan. If you loan someone this fan, loan them these instructions also.