



Simple life



NOTICE OF ASSEMBLE

-Making tips

- 1. LED wiring indication: White=Positive; Grey=Negative.
- 2.Use a craft blade to carefully skim over the plastic to bare the copper wire.
- 3. For LED wiring extension, please refer to the below steps:

 




Twist the copper of both LED wire and extension wire together.



Do the same on the white wire.
Remarks: Tie a knot at the end of the grey wire to differentiate the polarity.



Place the duly twist wire on the tapes provided.



Roll and wrap the wire.



Place another wire next to it. Remarks: DO NOT contact both copper wire to avoid short

circuit.



Roll and wrap it together.

Warnings

- The product is not suitable for children under 14 years old. The should be under custody of adults when playing with the
- There are small parts, please do not swallow them for avoiding dangerous accidents.

Tips for assembling

- 1. Picures shown on the package may be slightly different from the actual product.
- 2.Please use the provided tracing paper for cutting purpose to achieve the best
- outcome.
- 3. Product designs and specification may be subject to change without advance notice for purpose of making improvement.
- 4. Testing on LED function:



DO NOT contact the LED wire end direct to the battery cell.



Use the provide battery holder. Make sue the correct polarity.

How to assemble the battery holder



Material and tools needed:
 Battery holder, LED bulb,
tape, screw driver and 2 piece
AA size battery(not provided)



2. Use screw driver and take the lid off from the battery holder.



3. Insert the battery take notes on the polarity.



4. Connect the red wire to grey wire. Connect the black wire to white wire.




5. Wrap the exposed wire with the tapes.





6. Place the box lid and fastness with screw driver.


Product information




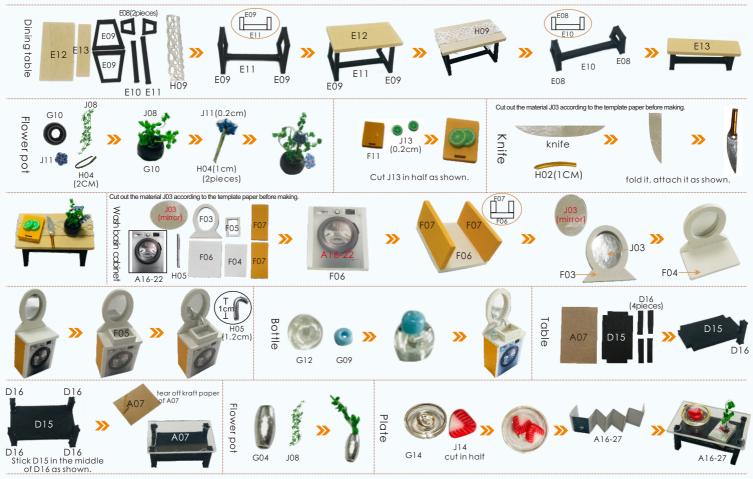


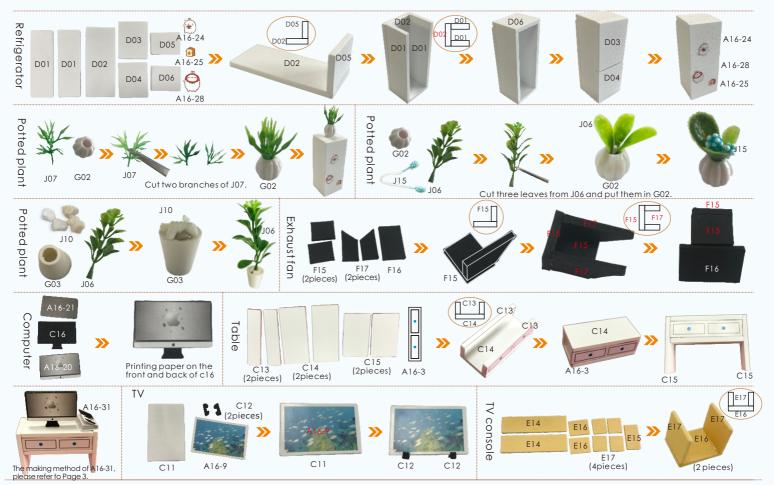


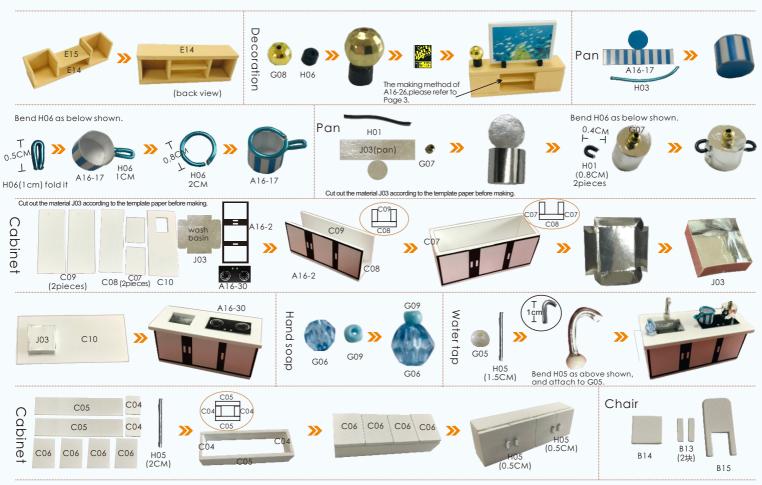

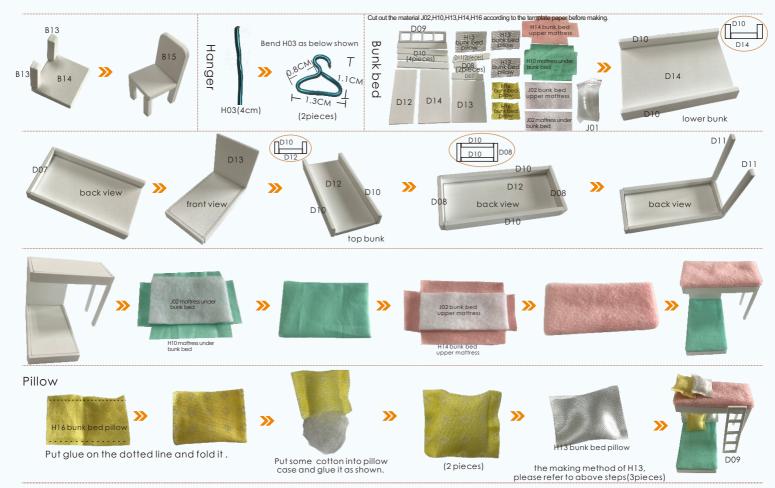


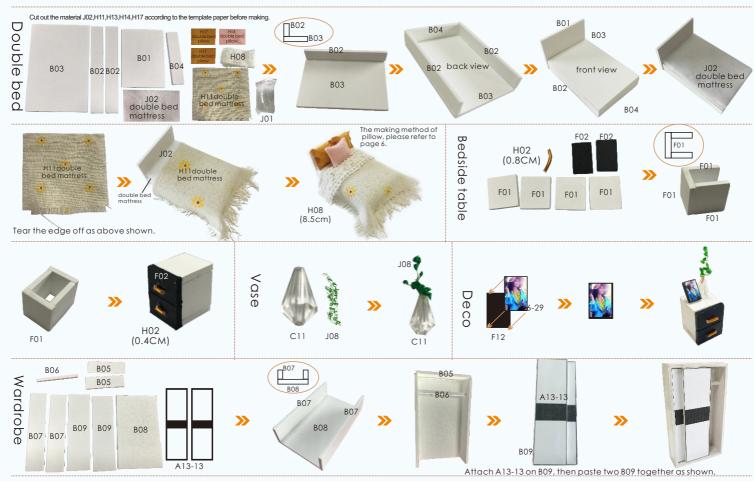

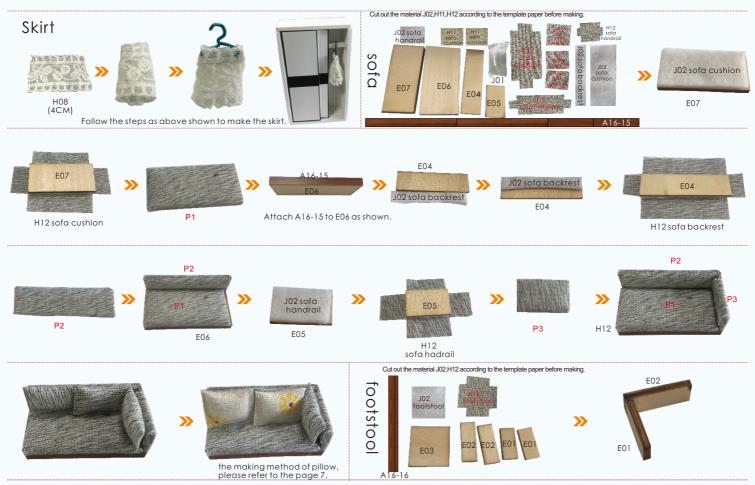

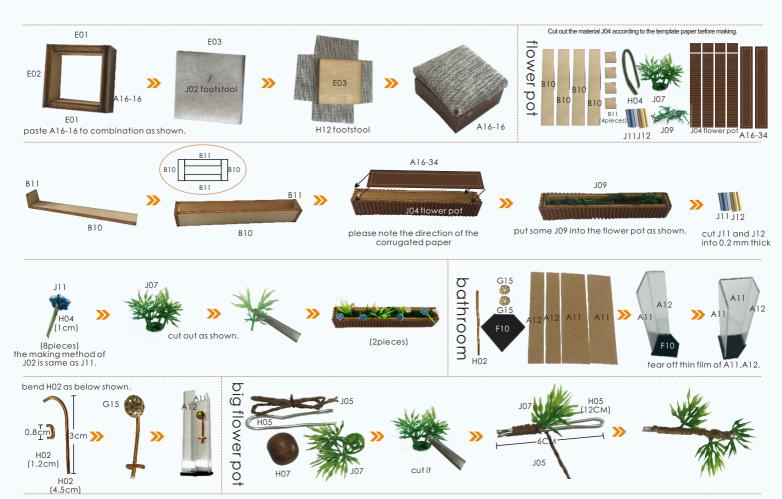



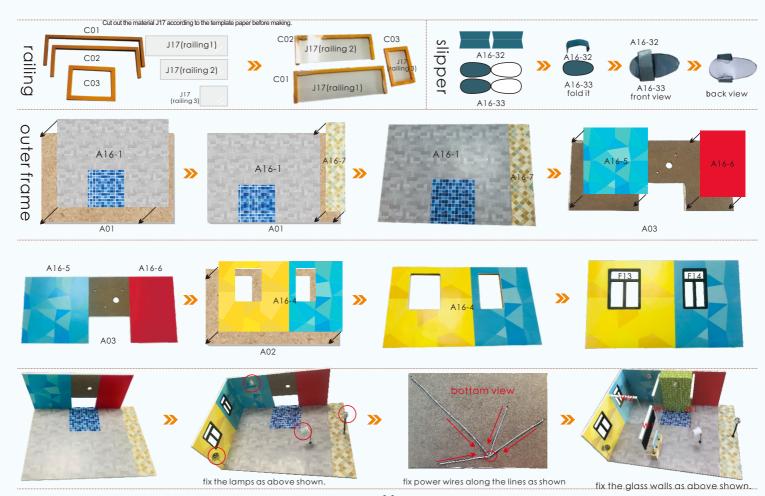



(If you have purchased the music machine core, please fix it firstly)



L05 Music machine core 1piece



Music machine core handle 1piece



L07 Screw 3pieces




L07 _

front view



fix the music movement on A03 as shown.

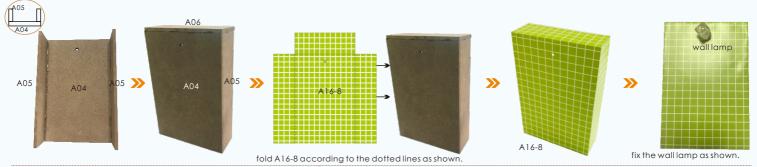



fix power wires as above shown Please follow this line to prevent the music machine for running

How to assemble the battery holder **Statement: the lamp wires cannot be** inserted into the output socket.

- Can use 7 batteries
 Please notice the place of anode
 and cathode when pit in the batteries
 Rechargeable batteries are not blumt electricity
 Rechargeable batteries can only be charged under adult supervision
- -- Rechargeable batteries should be
- removed from the toy before charging -- Different types of batteries cannot mix:
- Do not mix new batteries in use with semi-used
- --Run out of battery should be removed from the toy -- The power shall not be short circuit



Use a craft blade to carefully skim over the plastic to bare the copper wire. Twist the same color wire together.



Twist the following wire together:
(I) BLACK wire from the battery box with the WHITE wire from LED bulb. (II) RED wire from the battery box with the GREY wire from LED bulb.



Roll and seal the duly twist copper with the white tape K03 provided. Place the battery box in the allocated space.





A16-12

Installation of dust proof cover (For updated version, the parts need to be purchased separately)







scale 1:6 L01 Transparent cover 28*19*0.2cm 1piece

>>>



scale 1:6 L02 Transparent cover 19*10.5*0.2cm 1piece




scale 1:6 L03 Transparent cover 27.2*10.5*0.2cm 1piece



scale 1:6 L04 Transparent cover 10.5*3.7*0.2cm 1piece



1. Tear off kraft paper of each piece of transparent cover.

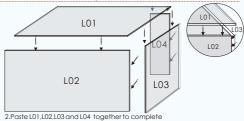

the dust proof cover as shown.





















