
## **Underdome Bell Instructions**

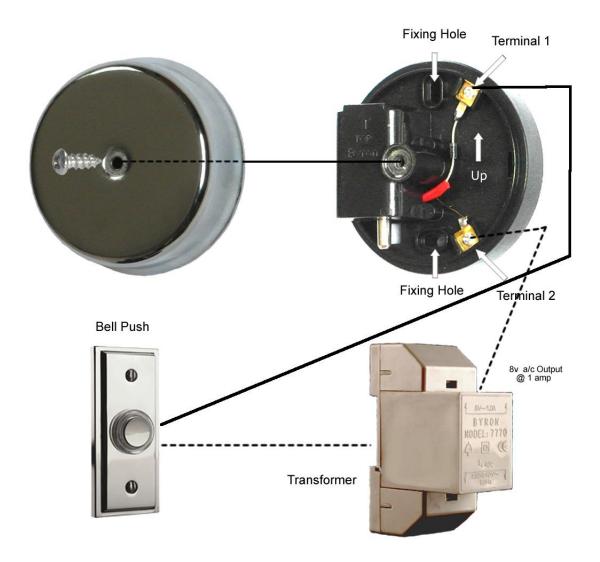

The bell system is wired in a series arrangement with the underdome bell, bell push button and transformer all part of the circuit. When the bell push is pressed, this completes the circuit, power passes through the bell and the bell continues to ring as long as the bell push is pressed.

The base of the bell unit will need to be unscrewed from the wooden plinth for the bell wire to be fed in. The base should then be screwed back onto the plinth in the same position as before.

The Underdome bell is powered by an 8 volt, 1 amp transformer. Wire the bell to terminals 1 & 2 as shown in the diagram. Replace the dome cover and gently tighten the screw and adjust the dome clockwise or anti-clockwise for the best tone

Important: Do not wire directly to the mains. If in doubt please consult a qualified electrician.