

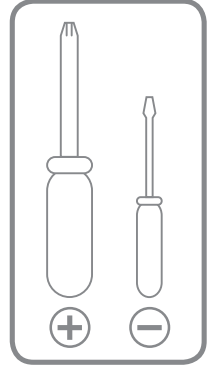
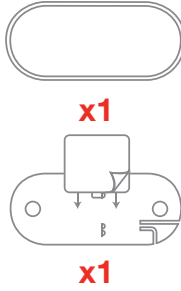
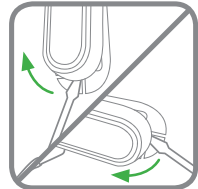
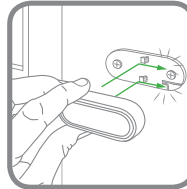
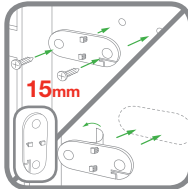
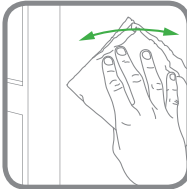
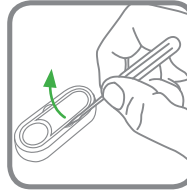
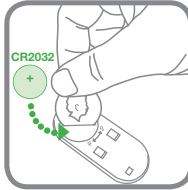
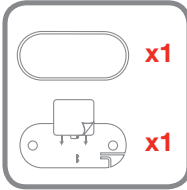
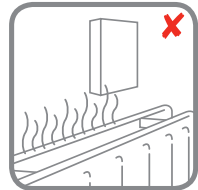


DC311XXP2/BS
DC313XXP2/BS


05 Contents 06 Inhalt 07 Contenu 08 Inhoud 09 Sisältö
 10 Indhold 11 Contenido 12 Contênto 13 Conteúdo
 14 Περιεχόμενα 15 Innehåll

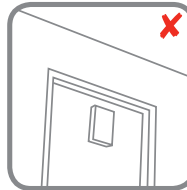


06 Getting started 07 Erste Schritte 08 Démarrage 09 Aan de slag 10 Αποτύπωση 11 Kom i gang
 12 Operazioni preliminari 13 Para empezar 14 Para começar 15 Πρώτα βήματα 16 Kom igång

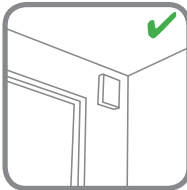



- DE Optional features
- FR Options disponibles
- IT Valinmaiset ominaisuudet
- UK Valgíríe funktoner
- ES Opciones disponibles
- PT Προαιρετικές λειτουργίες πρόσθετων
- SE Möjliga funktioner

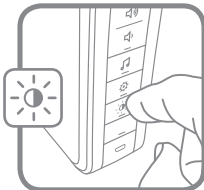

	Hello	Ding Dong	Westminster	Marimba	Piano	Bell	Telephone	Soft Alert
	•	•					•	•
	•	•	•	•			•	•
	•	•	•	•	•	•	•	•

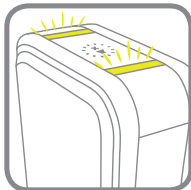

- DE Linking
- FR Einlernen
- IT Programmation
- UK Verknüpfung
- ES Linkittäminen
- PT Forbinde
- SE Collegamento
- SE Enlace
- PT Programação
- SE Övöndöer
- SE Länkning

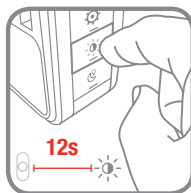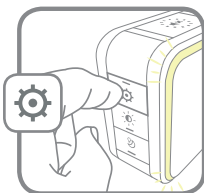

- DE Trouble shooting
- DE Fehlerbehebung
- FR Dépannage
- UK Probleemoplossing
- FI Vianmääritys
- UK Problemlösning
- IT Risoluzione dei problemi
- ES Solución de problemas
- PT Resolução de problemas
- GR Αντιμετώπιση προβλημάτων
- SE Felsökning

livewell.honeywell.com

