


Installation instructions for the Imperial London Bell

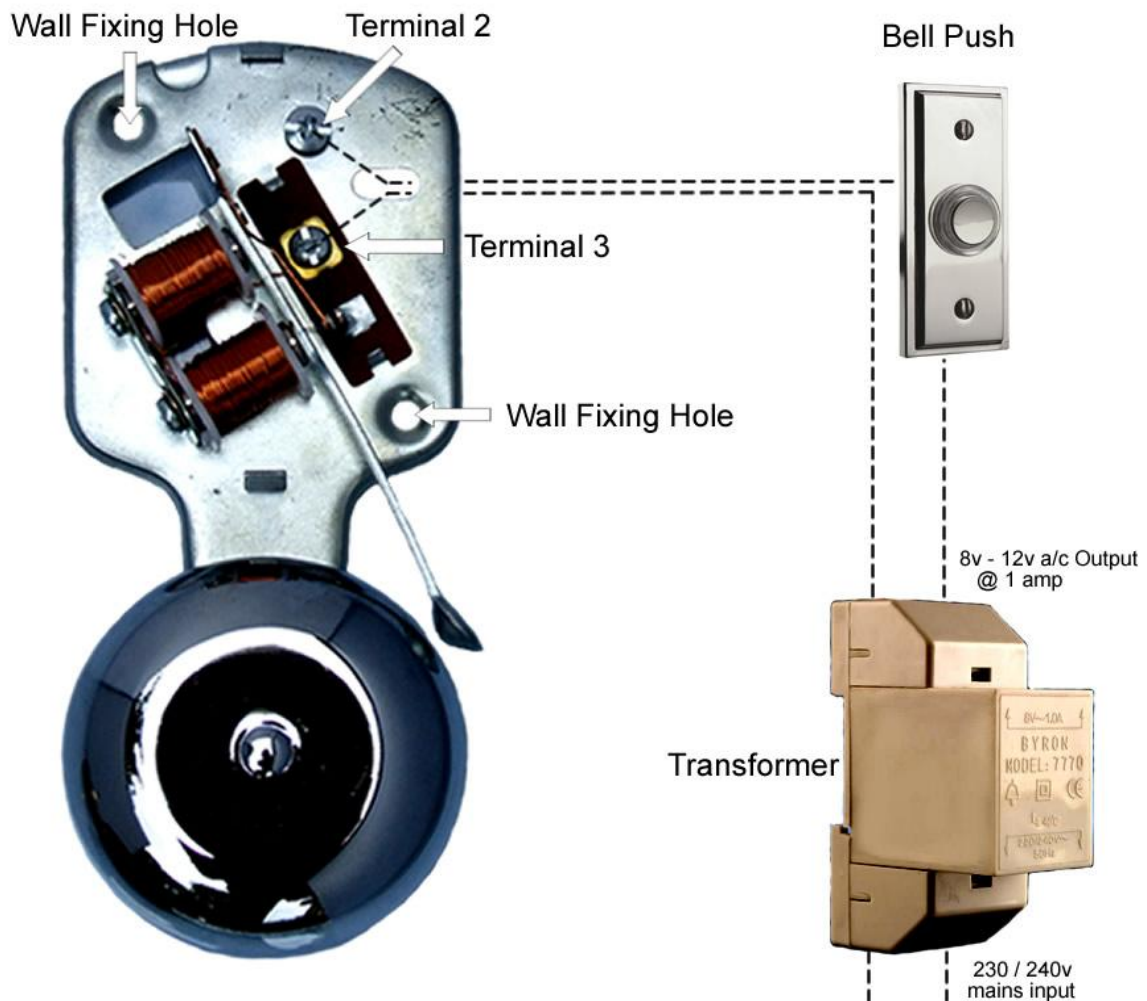

The Imperial London Striker bell / buzzer is powered by a transformer only, with an output voltage requirement between 8 and 12 v a/c, and power output of 1 amp. If 2 bells are wired into the same system then a transformer with a 2 amp output is required.

Remove the wooden cover, and mount to the wall, screwing through the holes provided at the top of the London bell. Wire the bell terminals 2 & 3 as shown in the above diagram.

IMPORTANT DO NOT WIRE DIRECTLY TO THE MAINS. IF IN DOUBT PLEASE CONSULT A QUALIFIED ELECTRICIAN.