

2014+ Sea Doo Spark Diagnostic Port

Step 1: Remove the engine access panel located on the left side of the upper hull.

Step 2: Underneath the coolant reservoir will be the diagnostic port. Push in on the tab and remove the connector out of the blank.









