

Sherpa WINCHES

THE ULTIMATE RECOVERY WINCH

www.sherpa4x4.com.au | info@sherpa4x4.com.au

WINCH WIRELESS CONTROLLER PAIRING GUIDE



SHERPA 4x4 WINCH WIRELESS CONTROLLER PAIRING GUIDE

Use this guide to pair your wireless controller with the receiver if they are not already matched or if the original factory pairing has been lost.

IMPORTANT: Ensure the **battery in your wireless remote** is not flat before beginning the pairing process.

STEP-BY-STEP INSTRUCTIONS

Step 1. Ensure your winch is installed and functioning correctly using a wired remote control.

Step 2. Disconnect the wired remote and plug in the wireless receiver box in its place.

Step 3. Disconnect the positive (+) cable from the battery or winch to completely remove power from the receiver.

Step 4. Turn on the wireless remote by holding the top button for approximately 3 seconds until the red LED light illuminates.

While the red light is on, press and hold both the IN and OUT buttons simultaneously on the remote. Keep holding these buttons until the end of Step 5.

Step 5. While still holding IN and OUT on the remote, reconnect the positive (+) cable to the battery or winch within 1.5 seconds of Step 4.

This powers up the receiver and initiates the pairing process.

Pairing Complete. If successful, the remote should now operate the winch normally. If pairing fails, repeat Steps 1–5 carefully.

CONTACT

Scintex Australia
47 Eagleview Place
Eagle Farm QLD 4009 Australia

P: 1300 246 406
E: info@sherpa4x4.com.au