


FES-029

Snow Peak High Tension Cot Black

Thank you for purchasing a Snow Peak product. This product is a one-person cot with foldable legs for easy storage. Please read this instruction manual before using it and keep it for future reference. Please confirm all components and set up instructions before using. If you are not clear on any point, contact your local Snow Peak dealer before use.

Contents Included (Name of Parts)

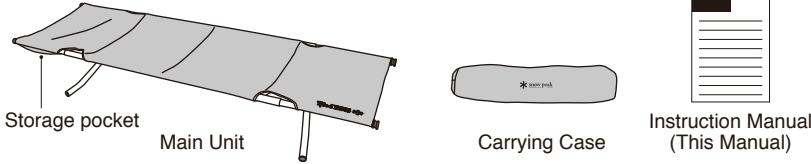

Specifications

- Material / Main Unit Pole: Aluminum, Side Pole: Stainless Steel, Seat: Polyester 600D / PVC Processed, Pockets: Polyester, Nylon, Polyurethane, Carrying Case/Polyester 600D / PVC Processed
- Stowed: 1,250×165×145(h)mm / 49.2"×6.5"×5.7"
- Size: 2,000×650×320(h)mm / 78.7"×25.6"×12.6"
- Weight: 7.3 kg / 16.1 lbs
- Load bearing capacity: Storage pocket small 700g / 1.5lbs, Storage pocket large 1kg / 2.2lbs

Safety Precautions: Read the following instructions thoroughly to ensure safe and proper usage.

⚠ DANGER / Incorrect handling may result in death or serious injury to the user.

- Do not use this product near a heat source such as a lantern, burner, or open flames such as bonfires. The seat cloth may catch fire and cause burns if the product is used near a heat source or open flames.


⚠ WARNING / Misuse could result in serious injury or death to the user.

- The exposed metal parts on this product may be hazardous to children. Please use caution to ensure they do not hit their head or body on the metal parts.
- Ensure this product is used under adult supervision to avoid unexpected accidents, such as falls.
- Due to the structure of this product, there are no legs at the end of the body. If you sit on the edge, the opposite side will rise, and you may fall over. When you sit on this product, please sit in the center and not the edges.
- Please do not stand, lean to one side, or sit lightly on this product. Improper use may cause you to fall or injure yourself.


⚠ CAUTION / Indicates actions that may lead to injury, damage to the product, or damage to other items.

- When setting up and disassembling, be careful with the folding legs to avoid pinching your hand or fingers. Open and close the legs slowly.
- Place the product on stable ground and not on sloped or uneven ground. A rough surface may increase the risk of falls or injury. Also, when using inside the tent, please check to ensure there are no hard objects such as stones under the tent. Sharp objects may lead to damage to the bottom of the tent.
- Due to the structure of this product, the legs may rub against the ground. The rubbing may damage the floor of the tent. When using this product in a tent or a room, use the "Leg Cover for High Tension Cot" (BD-030C) for floor protection. Please note this product is sold separately.
- The seat material may stretch, and the seat height may decrease.
- The material of the storage pocket may stretch with use.
- Do not put cameras or other delicate devices, hard, sharp objects, or items that generate heat, such as body warmers, in the storage pockets. Injury, product damage, or damage to other property may occur.
- Do not unfold or store the product with objects in the pockets. Doing so may

- result in damage or deformation of the product or other property.
- Avoid shaking or bouncing while sitting or lying on this product to prevent damage.
- When transporting this product, strong jolts may lead to damage.
- In addition, the exposed metal parts will get hot when exposed to direct sunlight on hot days. There is a risk of low-temperature burns, so please be careful during the summer months.
- Please do not use or act as follows.
 - ① Sit with the slide poles in their stored state, as shown in the figure. Please do not put anything in the product if it's not fully assembled. The load will be applied to only a part of the seat, leading to damage. Be sure to use it with the slide poles pulled out, and the entire seat unfolded.
 - ② Do not push the slide poles forcefully or pull them out vigorously. The slide pole stopper may be damaged and cannot be removed.

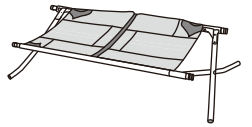

How to Set Up and Disassemble / Please make sure that there are no people or objects nearby. Use the reverse procedure for disassembly.

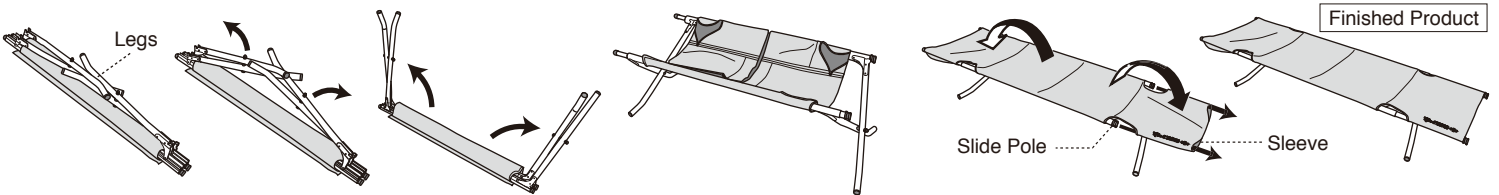

- ① Place the product so the crossed legs are on top. Then, lift the left and right legs apart at the same time. Open the legs wide until they stop.
- ② Open the main body pole so that the crossed legs open and stand upright.
- ③ Open both sides of the folded seat, extend the slide poles stored in the main body pole and pass them through the sleeve of the seat. If the seat is slightly slack, it's easier to assemble. Please insert the slide poles until they stop.

Maintenance

- To remove stains or moisture on the seat cloth, wipe with a cloth soaked in detergent before storing. Dry in a well-ventilated area.

Warranty

Snow Peak guarantees the quality of all its products. Please contact your local Snow Peak dealer if you have any problems with this product. Snow Peak will replace or repair if the product is shown to have manufacture defects. In other instances, Snow Peak may repair at an appropriate fee. Please note, the warranty does not apply under the following conditions: 1. Natural product deterioration over time. / 2. Damage caused by alterations or careless handling. / 3. Damage caused by improper handling prohibited in the instruction manual. / 4. Product failure due to user accidents. / 5. Any damage except due to manufacturing defects. / 6. Damage caused by dirt and rust. / 7. Damage caused by disassembly. / 8. Deformation and damage caused by dropping or other similar incidents. / 9. Product failure due to wear and tear caused by the user. / 10. Damage caused by use with other unrelated products.

Repair

- For repairs, please contact the retailer where you purchased the product or Snow Peak Customer Service.
- When you request a repair, please make sure that the product is dry and clean.
- Please attach a memo or some kind of tag indicating the needed repair and detail when and how the damage occurred.
- Shipping cost and repair fee for the repair will be determined as follows.
 1. Within warranty: Return shipping cost and repair fee will be covered by Snow Peak / 2. Outside warranty: Return shipping cost and repair fee will be covered by the user.

Snow Peak, Inc.

456, Nakanohara, Sanjo-Shi, Niigata 955-0147 Japan
Tel. +81 256-46-5858 / Fax. +81 256-46-5860
www.snowpeak.co.jp

Snow Peak USA, Inc.

404 NW 23rd Avenue, Portland, Oregon 97210, USA
Tel. +1 (503) 461-0781 / Instagram. @snowpeakusa
Email. info@snowpeak.com / www.snowpeak.com