

Product Manual : Ver 1.00

**FES-652**


# **Land Breeze Pro. Air Duo**




Thank you for purchasing a Snow Peak product. This product is a tent for camping. For safety, read the following instruction manual before use. Please keep it safe for future reference. Finally, if you find anything that you do not understand in the description or any problems with the product, please stop use immediately and contact the retailer or Snow Peak Customer Service.

### Set Contents

Contents are based on setup in average conditions. If you bring a sturdy, long peg or a spare rope, you can be flexible for various conditions. Always carry a spare as the peg, rope, and rope stoppers are consumable items that wear out over time.

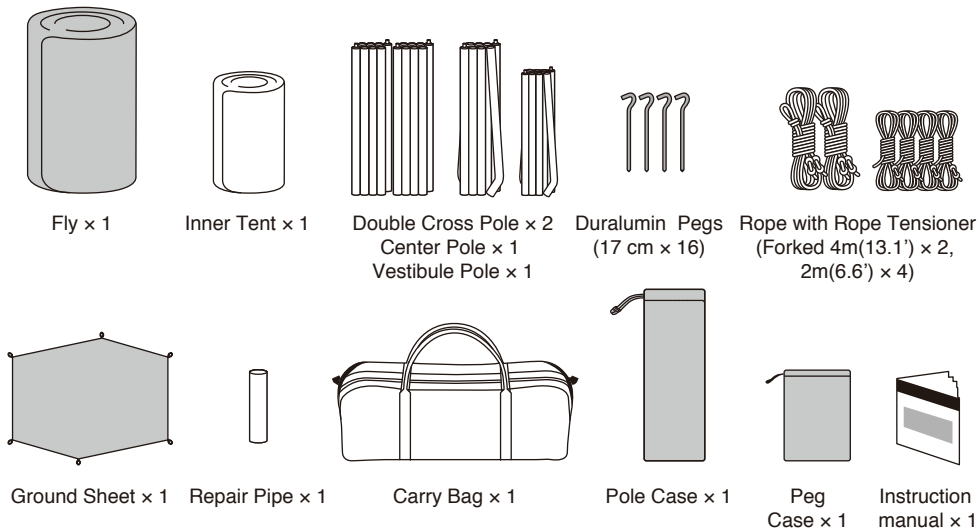

### Set Contents

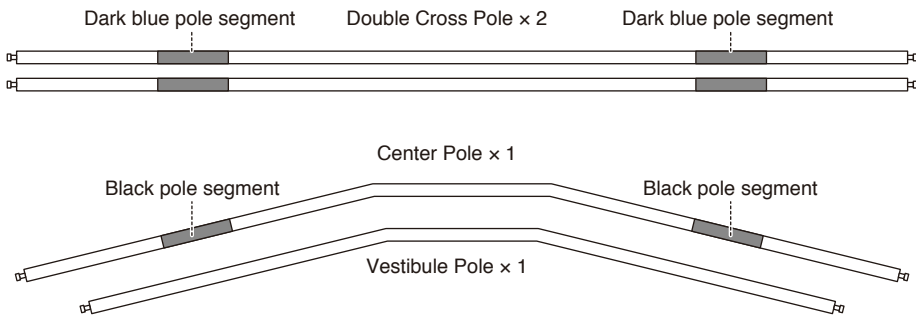

**Safety Precautions Before use** please read thoroughly to ensure safety and to avoid accidents.

**⚠ DANGER** Misuse could easily result in a serious accident or death.

- The tent's material is not flame-proof. Therefore, do not use combustion-based heat sources such as lanterns, stoves, heaters, or open flames such as matches, candles, lighters, or cigarettes inside the tent. The use of such heat or light sources inside a small enclosed space is dangerous and may result in fire, oxygen deficiency, or carbon monoxide poisoning.
- Do not keep fuel or flammable items for replenishing the fuel inside the tent.



**⚠ WARNING** Misuse could result in serious injury or death.

- Pay close attention to the weather. If extreme weather is in the forecast, pack up camp and evacuate to a safe place.
- Do not bring heated items into the tent when they are at high temperatures. Very high temperatures inside of the tent may cause fire or heatstroke.
- Hot weather will cause high temperatures in the tent, leading to a higher risk of heatstroke. Pay close attention to temperatures, particularly when children are asleep inside the tent.
- Choose a flat, well-drained area with firm ground to pitch the tent. The area should have no chance of avalanches, landslides, wind gusts, or sudden flooding.




**⚠ CAUTION** Misuse could result in injury to the user and/or damage to property.

- This product is not intended to be in permanent use, as it may fade or deteriorate if exposed to sunlight over a long period of time.
- Sunlight can cause the surface of the fly to heat up, potentially causing low-temperature burns.
- Flying sparks can create holes in the tent fabric. Do not assemble or use the tent close to a bonfire, fireworks, or areas where a fire is present. When setting up and disassembling, make sure there is no fire around.
- Sap cannot be removed easily once it dries. Please avoid setting up under trees where sap is likely to drip. Please do not use organic solvents such as thinner or benzene to remove the sap, as they will damage the fabric and its coating.
- Firmly hold the tent pole when assembling and disassembling the tent. Pole ends recoiling may lead to unexpected accidents, so ensure that the surroundings are safe with no bystanders in the vicinity.
- Secure the tent firmly with pegs and ropes.
- It is made of thin fabric, so it may break if you pull the fabric too much. Please be careful.
- Watch your feet when utilizing the rope and peg. It may offset your balance and cause an unexpected accident.
- The inner tent has a loop to hang small items. Please only use with items less than 1 kg.
- Use the tent on a flat surface free of sharp objects such as stones and branches.


## Name of the Parts

### [Fly]

Velcro Tape  
(10 locations in total)

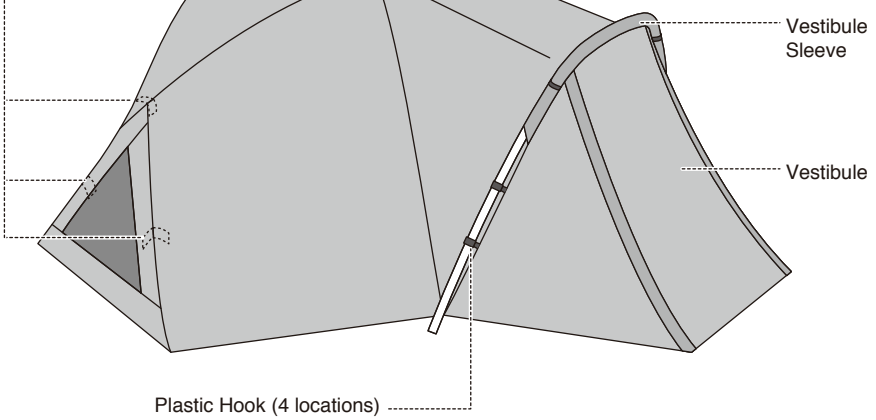


### [Inner Tent]

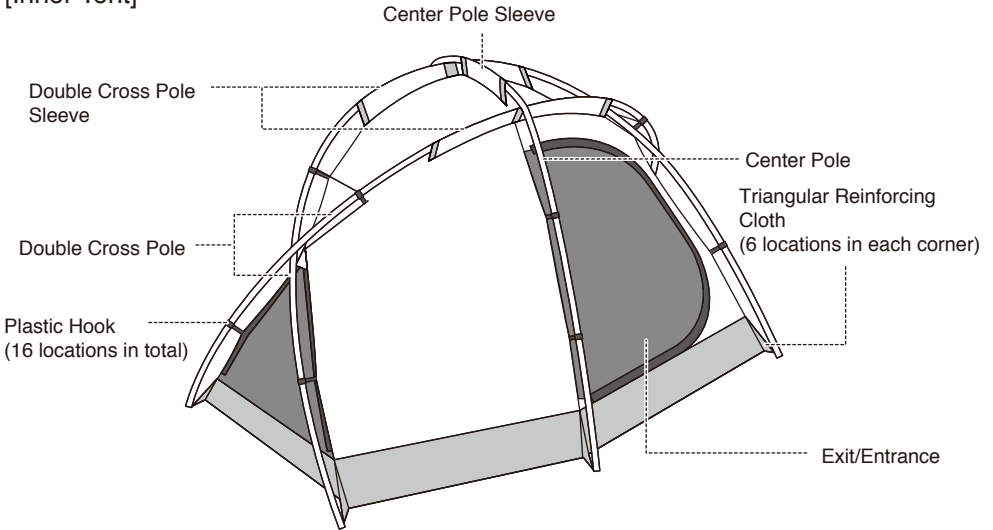



The structure of corner tapes and panels in the Inner Tent are symmetrical in the front and back. There is a loop to hang small items inside the tent. Each loop can hold items up to 1kg (2.2 lbs) in weight.

### [Ground Sheet]

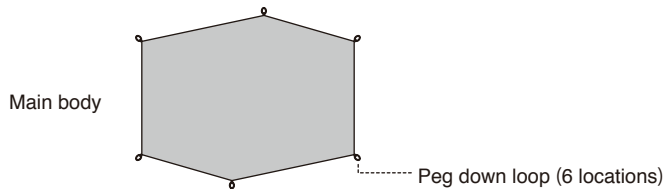


## How to attach Rope with Rope Tensioner on the Fly and Peg-down position

Attach the rope with rope tensioner to the fly and peg down as shown below.

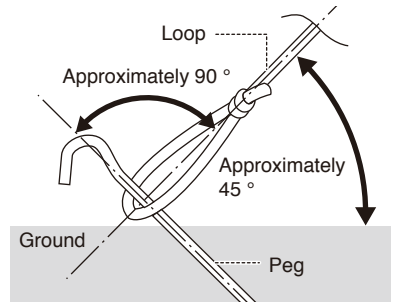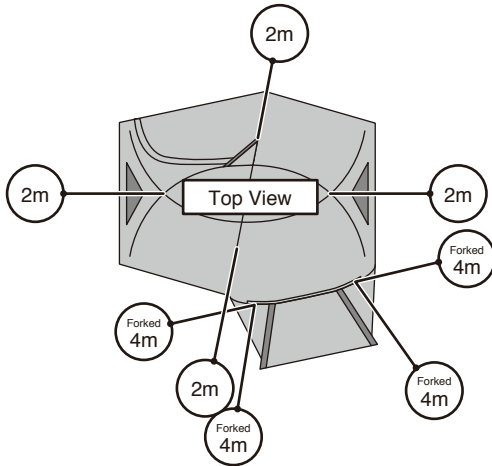


Peg down as far away from the tent as possible. When set up, the angle of the rope should be about  $45^\circ$  to the ground, which is the ideal peg-down position. Also, please pull down the peg so that the angle to drive the peg is  $90^\circ$  to the rope.

### How to attach a single rope

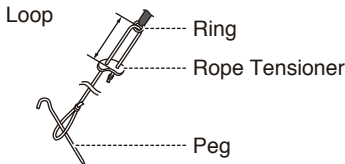

Attach the rope so that the loop with the rope tensioner comes to the o-ring side.

### How to attach forked rope

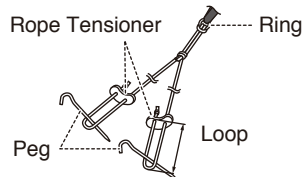


Insert the middle knot through the ring and attach the forked rope so that the loop comes to the peg side.


## How to attach Rope with Rope Tensioner on the Fly and Peg-down position

### 1. Sealing with Seam Sealer


\*Seam sealer is not included in this product. When using, please purchase seam sealant from local outdoor gear retailer. A waterproofing treatment with seam taping has been applied to the stitching of the tent. However, the ventilator and fasteners on the Fly and a part of the bottom sheet cannot be treated with the seam tape due to their inherent design. Though capable during periods of normal rain, long spells of heavy or driving rain, or prolonged contact with water pools on the ground, may result in the penetration of water along the stitching. In such cases, the application of a seam sealer is recommended. Apply the seam sealer lightly on both sides along the stitching and dry completely. The seam sealer will cure with time. As the seam sealer wears off, re-apply as necessary. We do not provide a sealing service. However, to maintain the tent in its best condition, application of seam sealer by the user is highly recommended.

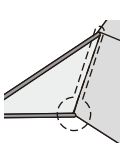


Apply the Seam Sealer to all corner parts of the Bottom. (6 locations)

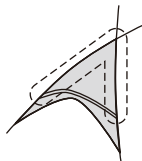

Apply the Seam Sealer to the outside and inside of the ventilation area.

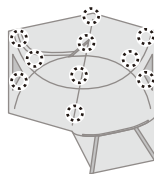

 Apply the Seam Sealer to the sewn part of the Velcro tape on the outside of the fly. (10 locations)




Please apply the Seam Sealer on both surfaces of the Velcro Tape, on the backside of Fly. (10 locations)



## Set-up Procedure

Please prepare for actual camping by repeatedly practicing setup and disassemble the tent before camping according to the instructions below. Forced setup or disassemble may cause damage to the main unit or Pole or accidents. Please make sure that there is no defect in the Contents Included before going camping.



- 1 Spread the Inner Tent out on the flat ground where you wish to set up with the bottom underneath.  
\*Typically, the entrance/exit should face downwind. If the entrance/exit faces windward, not only will wind and rain blow into the main entrance, but sudden and strong gusts may cause damage to the tent.

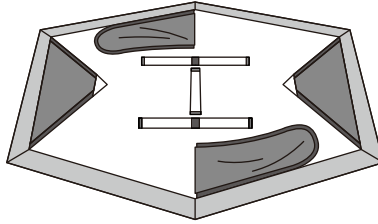



- 2 Insert the Double Cross Pole into the sleeve with the dark blue tape on the inner tent.  
\* When inserting, please make sure that the color of the second section of the pole (dark blue) and the sleeve tape (dark blue) match.

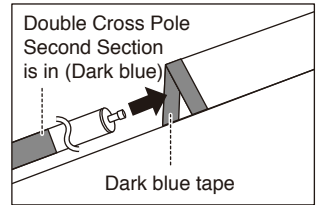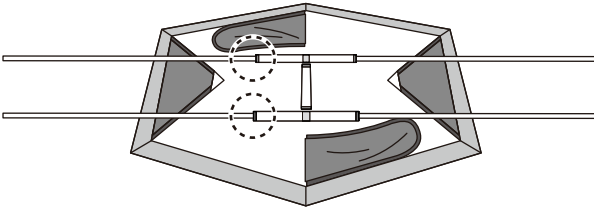


- 3 Please insert the tip of one side of Double Cross Pole into the grommet of the bottom corner tape.  
\* When inserting, please check to ensure the color of the second section of pole (dark blue) and corner tape (dark blue) match.  
\* Please insert into the inner grommet where the corner tape has 2 grommets.

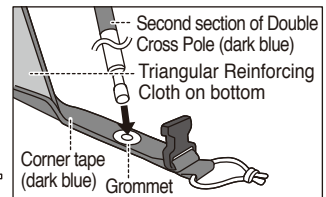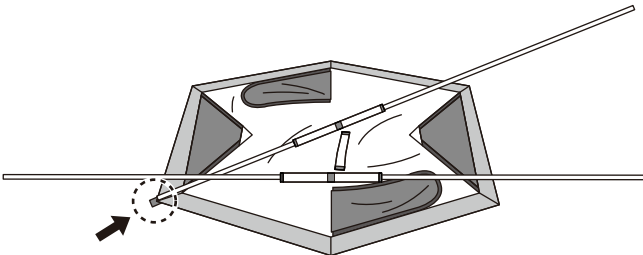


- 4** Insert the tip of the opposite side of the Double Cross Pole into the grommet of the corner tape.  
 \* When inserting, please check if the color of the second section of Pole (dark blue) and corner tape (dark blue) match.  
 \* Please insert into the inner grommet when the corner tape has 2 grommets.  
 \* Slowly insert the pole while adjusting the sleeve so it is positioned in the center. If the Pole is inserted with too much force from one side, the other side may curve widely and cause damage to the Pole. Insert it into the grommet carefully.

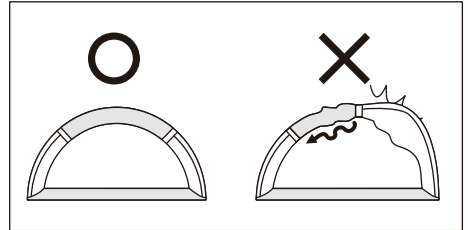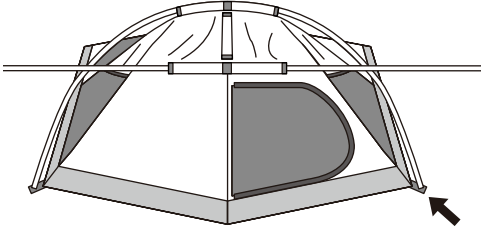


- 5** Insert both ends of the other Double Cross Pole into the corner tape grommet in the same way as step ③④.

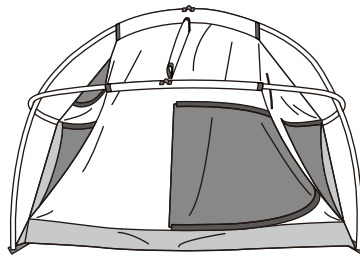


- 6** Please insert the Center Pole into both sleeves with the black tape of the inner tent and the black tape on the sleeve for Double Cross Pole.  
 \* When inserting, please check to ensure the color of the second section of the pole (black) and the tape of the sleeve (black) match.  
 \* When inserting the pole, be sure to push it in. If you pull the pole, the joint will come off and the connection may become insufficient.

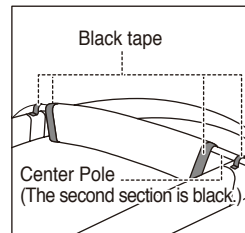


- 7 Insert both ends of the Center Pole into the grommets on the inside of the corner tape in the same way as steps 3④. \*When inserting, make sure that the color of the second section of the pole (black) and the Corner Tape (black) are the same.

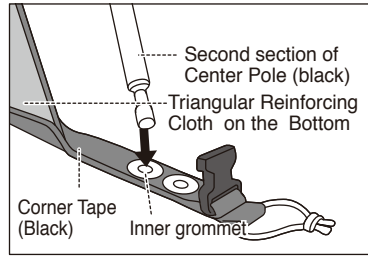

- 8 Hook the Plastic Hooks attached to the Inner Tent to each pole. (16 locations)


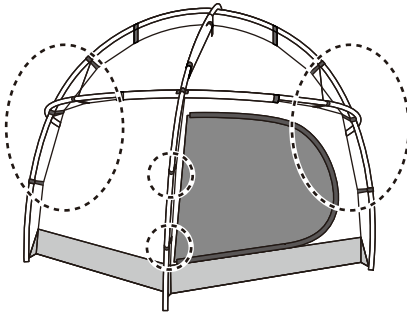


Same on the opposite side.

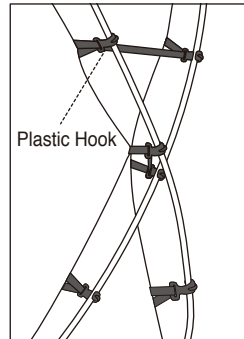


- 9 Lay the Ground Sheet on the place where the tent will be set up so that the PU coating surface (the shiny surface side) faces up.  
Set up the Inner Tent on the Ground Sheet.

- 10 After closing all the open zippers, insert the pegs through the loops at the end of each corner tape and the loops on the groundsheet, and gently pull the pegs in the order shown in the figure to remove slack. (6 locations)  
\* If you peg down without closing the zipper, you may not be able to close the door.  
\* Hammer the peg all the way down.  
\* If the peg is driven in too hard, it may bend, or be damaged. If the peg hits an obstacle such as a stone, change the location of the peg slightly before hammering it in.

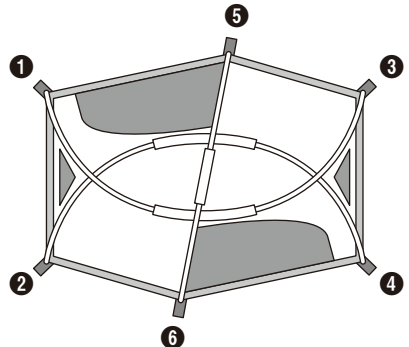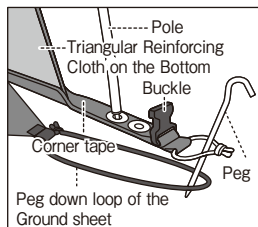






- 11** Spread the Fly out in front of the Inner Tent so that the back side (the side where the logo is facing away) faces up. Then, move the Vestibule entrance / exit panel close to the Inner Tent entrance / exit (the panel with the logo on it). After that, connect the buckle at the tip of the black and dark blue corner tape on both sides of the entrance of the Fly and Inner Tent as shown in the figure.  
\* Be careful not to twist the tapes when connecting the buckles.

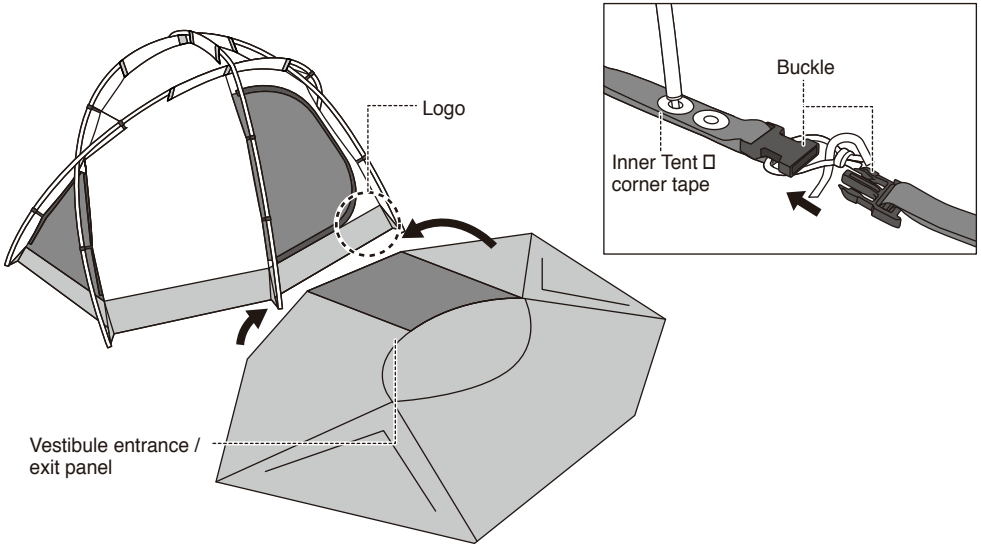



- 12** Hold the part of the Fly farthest from the Inner Tent and cover the Inner Tent with Fly. After that, adjust the position of the Inner Tent so that the panels of the Inner Tent and the Fly match. The Inner Tent is symmetrical front to back, so the Fly can be attached on either side.

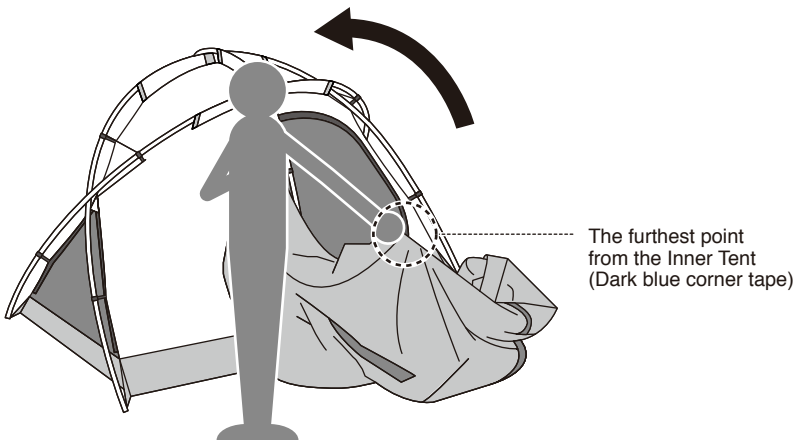



- 13 Wind the Velcro Tape on the inside of the Fly around the Pole to secure it. (10 locations)

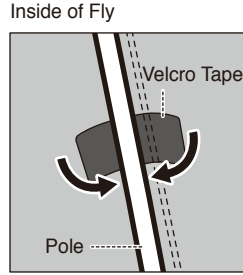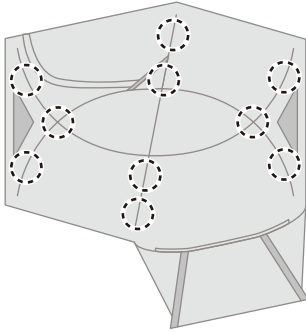


- 14 Connect the buckle at the tip of each corner tape of Inner Tent and Fly. (4 locations) After connecting, pull the adjustment tape of all the buckles and stretch the Fly.  
\* When connecting, please check to ensure the color of each corner tape matches and that the corner tape is not twisted.

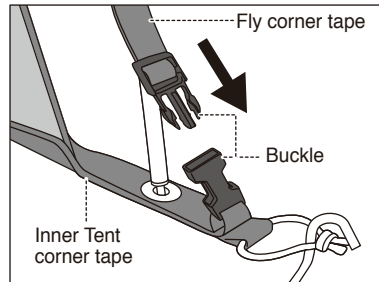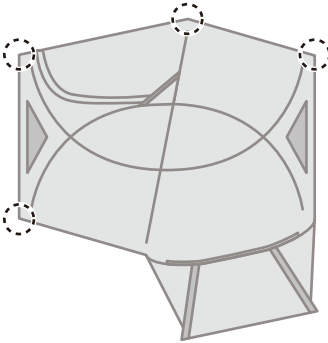


- 15 Pass the Vestibule Pole through the Vestibule Sleeve with black tape. Push it until the center of Pole and Sleeve matches.  
\* When inserting the Pole, be sure to push it in. If you pull the Pole, the joint will come apart and the connection may become insufficient.

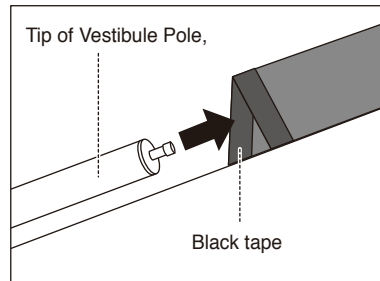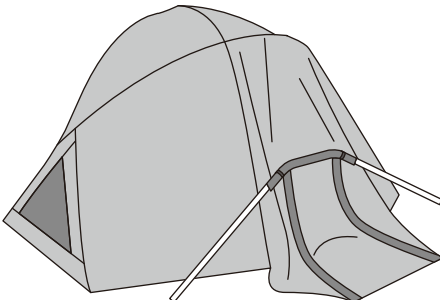


- 16 Insert both ends of Vestibule Pole into the grommet on the outside of the corner tape. After that, hook the Plastic Hook attached to Fly to Vestibule Pole. (4 locations)

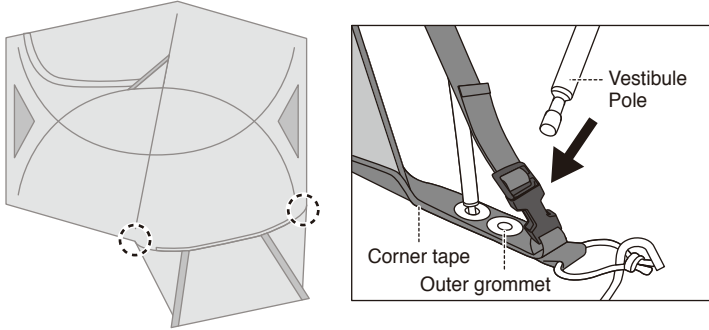

- 17 Pull the end of the Vestibule and secure it by driving the peg through the rubber loop attached to the triangle panel of the Vestibule.  
 \*If the Vestibule is pulled too far, the zippers may be overloaded and damaged. Please be careful not to pull it too far.

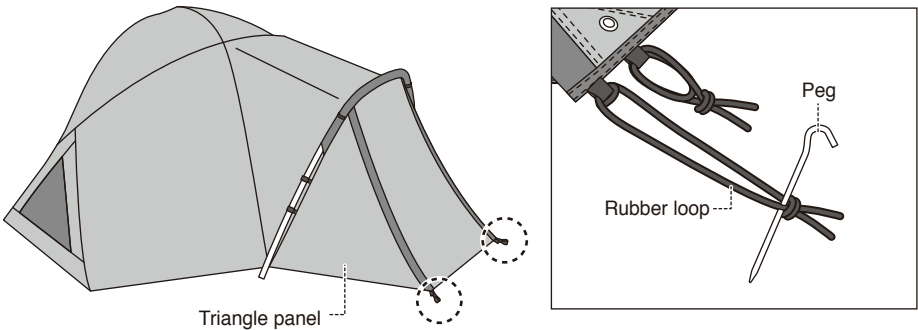


- 18 As shown in the figure of "How to attach Rope with Rope Tensioner on the Fly and Peg-down position" on page 4, attach each Rope with Rope Tensioner to the Fly and pull it, secure it with the peg, and then apply tension.  
 \* If you pull the rope too much, it will pressure on the Fly and it may break. Please be careful not to pull too much.  
 \*Elastic loops are attached to the front and rear panels. If you are concerned about panels flapping in high winds, peg them down.

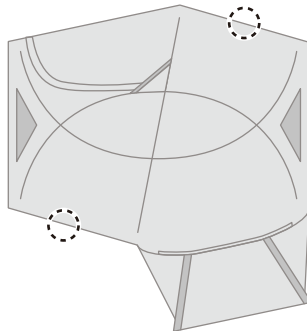


## How to disassemble

Disassembly should be done in the reverse order of set up. Make sure that nothing is inside the Inner tent or Fly before starting to disassemble. It is easier to roll up the Inner Tent if you leave the zipper at the entrance/exit of the Inner Tent slightly open.


- 1 Pull all the pegs out of the ground and put the Rope with Rope Tensioner together.  
\* If the wind is strong, leave the tent's bottom pegs on the windward side so the tent does not blow away.

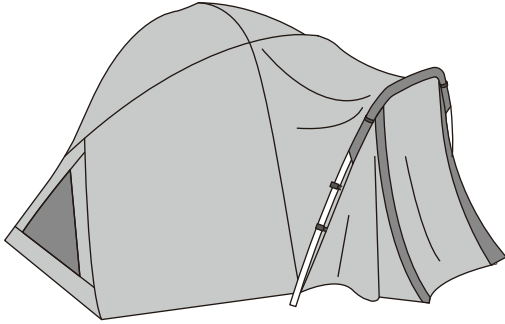


- 2 Please remove the Plastic Hook off Vestibule Pole and then take the Vestibule Pole out of Fly.  
\* When removing the Pole from the grommet, be sure to grasp the Pole with your hand. If not, the Pole will be bouncing up and is very dangerous.  
\* When removing the Pole from the Sleeve, please check the surrounding conditions carefully and make sure to push it out.

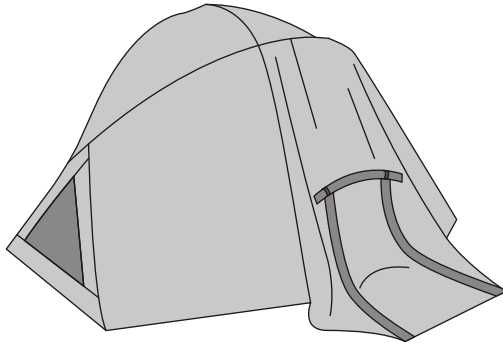

- 3 Remove the corner tape buckle and the Velcro Tape inside the Fly, and remove the Fly from the Inner Tent.

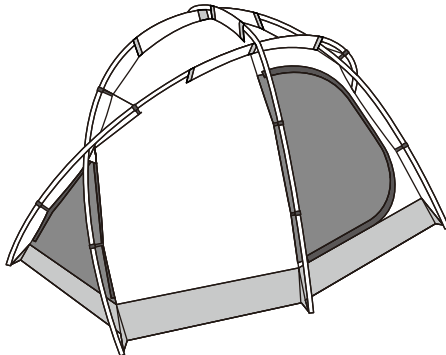


- ④ After removing all the Plastic Hooks attached to the Poles, remove the Pole from the Inner Tent in order of Center Pole and Double Cross Pole.  
 \* When removing the Pole from the grommet, be sure to grasp the Pole with your hand. If not, the Pole will jump up, and is very dangerous.  
 \* When taking out the Pole from the Sleeve, please check the surrounding area carefully and make sure to push it out.  
 \* If there are any Inner Tent pegs left, remove them after removing the Pole.

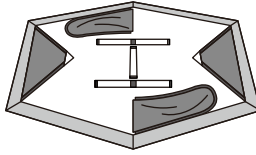


- ⑤ Fold the Fly and Inner Tent to fit the width of the Carry Bag as shown in the figure.

How to fold the Inner Tent

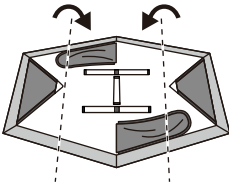


- ① Fold both ends inward toward the center

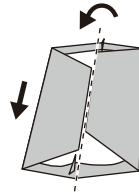


- ② Fold it vertically in two and wrap it in the direction of the arrow.


How to fold the Fly

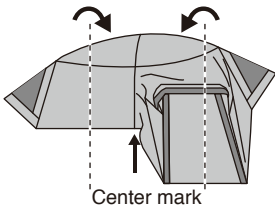

- ① Fold both ends inward toward the center.

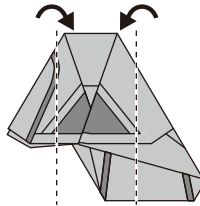


- ② Then, turn both ends toward the center

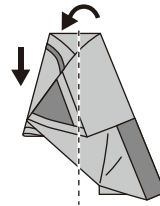


- ③ Fold it in two and roll it up in the direction of the arrow.

How to fold the Ground Sheet

Fold the Ground Sheet according to the Length of the Carrying Case and put it in the Carrying Case.

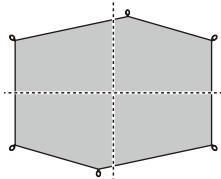


- ① Fold in 1/4.

 

- ② Fold it vertically in four and roll it up in the direction of the arrow.

 - ⑥ Put the Poles and Pegs in the attached Pole Case or Peg Case and after that, store them in the Carry Bag.



## Water-Repellent and Waterproof Functions

- The Fly of this product is treated with a high-quality, water-repellent finish. However, the level of water-repellent capacity and durability may vary slightly due to the characteristics of each material. The water-repellent finish will lose effectiveness after repeated use. When the water repellence decreases, please use a water-repellent spray purchased from your local outdoor gear retailer. When using such sprays, please follow the product's instructions.
- Materials with high waterproof capacity are used in this product. However, if the materials are in contact with pools of water on the ground for long periods, the water may be absorbed into the material, potentially resulting in discoloration.
- Agricultural chemicals may damage the PU coating and decrease the water-proof capacity. If this is the case, it will be beyond our guarantee.
- It is possible that some water-repellent sprays may cause the logo and other markings to peel-off.


## Regarding the Effect of Ultraviolet Rays

- When the tent material is exposed to sunlight for long periods, color degradation or strength deterioration may occur. Do not leave the product assembled permanently.
- If the material deteriorates due to ultraviolet rays and is badly damaged, it may become irreparable.


## Maintenance & Storage

- A combination of Polyester fabric is used for this product. Taking the material characteristics into consideration, we adopted processing and color patterns that will result in less color migration. However, depending on storage conditions, slight color migration may occur. Do not store the product while it is wet.
- Before storage, the product should be cleaned and dried sufficiently. If the product is stored when wet, the build-up of mold, bad odors, color migration and material deterioration will occur. Dry the product sufficiently in a breezy and shaded area and clean the surface with a soft brush before storing.
- Clean and dry the surface of the Poles before storing. If stored when wet, corrosion may occur, resulting in strength deterioration. Keep the joints clean and apply a small amount of silicone lubricant; applying an excessive amount of lubricant will stain the cloth. Ensure that the cords inside the Poles are not pulled unnecessarily.
- Fold the Pole from the center to the edges. (Figure A)
- Store the product in a well-ventilated area, away from heat and moisture.
- Using the zipper when it is covered with mud, sand or dust may cause wear or damage. Clean the zipper with a brush before use. Apply small amounts of silicone lubricant to the zipper regularly to allow for smooth movement. Do not apply excessive amounts of lubricant as it will leave stains on the cloth.
- Slight damage to the cloth can be mended with repair tape that can be purchased from your local outdoor gear retailer. Refer to the product instructions for the correct use of such repair tape.
- Depending on the conditions during use, the tent material may deteriorate over a wide area, losing its durability and becoming irreparable.
- Seam tape is attached at a temperature which does not damage the PU coating but with repeated use may peel off the PU coating. If you find the PU coating is peeling off, use an iron at low temperature to apply the PU coating again. If the iron is too hot, it may discolor the cloth and cause material to deteriorate sooner. Do not peel off the seam tape forcibly. If PU coating is peeled off, it may become beyond repair.
- If tree sap comes into contact with the product, it can't be cleaned off. Refrain from setting up the product under trees with sap. The materials and/or the coating of the materials may be damaged if tree sap is removed using a solvent.
- For future use, regularly inspect and maintain the product including the accessories such as the pegs. If a pole is broken while the tent is in use, for an emergency treatment, use a repair pipe and secure with vinyl tape. Or fully disassemble the tent for repair. (Figure B)

(A)

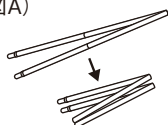

(B)

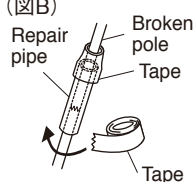

## Warranty

Snow Peak has taken all possible measures to ensure every product is durable and functions correctly. If you find any product defects, please contact the retailer where you purchased the product or Snow Peak Customer Service. If there are apparent defects in the product's manufacturing, the defective product will be repaired or exchanged free of charge. In other cases, Snow Peak will repair the product for an appropriate fee. The decision to repair or replace the product will be at our discretion. Snow Peak will not repair the product for any damage that occurred due to the following: 1. Material deterioration caused by age. / 2. Damage caused by modifications or rough handling. / 3. Damage caused by inappropriate use not mentioned in the instruction manual. / 4. Damage caused by unexpected accidents. / 5. Any damage other than defects in the manufacturing process. / 6. Damage caused by dust or rust. / 7. Damage and defects caused by dismantling the product. / 8. Damage and defects caused by dropping, jolting or other shocks. / 9. Deterioration or failure of parts due to friction. / 10. Damage caused by the use of the product in combination with another manufacturer's products.

## Repair

- If professional repairs are required, please contact the retailer where you purchased the product or Snow Peak Customer Service.
- When you request repairs, please make sure that the product is dry and clean.
- Please attach a memo or a tag indicating the necessary repair and please write details of how and when the damage occurred.
- Transportation and repair costs are determined as follows.
  1. Within warranty: The transportation cost (both ways) and repair cost will be covered by Snow Peak.
  2. Outside warranty: The transportation cost (both ways) and repair cost will be covered by the customer.

## Spec


Contents: Fly Sheet, Inner Tent, Ground sheet, Double Cross Frame(x2), Center Frame, Front Chamber Frame, Duralumin Pegs(x16), Flexible Rope, Repair Pipe, Storage Case, Frame Case, Peg Case

Material: Fly Sheet: 20D Silicon Polyester Ripstop, PU Coating 1,500mm, Inner Tent: 20D Polyester Ripstop, Bottom, Ground sheet: 40D Nylon Ripstop, PU Coating 1,500mm, Poles: Duralumin

Carry Bag size: 61×19×23(h)cm / 2.4"×0.75"×0.9"

Weight: 4.3kg / 9.5 lbs

●Capacity: 2 persons

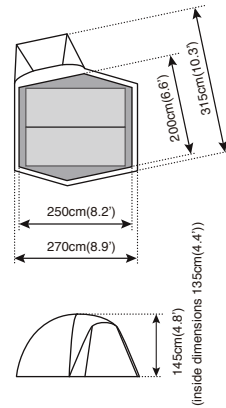

### Snow Peak USA, Inc.

404 NW 23rd Avenue, Portland, Oregon 97210, USA  
Tel. +1 (503) 461-0781 / Instagram. @snowpeakusa  
Email. info@snowpeak.com / www.snowpeak.com

### Snow Peak, Inc.

456, Nakanohara, Sanjo-Shi, Niigata 955-0147 Japan  
Tel. +81 256-46-5858 / Fax. +81 256-46-5860  
www.snowpeak.co.jp

MADE IN CHINA