

Instruction Manual : Ver 1.00

SD-180

Toya 2



Thank you very much for purchasing a Snow Peak product. This product is a tent designed for a picnic. To use this product safely and correctly, please carefully read these instructions. After reading these instructions, keep this manual safe for future reference. If you find anything in the instruction manual that is difficult to understand or find a defect with the product, stop using it immediately and contact the dealers where the product was purchased or Snow Peak Customer Service.

Before use: please read thoroughly to ensure safety and avoid accidents.

 **DANGER : Misuse may result in a serious accident or death.**

- The tent material is not flame-proof. Therefore, do not use combustion-based heat sources such as lanterns, stoves, heaters, or open flames such as matches, candles, lighters, or cigarettes inside the tent. The use of such heat or light sources inside a small enclosed space is dangerous and may result in fire, oxygen deficiency, or carbon monoxide poisoning.
- Do not keep fuel or flammable items for replenishing the fuel inside the tent.

 
 **WARNING : Misuse could result in a potentially hazardous situation that can result in serious injury or death to the user.**

- Before using the product, check each part for abnormalities. If there are abnormalities, take the product to your reseller or Snow Peak's Customer Service Team for inspection and repair.
- This product is not designed for camping overnight or in heavy rain.
- Pay close attention to the weather. If extreme weather is in the forecast, pack up camp and evacuate to a safe place.
- Do not bring heated items into the tent when they are at high temperatures. Very high temperatures inside of the tent may cause fire or heatstroke.
- Hot weather will cause high temperatures in the tent, leading to a higher risk of heatstroke. Pay close attention to temperatures, particularly when children are asleep inside the tent.
- Choose a flat, well-drained area with firm ground to pitch the tent. The area should have no chance of avalanches, landslides, wind gusts, or sudden flooding.


 **CAUTION: Misuse could result in injury to the user and/or damage to property.**

- This product is not intended to be in permanent use, as it may fade or deteriorate if exposed to sunlight over a long period of time.
- Sunlight can cause the surface of the fly to heat up, potentially causing low-temperature burns.
- Flying sparks can create holes in the tent fabric. Do not assemble or use the tent close to a bonfire, fireworks, or areas where a fire is present. When setting up and disassembling, make sure there is no fire around.
- Firmly hold the tent pole when assembling and disassembling the tent. Pole ends recoiling may lead to unexpected accidents, so ensure that the surroundings are safe with no bystanders in the vicinity.
- Secure the tent firmly with pegs and ropes. A gust of wind can cause your tent to fly.
- It is made of thin fabric, so it may break if you pull the fabric too much. Please be careful.
- Watch your feet when utilizing the building tape, rope and peg. It may offset your balance and cause an unexpected accident.
- The tent has a loop to hang small items. Please only use with items less than 500g(1.2 lb)

Set Contents

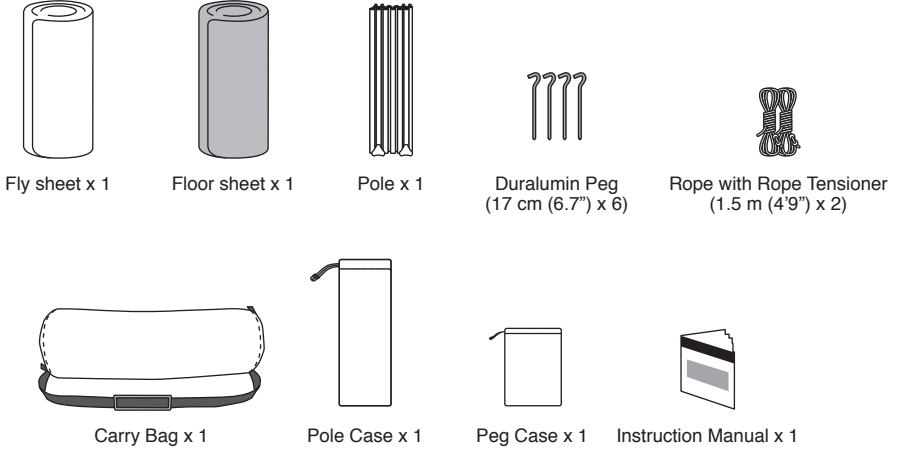


Part Names

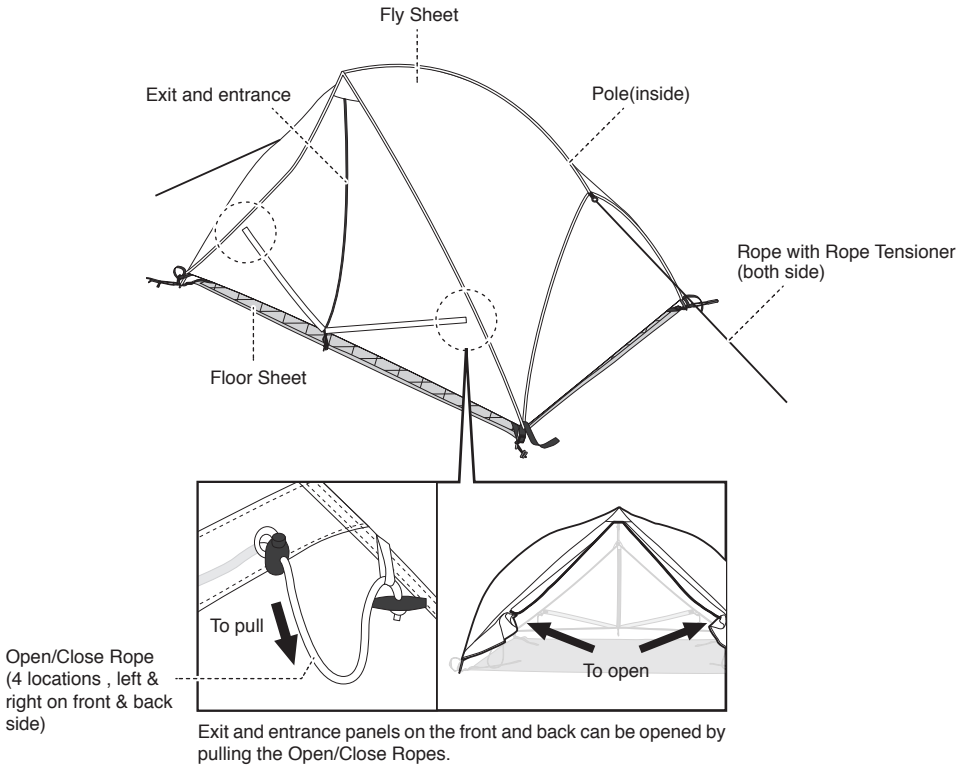 


Setup procedure

Please follow the instructions below to set up and disassemble the tent, and practice repeatedly to prepare for actual use. Also, please make sure that all accessories are included. Forcibly setting up and disassemble the product may result in damage to the tent or pole, or an accident. Please read this manual carefully before using the product.

 - 1 Take the tent out of the carry case and spread the floor sheet on the ground so that the quilted side with the woven logo is on top. Also, make sure that the adjustment tapes at the four corners are fully extended.

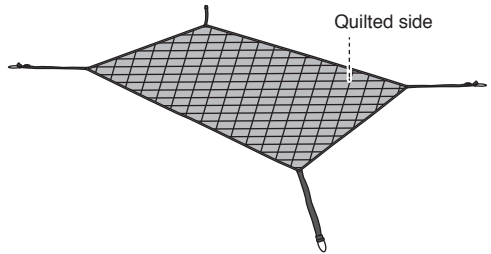


 - 2 Connect the joints of the pole and place it in the center of the floor sheet.
*Connect the pole firmly until the joints of each section are not visible. If the connection is insufficient, the pole may be damaged.

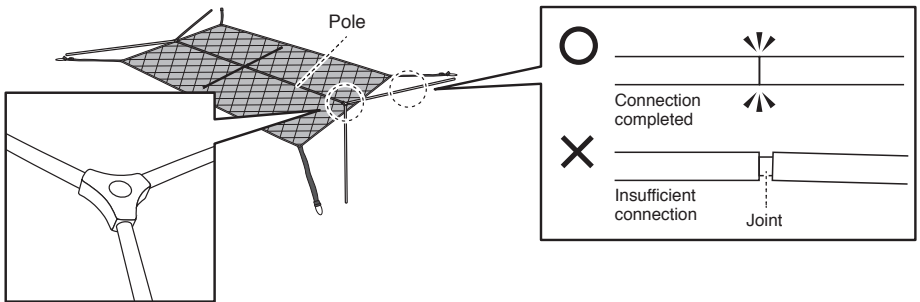


Position the frame so that the left and right joint holes face up.

 - 3 Extend the tape with grommets (holes) at the four corners of the floor sheet and insert the tips of the pole into the grommets.
*Make sure the tape is not twisted at this time.

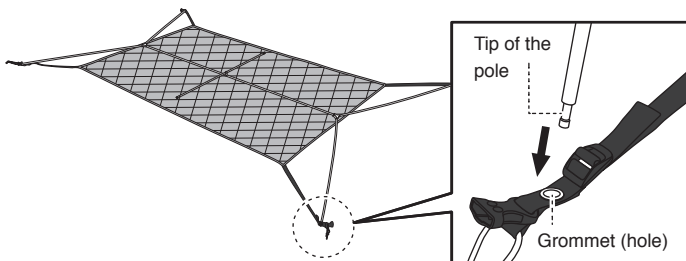


- 4 Pull the tape pullers at the four corners of the floor sheet toward the center of the floor sheet until the end. The pole will stand up in the shape of a tent.
 ※If the pole does not come up after pulling at one point, lift the center of the pole upward gently by hand. Pulling the tape forcibly at the four corners when the pole is not up may damage the pole.
 ※Make sure the ridge pole is over the main pole.

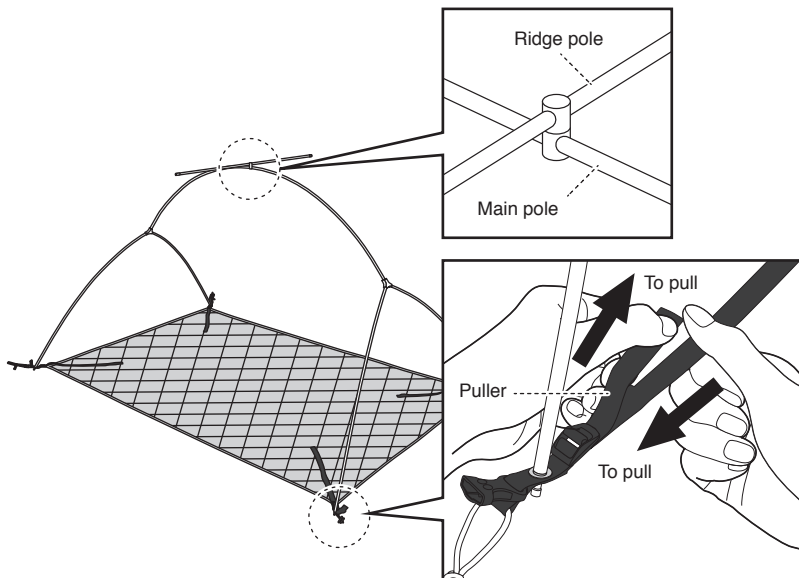 

Hold the tape on the floor sheet side with one hand and pull the puller with the other hand.

 
- 5 Spread the fly sheet next to the floor sheet with the inside of the fly sheet (the shiny side) facing up. Bring the part where the logo is printed (It will be the left side of the tent when set up) close to the floor sheet, and connect the buckles at both corners of the short side to the buckles at the corners of the floor sheet.
 * At this time, check that the tape with the buckle is not twisted.

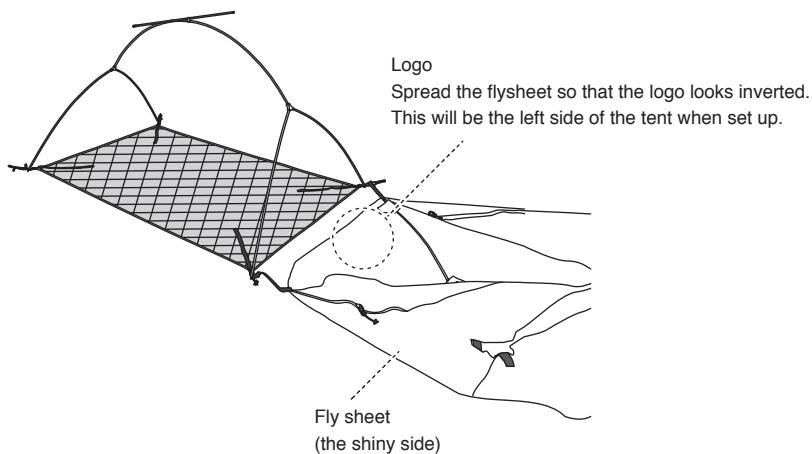


- 6 Hold the unconnected side of the fly sheet and cover the entire pole with the fly sheet.

CAUTION

 Be careful not to overload the ridge pole.

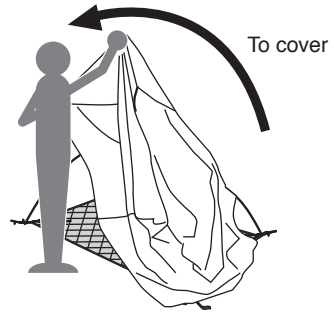


 - 7 Insert both ends of the ridge pole into the grommets on the inside of the fly sheet.

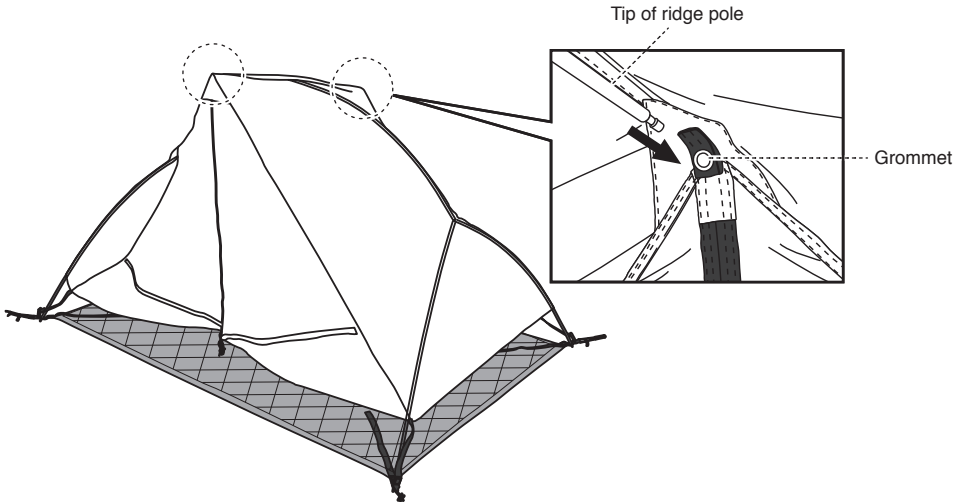


- 8 Connect the buckles of the fly sheet and the floor sheet at the opposite corners of 5, and pull the tape pullers at the four corners of the fly sheet to stretch the fly sheet.

 
※Stop to pull the tape when it is stretched. Pulling the tape too hard may cause damage to the fly sheet or pole.

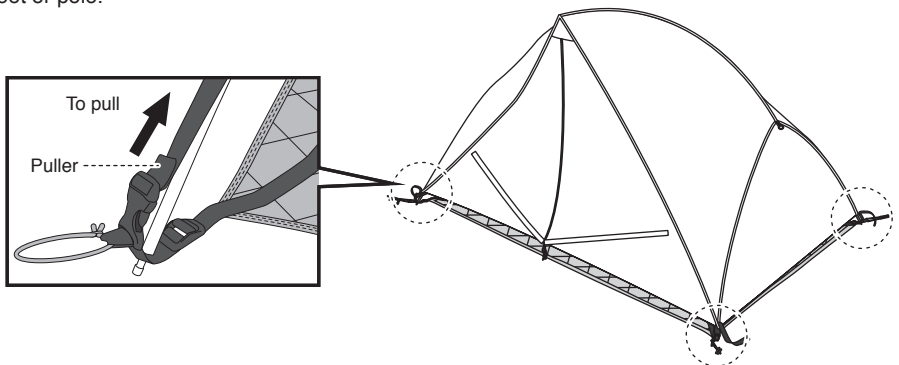

 
- 9 Attach the Velcro tape on the inside of the flysheet to the pole at the locations shown in the illustration. (3 places)

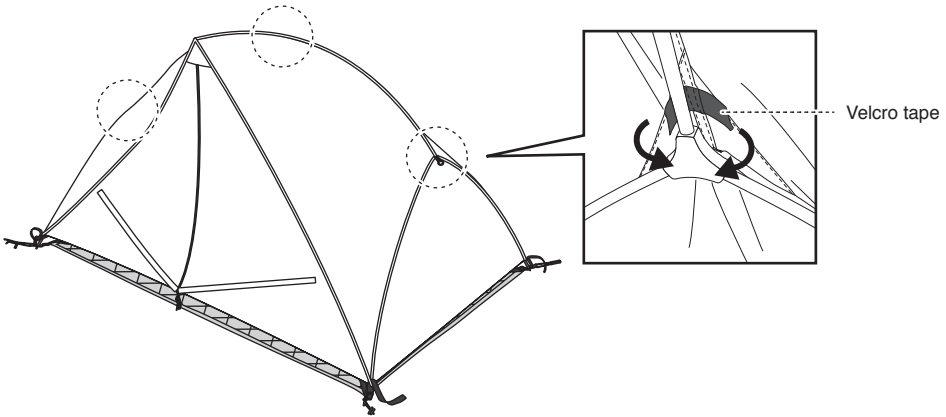

 
- 10 Pass the pegs through the peg-down loops and ropes shown in the figure and peg down (fix the tent by sticking the peg into the ground). Ideally, the pegs should be placed on the diagonal of the tent in the order shown in the figure. Adjust the tension of the rope by pulling the rope tensioner on each side of the rope.

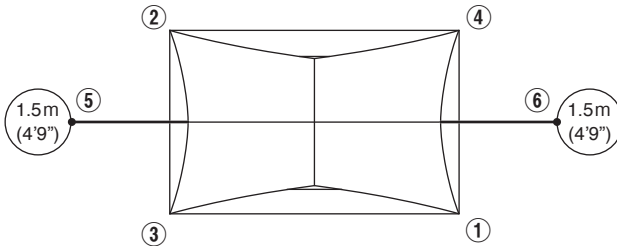


Direction of peg down

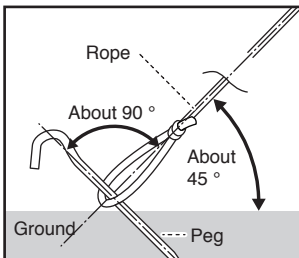 

 [Peg down to the rope]
Peg down as far as possible from the tent. The ideal peg position is when the rope is angled 45° to the ground. Be sure to insert the pegs at a 90° angle to the rope.

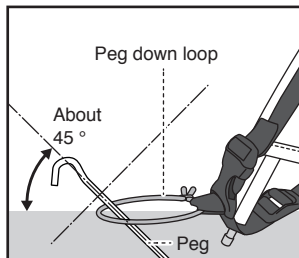

 [Peg down to peg-down loop]
Peg down at an angle of about 45° to the ground.

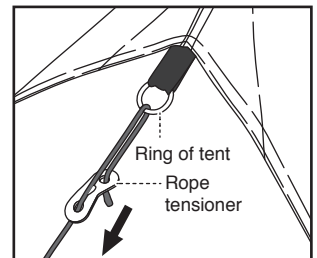

[Direction to pull the rope tensioner]
Adjust the tension of the rope by putting your fingers on the rope tensioner and pulling the rope tensioner towards peg from the tent ring.

How to disassemble

Precautions for disassemble

 
- Before storage, the product should be cleaned and dried sufficiently.
- In case of strong winds, please wait for the wind to subside before disassembling.
- Fold the pole from the center to the edges. If folded from the edge, the cord can be overstretched, which may cause elongation or breakage.
- Pull out all pegs, clean them and store them in the peg case with their heads facing down. All poles should be stored in the pole carry bag. If the poles are stored bare, it may damage the fabric or the carry bag.

Disassembling should be done in the reverse order of setup. Make sure there is nothing inside the Tent and close the exit and entrance panels before beginning.


- 1 Remove all ropes and pegs from the four corners of the tent. Ropes should be tied together while still attached to the fly sheet to prevent tangling. Pegs should be placed head first in the peg case.




- 2 After unfastening the buckles at the four corners of the tent, remove the Velcro tape attached to the fly sheet and the tip of the ridge pole from the grommet and then remove the fly sheet from the pole. It will be easier to set up the tent next time if you stretch the tape of the buckles on the four corners of the flysheet.

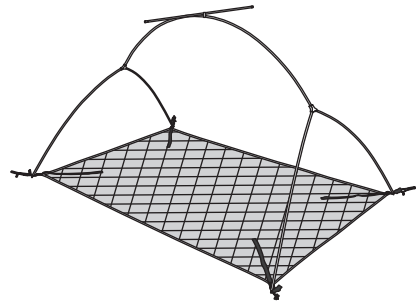

 - 3 Gently stretch the tape where the pole stuck at the four corners of the floor sheet so that the pole lies flat.

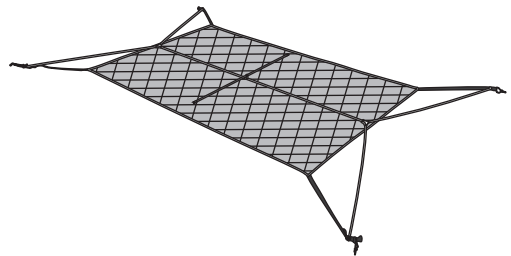


 - 4 Remove the tip of the pole from the grommet on the floor sheet and fold the pole. Place the folded pole in the pole case.

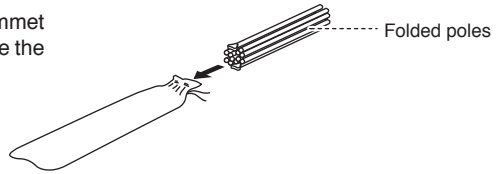


- 5 Fold the fly sheet and floor sheet according to the procedure shown in the figure, and put them in the carry case. For the fly sheet, align the rings where the ropes are attached, pinch both rings and the top of the tent (where they are sewn crosswise), lift it up, and lay it on the ground folded in half on both sides, then fold it.

 * If the floor sheet is wet, dry it well before storing.

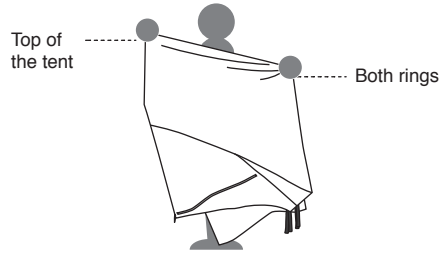


Fly sheet

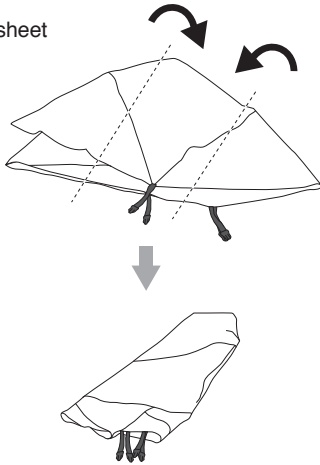 


Fold both ends inward toward the center.

 Floor sheet

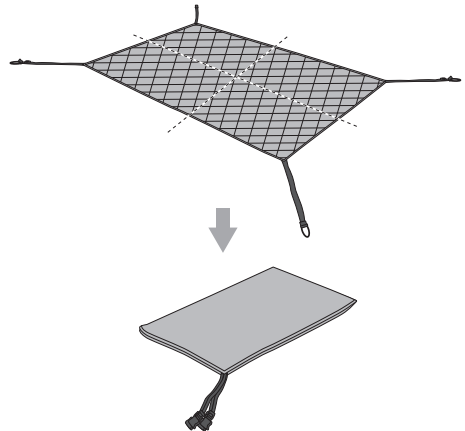

 Fold in four so that the bottom side is on the outside.

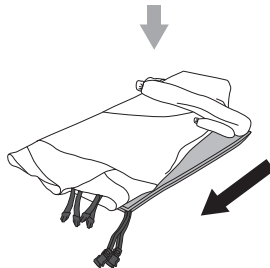

Place the pole and pegs on the fly sheet and floor sheet and wrap them in the direction of the arrow.

Water-Repellent and Waterproof Functions

- The fabric of the fly is treated with a high-quality, water-repellent finish. However, the level of water repellency and durability may vary slightly due to the characteristics of each material. In addition, the water repellency will deteriorate over time and consistent use. When the water repellence decreases, use a water-repellent spray purchased from your local outdoor gear retailer and follow the product's instructions accordingly.
- Materials with high waterproof capacity are used in this product. However, if the materials are in contact with pools of water on the ground for long periods, the material may begin to absorb water. Also, please refrain from using the product in heavy rain.
- The PU coating may also be damaged by agricultural chemicals, which can cause an abnormal decrease in waterproof capabilities. Please note that the product cannot be covered under warranty if this is the cause of damage.
- The logo may peel off as a side-effect of using the water-repellent treatment.

Regarding the Effect of Ultraviolet Rays

- A UV protection treatment has been applied to the fly material.
- *The UV protection treatment does not completely shield humans from ultraviolet rays or stop the deterioration of the material's strength.
- When the tent material is exposed to sunlight for long periods of time, color degradation or strength deterioration may occur. Therefore, do not leave the product assembled permanently.
 - If the material deteriorates due to ultraviolet rays and is badly damaged, it may become irreparable.

Maintenance

- When using a product that has not been used for a long time, check the product and its contents carefully. If you have any questions, please contact Snow Peak Customer Service.
- A combination of polyester fabric is used for this product. Taking the material characteristics into consideration, we adopted processing and color patterns that will result in less color migration. However, depending on storage conditions, slight color migration may still occur. Do not store the product while it is wet to prevent this color migration.
- Do not wash this product in a washing machine. If the fly sheet or floor sheet gets dirty, wipe it off lightly with a wet cloth.
- Before storage, the product should be cleaned and dried sufficiently. If the product is stored when wet, the build-up of mold, bad odors, color migration, and material deterioration will occur. Dry the product sufficiently in a breezy and shaded area and clean the surface with a soft brush before storing.
- Clean and dry the surface of the poles before storing. If stored when wet, corrosion may occur, resulting in strength deterioration. Keep the joints clean and apply a small amount of silicone lubricant; applying an excessive amount of lubricant will stain the cloth. Ensure that the cords inside the poles are not pulled unnecessarily.
- Store the product in a well-ventilated area, away from heat and moisture.
- Using the zipper when it is covered with mud, sand or dust may cause wear or damage. Clean the zipper with a brush before use. Apply small amounts of silicone lubricant to the fastener regularly to allow for smooth movement. Do not apply excessive amounts of lubricant as it will leave stains on the cloth.
- Slight damage to the cloth can be mended with repair tape that can be purchased from your local outdoor gear retailer. Refer to the product instructions for the correct use of such repair tape.
- Depending on the conditions during use, the tent material may deteriorate over a wide area, losing its durability and becoming irreparable.
- Sap cannot be easily removed. Do not set up this product under trees that frequently drop sap. The fabric or coating may be permanently damaged if the sap is forcibly removed with a solvent, etc.
- To maximize the longevity of this product, regularly check and maintain the product as described above.

Warranty

if there is any problem with the product, please contact the dealer from whom you purchased it or our user service. The specifications of Snow Peak products are based on field testing and quality control to ensure the correct function and longevity of every product. If apparent defects in the manufacturing of the product are found, the defective product will be repaired or exchanged free of charge. Damages, as follows, are not covered under warranty.

 
1. Material deterioration caused by age.
2. Damage caused by modifications or rough handling.
3. Damage caused by improper use not following the instruction manual.
4. Damage caused by unexpected accidents.
5. Damage not caused by defects in the manufacturing process.
6. Damage caused by dust or rust.
7. Damage or defects caused when dismantling the product.
8. Damage and defects caused by dropping or other shocks to the product.
9. Deterioration or failure of parts due to friction.
10. Damage caused by the use of the product in combination with other maker's products.

Repair

- Please contact the retailer where you purchased the product or Snow Peak Customer Service for repairs.
 - For repairs, please contact the retailer where you purchased the product or Snow Peak Customer Service.
 - When you ask for a repair, please make sure that the product is dry and clean.
 - Please attach a memo or some kind of tag indicating the needed repair, and also, please write details of when and how the damage occurred.
 - Shipping cost and fee for the repair will be determined as follows.
1. Within warranty: Snow Peak will cover the return shipping cost and repair fee.
 2. Outside warranty: The user will cover the return shipping cost and repair fee.

Specifications

- Set includes: Fly sheet, Floor sheet, Pole (x1), Duralumin peg (17 cm (6.7") x 6), Rope with rope tensioner (1.5 m (4'9") x 2), Carry bag, Pole case, Peg case
- Materials: Fly sheet / 68D Polyester taffeta / PU coating
Waterproof rating: 500mm minimum / water repellent / UV protection treatment, Floor sheet front fabric / Polyester / Cotton blend ripstop, Floor sheet back fabric / 210D Polyester ox / PU coating waterproof rating 1,500mm minimum, Floor sheet batting / Polyester, Pole/ A6061 (ϕ 9.5mm (0.4"))
- Carry Bag Size: 60x7x8(h)cm (23.6"x2.7"x3.1")
- Weight: 3.0kg (6.6 lb)
- Capacity: 2 people

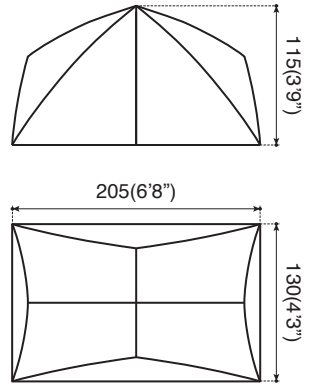

Snow Peak USA, Inc.

404 NW 23rd Avenue, Portland, Oregon 97210, USA
Tel. +1 (503) 461-0781 Instagram. @snowpeakusa
www.snowpeak.com Email. info@snowpeak.com

Snow Peak, Inc.

456, Nakanohara, Sanjo-Shi, Niigata 955-0147 Japan
Tel. +81 256-46-5858 Fax. +81 256-46-5860
www.snowpeak.co.jp

MADE IN CHINA