

Product Manual : Ver 1.01

SDE-259 / SDE-260

Land Nest Dome Small / Medium

SET-259 / SET-260

Land Nest Small / Medium Tent & Tarp Set (Tent)




Land Nest Dome Small




Land Nest Dome Medium

Thank you for purchasing a Snow Peak product. This product is a tent for camping. For safety, read the following instruction manual before use. Please keep it safe for future reference. Finally, if you find anything that you do not understand in the description or any problems with the product, please stop use immediately and contact the retailer or Snow Peak Customer Service.

Set Contents

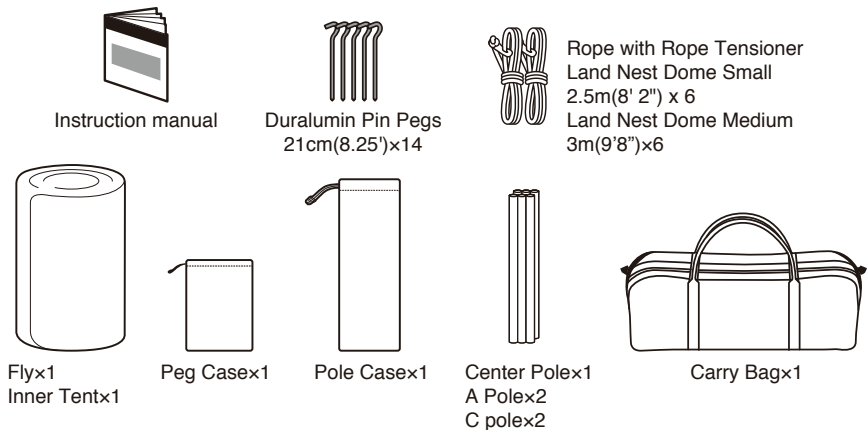

Name of the Parts

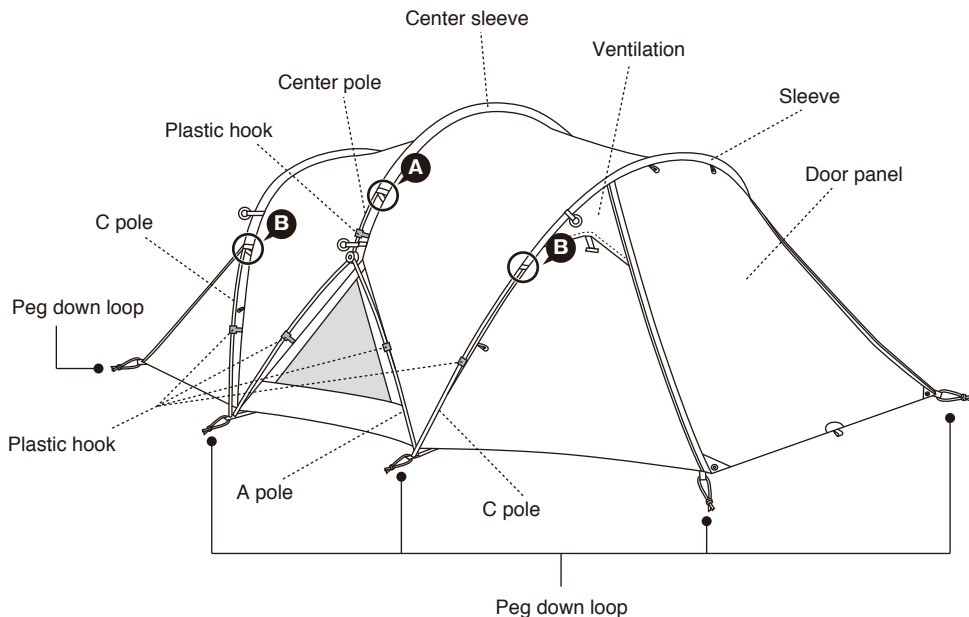

Safety Precautions Before use please read thoroughly to ensure safety and to avoid accidents.

⚠ DANGER Misuse could easily result in a serious accident or death.

- The tent material is not flame-proof. Do not use combustion-based heat sources such as lanterns, stoves or heaters, or open flames such as matches, candles, lighters or cigarettes, inside the tent. The use of such heat or light sources inside a small, enclosed space is very dangerous and may result in fire, oxygen deficiency or carbon monoxide poisoning.
- Do not keep fuel, or flammable items for replenishing the fuel, inside the tent.



⚠ WARNING Misuse could result in serious injury or death.

- Pay close attention to the weather. If extreme weather is in the forecast, pack up camp and evacuate to a safe place.
- Do not bring heated items into the tent when they are at high temperatures. Inside the tent, very high temperatures may cause heatstroke. Pay close attention to the temperature, particularly when children are asleep inside the tent.
- Choose a flat, well-drained area with firm ground to pitch the tent. Choose an area where there is no chance of avalanches, landslides, wind gusts or sudden flooding.
- Before using the product, check each part for abnormalities. If there are abnormalities, take the product to the dealer or Snow Peak Customer Service for inspection or repair.



⚠ CAUTION Misuse could result in injury to the user and/or damage to property.

- This product is not intended to be in permanent use.
- Sunlight can cause the surface of the Fly to heat up, potentially causing low-temperature burns.
- Do not assemble or use the tent close to a bonfire, fireworks, etc. Flying sparks can create holes in the tent fabric.
- Firmly hold the tent/tarp pole when assembling and disassembling the tent/tarp. Unexpected accidents may occur due to the Pole ends recoiling, etc., so ensure that the surroundings are safe, with no other people in the vicinity.
- Firmly secure the Pegs, Guy Lines, etc.
- If the tent is left in the sun for long periods, the materials may fade in color or the fabric may deteriorate and lose strength. Do not leave the tent set up permanently.


Maintenance & Storage

- A combination of Polyester fabric is used for this product. Taking the material characteristics into consideration, we adopted processing and color patterns that will result in less color migration. However, depending on storage conditions, slight color migration may occur. Do not store the product while it is wet.
- Before storing, the product should be cleaned and dried sufficiently. If the product is stored when wet, the build-up of mold, bad odors, color migration and material deterioration will occur. Dry the product sufficiently in a breezy and shaded area and clean the surface with a soft brush before storing.
- *Do not flip the tent over with poles still in the sleeves, as the poles may break, and cloth damage may occur.
- Clean and dry the surface of the poles before storing. If stored when wet, corrosion may occur, resulting in strength deterioration. Keep the joints clean and apply a small amount of silicone lubricant, applying an excessive amount of lubricant will stain the cloth. Ensure that the cords inside the poles are not pulled unnecessarily.
- Store the product in a well-ventilated area, away from heat and moisture.
- Using the zipper when it is covered with mud, sand or dust may cause wear or damage. Clean the zipper with a brush before use. Apply small amounts of silicone lubricant to the zipper regularly to ensure smooth movement. Do not apply excessive amounts of lubricant as it will leave stains on the cloth.
- Minor damage to the cloth can be mended with repair tape that can be purchased from your local outdoor gear retailer. Refer to the product instructions for the correct use of such repair tape.
- Depending on the conditions during use, the tent material may deteriorate over a wide area, losing its durability and becoming irreparable.
- To maximize the longevity of this product, regularly check and maintain the product (including all accessories such as the pegs).


Instructions for Use

Follow the instructions below to set up and disassemble. Practice set up before camping and check to ensure all the accessories are functioning. Excessive setup and tear down may damage the body or poles, potentially resulting in an accident. Please read this manual carefully before use.


- 1 Spread the fly on a flat area.
First, check the direction of the two door panels for the entrance and exit.
Make sure that both buckles of the building tape are connected. If they are disconnected, be sure to connect them before setting up the tent. The triangular window should be facing upwind.

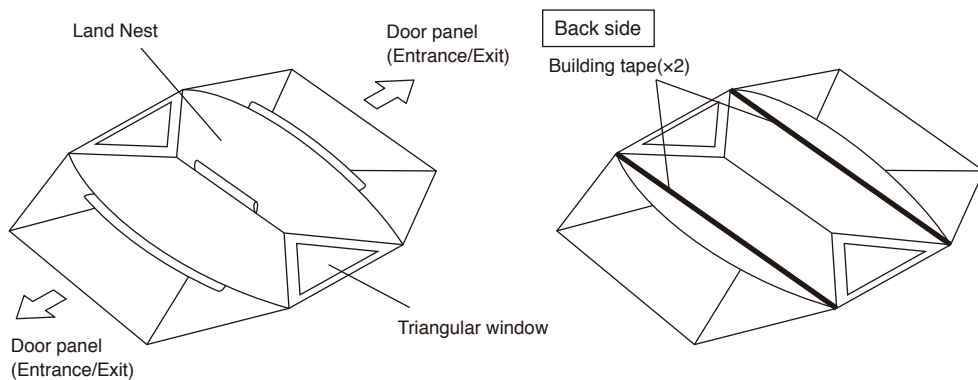


- 2 Extend center pole and A pole x 2 and connect them firmly.
*Make sure to connect them without leaving gaps at the joints.

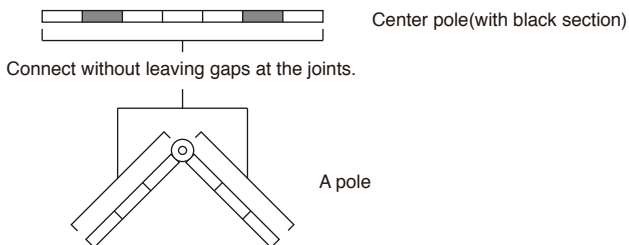


- 3 Check the **A** point (refer to "Name of the Parts") and insert the center pole into the center sleeve.

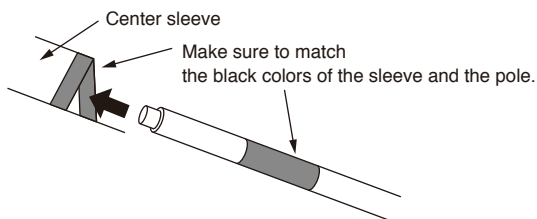

- ④ Connect the A pole to one side of the center pole.
Make sure the tip of the center pole is fully inserted into the A pole.

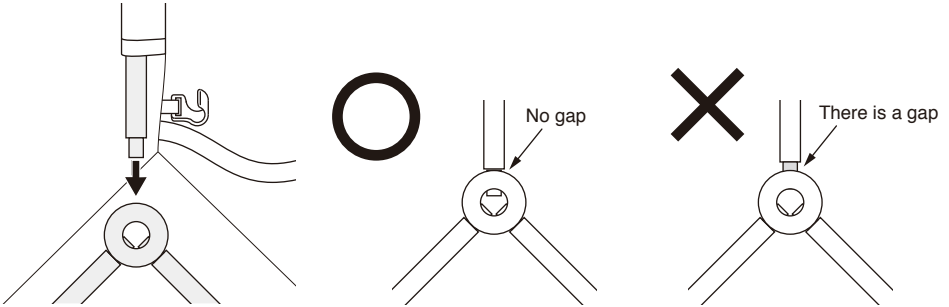


- ⑤ Insert the tip of the A pole into the grommet on the fly side (two locations).

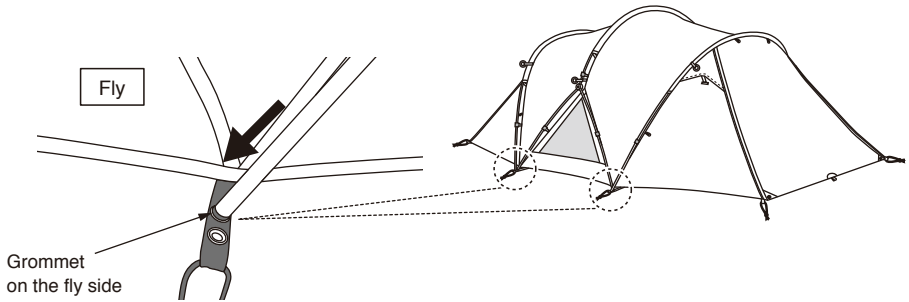


- ⑥ Insert the other side of A pole into the center frame as shown in step ④.

- ⑦ While bending the center pole as shown in the figure below, insert one end of the A pole into the grommet on the fly side.

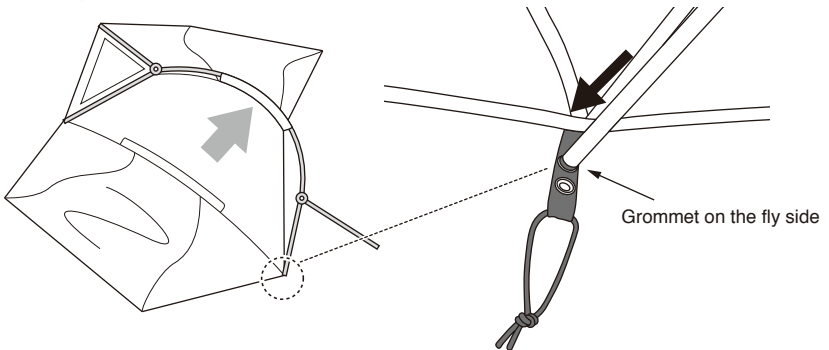


- 8 While slowly raising the entire pole, pull the grommet toward you.
Insert the other end of the A pole into the grommet on the fly side.

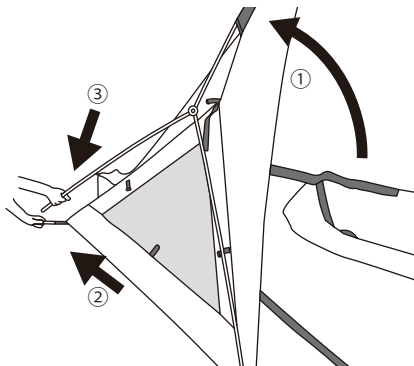


①~②: Pull the grommet towards you while raising the pole.
*At this time, Make sure that the black section fits inside the sleeve. Please do this while checking the overall balance.

③: Insert A pole into the grommet.
*Once the poles are standing on their own, check that they are firmly connected to each other.

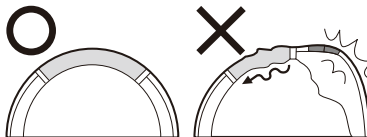


 - 9 Extend both C poles and connect the sections firmly.
*Make sure to connect them without leaving gaps at the joints.




Connect without leaving gaps at the joints.

 - 10 Check the [B] point (refer to "Name of the Parts") and insert the C pole into the sleeve.





- 11 After inserting the C pole into the sleeve, insert the tip of the C pole into the outer grommet.
Insert the other end of the C pole in the same manner.

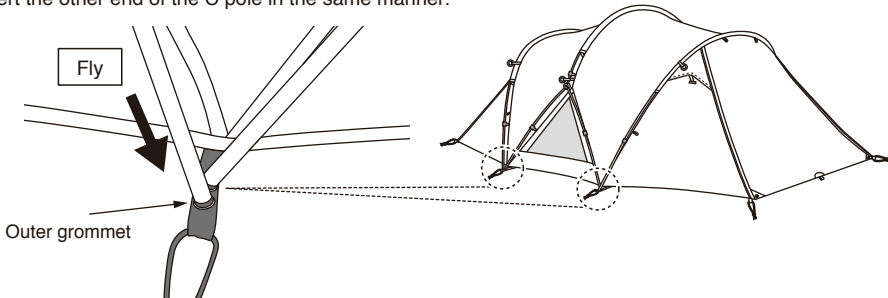

- 12 Insert the other C pole into the center frame, in the same manner as step 11.


- 13 Hook the plastic hooks on the fly onto the each of the poles.
Insert the duralumin pegs through the peg down loops on the hem and then insert the pegs.
*Please drive the pegs all the way into the ground.
*If the peg is driven in too hard, it may bend, break, or otherwise be damaged. If the peg hits an obstacle such as a stone, change the location of the peg before hammering it in.
*If you peg down the door without closing the zipper, you may not be able to close the door after the tent is set up.

- 14** Gently pull each corner loop in the order shown below and peg down without any slack.

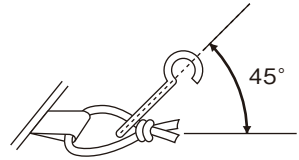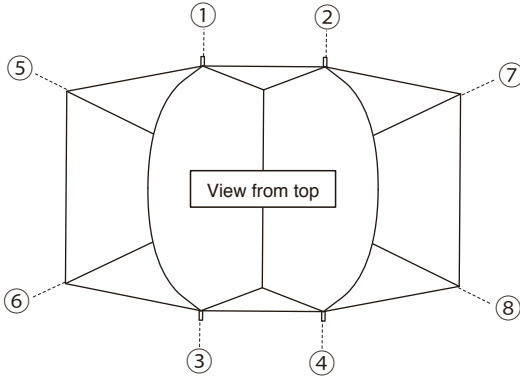


Drive the peg into the ground at 45° angle.

- 15** Stretch each rope and drive in the pegs.

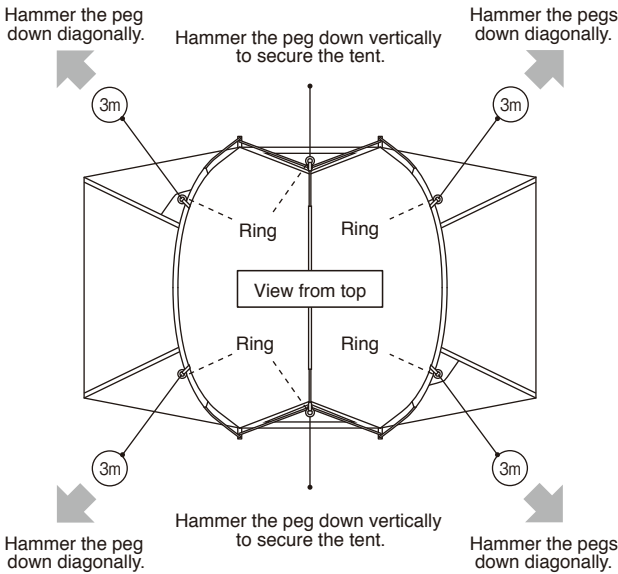


How to attach the rope with ring

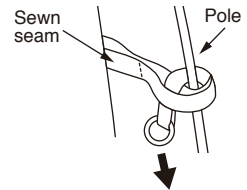


Wrap the tape around the pole, thread between the tapes next to the seam and pull.

How to attach the rope

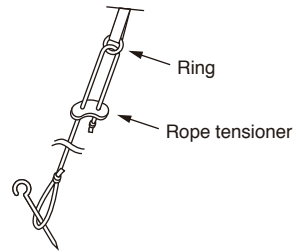


- 16** Pull the rope tensioner on the rope to apply tension. Be careful not to pull the rope too much. If you pull too hard, the fly may be damaged.
- 17** Connect the A pole to one side of the center pole. Make sure the tip of the center pole is fully inserted into the A pole.

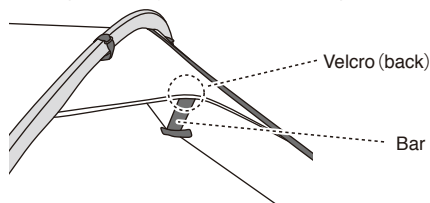


How to install the inner tent

- 1 Check the front and back of the inner tent and spread it out inside the room. The side with logo at the bottom should face inside the room.
*There is no front/back setting on the Fly itself.

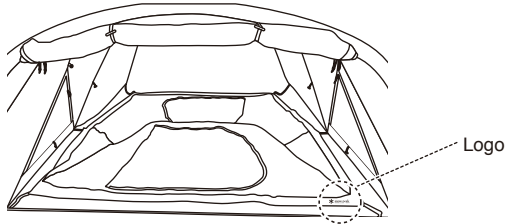


- 2 Hook the plastic hooks of the inner tent onto the plastic rings inside the fly.


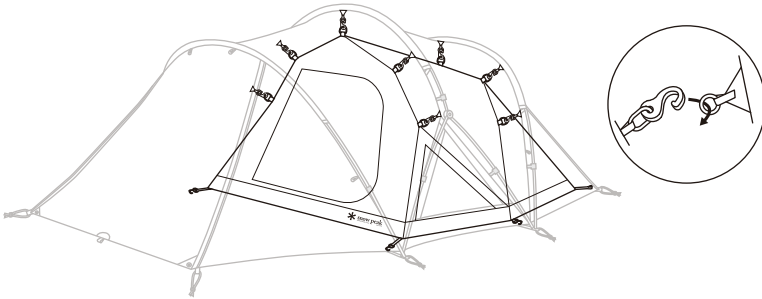


- 3 Attach each corner of the bottom according to the diagram below.

Peg down tape

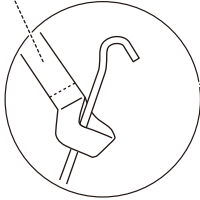


Hook the peg-down tapes at the two rear locations to the pegs that hold the fly.

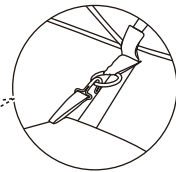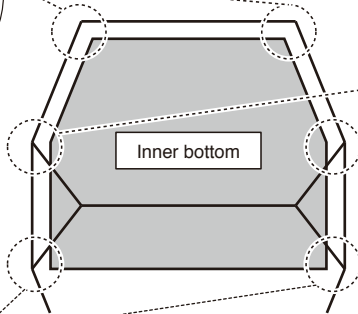

Hook the tapes with hooks on both sides of the bottom to the rings on the inside of the fly hem.

Tape with hook

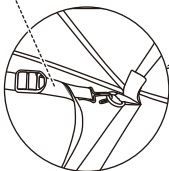

Hook the tape with hooks (with adjusters) attached to the bottom corners onto the rings on the inside of the fly hem.

Precautions for Disassembly and Storage

- Please make sure that the product is sufficiently dry before storing it.
- If the wind is strong, wait for it to subside before disassembling the shelter.
- If you have attached an inner room, be sure to remove the inner room or any other products from the shelter before disassembling it.
- Please ensure nothing is inside the shelter and that all panels and windows are closed.
- Please ensure that all belts are connected before taking down the shelter. Connecting the belts makes it easier to peg down the shelter next time.
- Please fold the main poles from the center each time. If you fold the main poles from the edges, the shock cord inside the pole may stretch or break, causing the frame to bend or break.
- Remove all pegs, clean them, and store them in the peg case with their heads facing down. Store all frames in the frame case. The frame should be stored with its head facing down in the frame case. If the frame is exposed, it may damage the fabric or the carry bag.

Regarding Condensation

Mist is a collection of water droplets suspended in the air that turns into condensation in rapidly falling temperatures. In smaller spaces such as the inside of a tent or shelter, water vapor concentration is higher than in an ordinary room and frequently results in more condensation. Depending on the surrounding conditions, it may be impossible to avoid condensation completely, even with waterproof materials. To reduce condensation, allow steady ventilation while the tent is in use.

Water-Repellent and Waterproof Functions

- A combination of polyester fabric is used in this product. Both materials are treated with a high-quality, water-repellent finish. However, the level of water-repellent capacity and durability may vary slightly due to the characteristics of each material.
- The water-repellent finish will lose effectiveness after repeated use. When the water repellence decreases, please use a water-repellent spray purchased from your local outdoor gear retailer. When using such sprays, please follow the product's instructions.
- Materials with high waterproof capacity are used in this product. However, if the materials are in contact with pools of water on the ground for long periods, the water may be absorbed into the material, potentially resulting in discoloration.

Regarding the Effect of Ultraviolet Rays

- A UV protection treatment has been applied to the fly material. The UV protection treatment will lessen the permeation of ultraviolet rays, which are harmful to humans, and slow the deterioration of the fly.
*The UV protection treatment does not completely shield humans from ultraviolet rays or stop the deterioration of the material's strength.
- When the tent material is exposed to sunlight for long periods, color degradation or strength deterioration may occur. Do not leave the product assembled permanently.
- If the material deteriorates due to ultraviolet rays and is badly damaged, it may become irreparable.

FAQ

Q: What can be done if a pole is broken while the tent is in use?

A: For an emergency treatment, use a repair pipe or splint, and secure with vinyl tape. Or fully disassemble the tent for repair.

Q: What can be done if the tent/tarp cloth is damaged or rips while the tent is in use?

A: Seal the area with packing tape on both sides or use a tent repair kit that can be purchased from your local outdoor gear retailer. When using a repair kit, read the instructions carefully.

Q: What can be done when the water-repellent finish degrades?

A: The water-repellent finish will lose its effectiveness with repeated use. When the material's water repellence decreases, please use a water-repellent spray that can be purchased from your local outdoor gear retailer. When using such sprays, please follow the product's instructions.

Q: What can be done if mold develops on the tent material?

A: Wipe the affected area with a dry cloth and sterilize with alcohol. When the material has a color change due to mold, this color change cannot be removed. Removing mold with excessive force may result in further deterioration of the material and the coating finish.

Warranty

Snow Peak has taken all possible measures to ensure every product is durable and functions correctly. If you find any product defects, please contact the retailer where you purchased the product or Snow Peak Customer Service. If there are apparent defects in the product's manufacturing, the defective product will be repaired or exchanged free of charge. In other cases, Snow Peak will repair the product for an appropriate fee. The decision to repair or replace the product will be at our discretion. Snow Peak will not repair the product for any damage that occurred due to the following: 1. Material deterioration caused by age. / 2. Damage caused by modifications or rough handling. / 3. Damage caused by inappropriate use not mentioned in the instruction manual. / 4. Damage caused by unexpected accidents. / 5. Any damage other than defects in the manufacturing process. / 6. Damage caused by dust or rust. / 7. Damage and defects caused by dismantling the product. / 8. Damage and defects caused by dropping, jolting or other shocks. / 9. Deterioration or failure of parts due to friction. / 10. Damage caused by the use of the product in combination with another manufacturer's products.

Repair

- If professional repairs are required, please contact the retailer where you purchased the product or Snow Peak Customer Service.
- When you request repairs, please make sure that the product is dry and clean.
- Please attach a memo or a tag indicating the necessary repair and please write details of how and when the damage occurred.
- Transportation and repair costs are determined as follows.
 1. Within warranty: The transportation cost (both ways) and repair cost will be covered by Snow Peak.
 2. Outside warranty: The transportation cost (both ways) and repair cost will be covered by the customer.

Spec


Small size

Material: Fly/75D Polyester Taffeta, PU coating, Waterproof rating: 1,800mm minimum, water-repellent finish, UV protection treatment, Inner Wall/68D Polyester Taffeta, Bottom/210D Polyester Oxford, PU coating, Waterproof rating: 1,800mm minimum; Pole /A6061 (Φ13mm (0.51"))

Carry Bag Size 65×20×25(h)cm (25.6"×7.9"×9.8")

Weight: 7.2kg (15.8 lbs.)

● Capacity: 2 persons

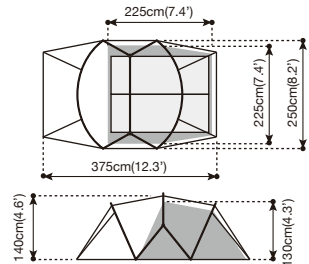


Medium size

Material: Fly/75D Polyester Taffeta, PU coating, Waterproof rating: 1,800mm minimum, water-repellent finish, UV protection treatment, Inner Wall/68D Polyester Taffeta, Bottom/210D Polyester Oxford, PU coating, Waterproof rating: 1,800mm minimum; Pole /A6061 (Φ13mm (0.51"))

Carry Bag Size 70×21×25(h)cm (27.6"×8.3"×9.8")

Weight: 8.7kg (19.2 lbs.)

Capacity: 3-4 persons

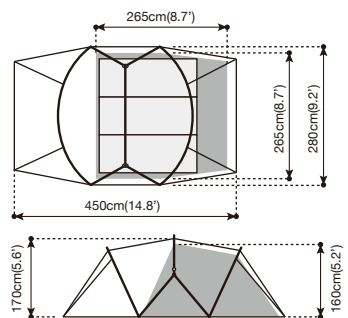

Snow Peak USA, Inc.

404 NW 23rd Avenue, Portland, Oregon 97210, USA
Tel. +1 (503) 461-0781 / Instagram. @snowpeakusa
Email. info@snowpeak.com / www.snowpeak.com

Snow Peak, Inc.

456, Nakanohara, Sanjo-Shi, Niigata 955-0147 Japan
Tel. +81 256-46-5858 / Fax. +81 256-46-5860
www.snowpeak.co.jp