 


Thank you very much for purchasing a Snow Peak product. This product is a tent for camping. To use this product safely and correctly, please read these instructions carefully. After reading these instructions, keep this manual in a safe place for future reference. If you find anything in the instruction manual that is difficult to understand, or if you find a defect with the product, stop using it immediately and contact the dealers where you purchased the product or Snow Peak Customer Service.

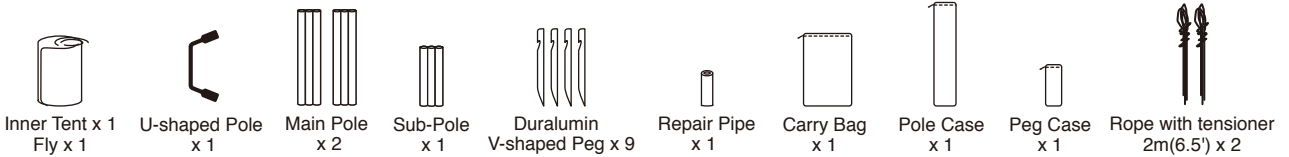

**Before use: please read thoroughly to ensure safety and to avoid accidents.**

**⚠ DANGER Misuse could easily result in a serious accident or death.**

- Do not use combustion-based heat sources such as lanterns, stoves or heaters, or open flames such as matches, candles, lighters or cigarettes, inside the tent. The use of such heat or light sources inside a small enclosed space is very dangerous and may result in fire, oxygen deficiency, or carbon monoxide poisoning.
- Do not keep fuel, or flammable items for replenishing the fuel, inside the tent.



**⚠ WARNING Misuse could result in serious injury to the user.**

- Pay close attention to the weather. If extreme weather is in the forecast, pack up camp and evacuate to a safe place.
- Do not bring heated items into the tent when they are at high temperatures. Inside the tent, very high temperatures may cause heatstroke. Pay close attention to the temperature, particularly when children are asleep inside the tent.
- Choose a flat, well-drained area with firm ground to pitch the tent. Choose an area where there is no chance of avalanches, landslides, wind gusts or sudden flooding.



**⚠ CAUTION Misuse could result in injury to the user and/or damage to property.**

 
- Sunlight can cause the surface of the Fly to heat up, potentially causing low-temperature burns.
- Do not assemble or use the tent close to a bonfire, fireworks, etc. Flying sparks can create holes in the tent fabric.
- Firmly hold the tent pole when assembling and disassembling the tent. Unexpected accidents may occur due to the Pole ends recoiling, etc, so ensure that the surroundings are safe, with no other people in the vicinity.
- Firmly secure the Pegs, Guy Lines, etc.
- If the tent is left in the sun for long periods, the materials may fade in color or the fabric may deteriorate and lose strength. Do not leave the tent set up permanently.

**Setup Procedure**


- ① Spread the Inner Tent on a flat area.
- ② Assemble the Main Poles and Sub-Poles. Make sure to insert each pole firmly and avoid leaving a gap at the connection points.
- ③ Insert the Sub-Poles into the sleeves and insert both ends into the grommets.
- ④ Insert the Main Poles into the room from the doorway and set it down. Align both ends against the corner reinforcement.
- ⑤⑥ Peg down from ⑤ to ⑥. The pole will rise when tension is applied by pulling ⑤ and ⑥ together.
- ⑦⑧⑨⑩ Peg down in the following order ⑦, ⑧, ⑨, ⑩ to complete the setup of the inner tent.

- ⑪ Wrap the Velcro on the Fly around the top of the Sub-Pole sleeve and secure it.
- ⑫ Attach the Velcro on the Fly to the upper part of the Main Pole.
- ⑬⑭ Connect the plastic joint.
- ⑮⑯⑰ Hook the loops at the 3 corners onto the pegs that secure the Inner Tent.
- ⑱ Peg down the corner of the front room.
- ⑲⑳ Peg down the 2 sections of Rope with Tensioner to complete the setup.
- ㉑ You can substitute your Trekking Pole for the Main Pole. Please use it when you want to reduce the weight of your pack. \*The Trekking Poles that can be used are limited to those with a small basket and an adjustable length of 110 cm (3.2').


**Poles**

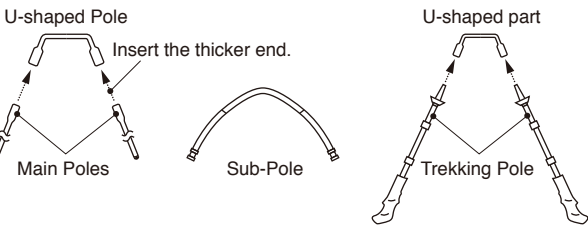

**Inner Tent**

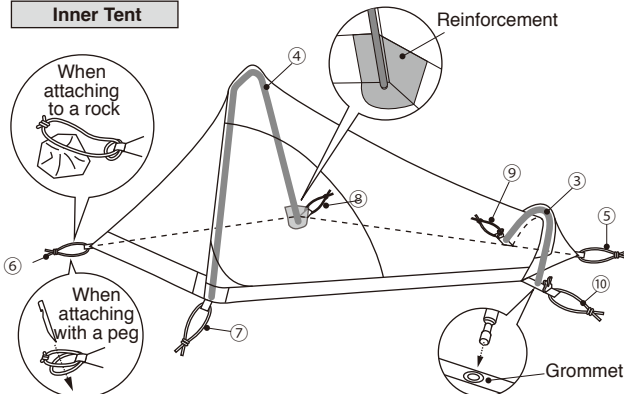 

**Fly**

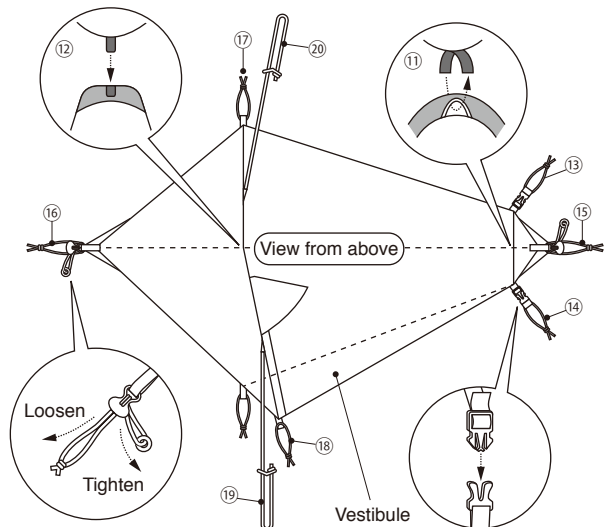 

## WARNING

### KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC

This tent is made with flame resistant fabric which meets CPAI-84 specifications. It is not fire proof. The fabric will burn if left in continuous contact with any flame source.

The application of any foreign substances to the tent fabric may render the flame resistant properties ineffective.

### Specification

- Material: Fly / 75D Fire-resistant Polyester Taffeta, PU coating Waterproof rating 1,800mm minimum, Water repellent finish, UV protection treatment; Inner wall / 68D Fire-resistant Polyester Taffeta; Bottom / 75D Fire-resistant Polyester Oxford, PU coating Waterproof rating 1,800 mm minimum; Pole/Duralumin A7001(9.5mm(0.37"))
- Set contents: Tent; U-shaped Pole(x1); Main Pole(x2); Sub- Pole(x1); Duralumin Peg(x9); Rope with tensioner(2m(6.5')x2); Repair Pipe; Carry Bag; Pole Case; Peg Case
- Carry Bag size: 13x13x37(h)cm (5.1"x5.1"x14.5")
- Weight: 1.4 kg (3 lbs)

If you have any questions or concerns,  
please contact your retailer or Snow  
Peak customer service.

**Snow Peak Customer Service**

 **+1 503-697-3330**

Email: [info@snowpeak.com](mailto:info@snowpeak.com)

**Snow Peak USA, Inc.**

404 NW 23rd Avenue, Portland, Oregon 97210, USA

Tel. +1 (503) 461-0781 / Instagram. @snowpeakusa

Email. [info@snowpeak.com](mailto:info@snowpeak.com) / [www.snowpeak.com](http://www.snowpeak.com)

MADE IN VIETNAM