

Product Manual : Ver 1.00

TP-781/ TP-782

Living Lodge M / Living Lodge L



Living Lodge M




Living Lodge L

* All illustrations in this manual are for TP-781/Living Lodge M, but the basic setup and disassembly instructions are the same.


Thank you very much for purchasing a Snow Peak product. This product is a shelter designed for camping. To use this product safely and correctly, please carefully read these instructions. After reading these instructions, keep this manual in a safe place for future reference. If you find anything in the instruction manual that is difficult to understand or find a defect with the product, stop using it immediately and contact the dealers where the product was purchased or Snow Peak Customer Service.

Set Contents

The included contents are designed for set up in normal conditions. A basic setup requires eight separate pegs. Please refer to the recommended size above. The pegs and the flexible ropes are replaceable items that will wear out over time, so it's best to carry a spare.

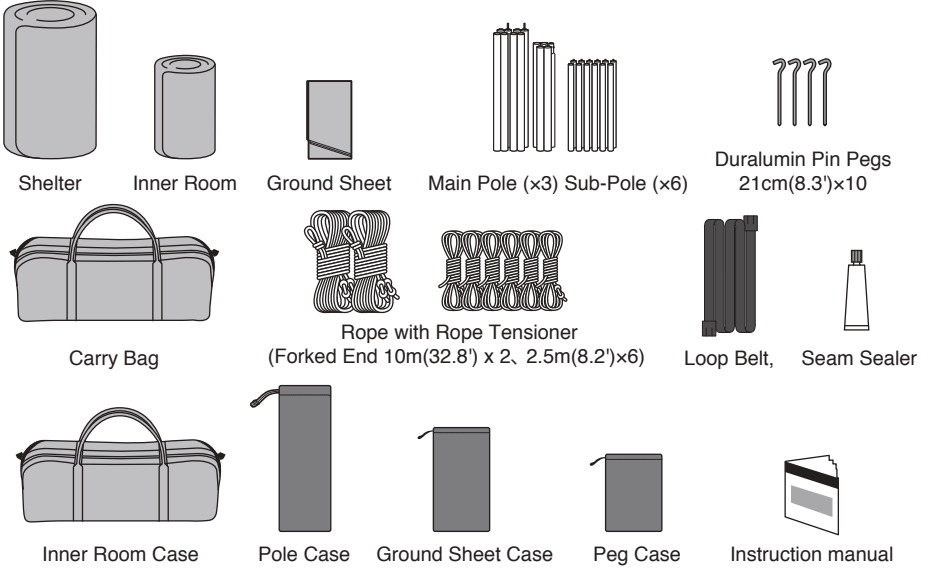

Pole configuration

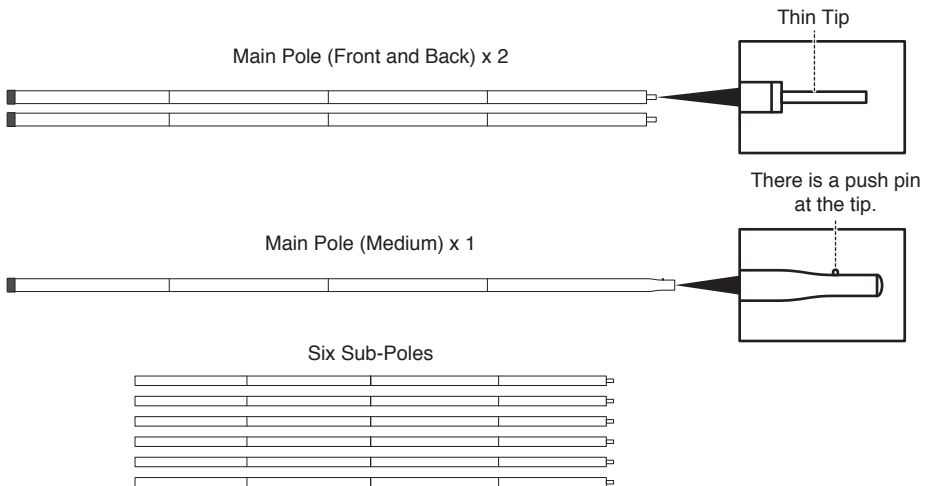

Safety Precautions Before use please read thoroughly to ensure safety and to avoid accidents.

⚠ DANGER Misuse could easily result in a serious accident or death.

- The material of this shelter is not flame-proof. Do not use combustion-based heat sources such as lanterns, stoves, or heaters, or open flames such as matches, candles, lighters, or cigarettes, inside the shelter. The use of such heat or light sources inside a small enclosed space is hazardous and may result in fire, oxygen deficiency, or carbon monoxide poisoning.
- Do not keep fuel, or flammable items for replenishing the fuel, inside the shelter.



⚠ WARNING Improper use may result in death or serious injury.

- Before using the product, check each part for abnormalities. If there are abnormalities, take the product to the dealer or Snow Peak Customer Service for inspection or repair.
- Pay close attention to the weather. If extreme weather is in the forecast, pack up camp and evacuate to a safe place.
- Do not bring heated items into the tent when they are at high temperatures. Inside the tent, very high temperatures may cause heatstroke or fire.
- The temperature inside the shelter will be high during warm weather, and there is a risk of heatstroke. Pay close attention to the temperature, particularly when children are asleep inside the shelter.
- Choose a flat, well-drained area with firm ground to pitch the tent. Choose a place with no chance of avalanches, landslides, wind gusts, or sudden flooding.

⚠ CAUTION Misuse could result in injury to the user and/or property damage.

- This product is not intended to be in permanent use. If the shelter is left in the sun for long periods, the materials may fade in color, or the fabric may deteriorate and lose strength. Do not leave the shelter set up permanently.
- Sunlight can cause the surface of the shelter to heat up, potentially causing low-temperature burns.
- Do not assemble or use the shelter close to a bonfire, fireworks, etc. Flying sparks can create holes in the fabric.
- Firmly hold the shelter when assembling and disassembling. Unexpected accidents may occur due to the pole ends recoiling, etc., so ensure that the surroundings are safe, with no other people in the vicinity. Always assemble/disassemble this product with two or more people.
- Firmly secure the pegs, guy lines, etc.
- Because this product uses a thin fabric, it may break if you pull the fabric too much.
- Please pay attention to the building tape, rope, and pegs at your feet. You may catch your foot and fall, leading to an unexpected accident or injury.
- This product is not a self-supporting shelter. To withstand the wind and rain, it's important to tighten all the ropes following the instructions outlined in this manual.
- The inner room has a loop for hanging small items. Please only hang items that weigh less than 1kg (2.2lbs).

Name of Each Part

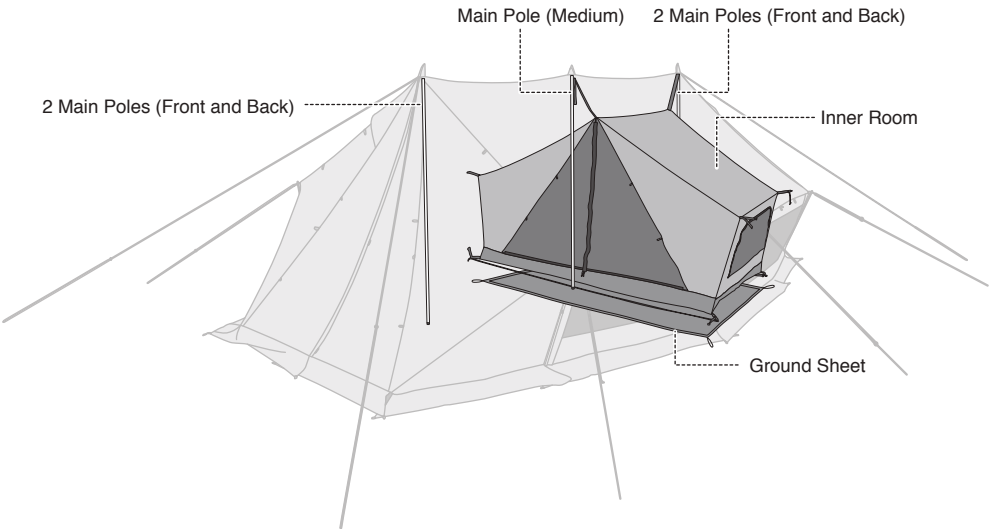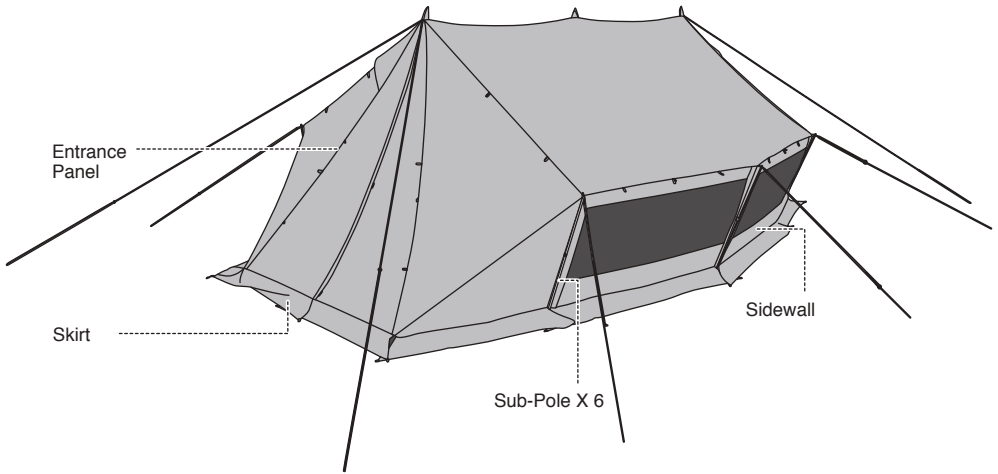


Before using for the first time


- Please check that all accessory items are included before attempting to assemble the product—practice assembling and handling the product in a safe location before using it while camping. In the unlikely event that there is a problem or a missing accessory, please contact the dealer where you purchased the product or Snow Peak Customer Service.
- This product does not include pegs and hammers for ropes.
 - A basic setup requires ten pegs sold separately.
Please use the following recommended sizes.
 - Recommended Peg Size
 - Six pegs with a length of 25 cm or more (used for ropes at each corner).
 - Four pegs with a length of 35 cm or more (used for the main corner fork rope).

Preparations Before Use


A waterproofing treatment with seam taping has been applied to the stitching of the shelter. However, the ventilator and fasteners on the shelter and a part of the bottom sheet of inner room cannot be treated with the seam tape due to their inherent design. Though capable during periods of normal rain, long spells of heavy or driving rain, or prolonged contact with water pools on the ground, may result in the penetration of water along the stitching. In such cases, the application of a seam sealer is recommended. Apply the seam sealer lightly on both sides along the stitching and dry completely. The seam sealer will cure with time. As the seam sealer wears off, re-apply as necessary. We do not provide a sealing service. However, to maintain the tent in its best condition, application of seam sealer by the user is highly recommended.

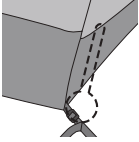


Please apply the seam sealer to the corners of the bottom of the Inner Room. (4 locations)

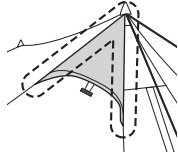

 Please apply the seam sealer to the outside and inside surface of the ventilator. (2 locations)

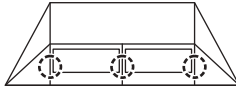


 Apply the seam sealer to the Velcro Tapes on the inside of Shelter wall. (6 locations)

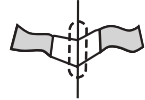


Apply the seam sealer to the front and back of the Velcro Tapes on outside of the Shelter wall. (6 locations)

Location of Rope with Rope Tensioner and Pegs

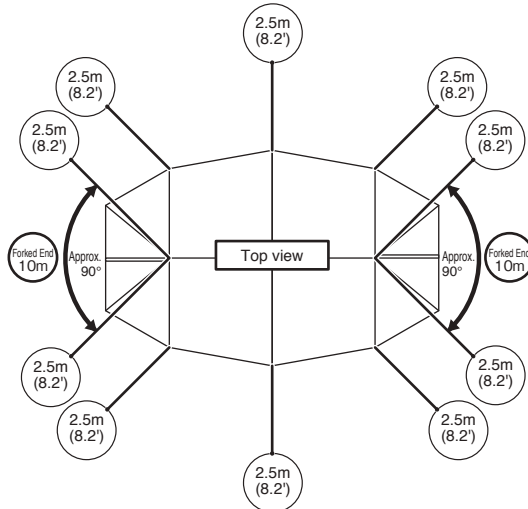


How to Peg Down

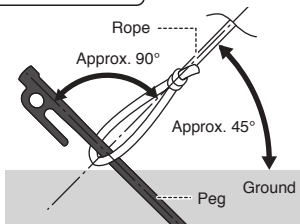


[Peg Down with Rope Attached]
Drive the peg into the ground as far from the shelter as possible. The ideal peg position is when the rope is angled 45° to the ground. Insert the pegs at a 90° angle to the rope.

How to Attach the Rope

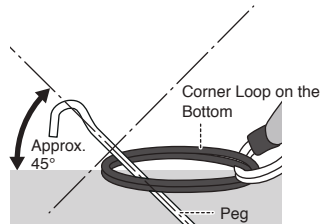

[Peg Down to Rubber Loop]
Drive down so that the peg is angled about 45° to the ground.

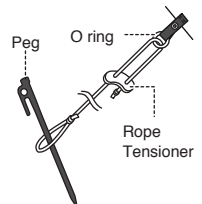


Pass the end of the rope through the O ring at the tip of each corner.


Set-Up Procedure : Please make sure to disassemble with at least two people.

Follow the instructions below to set up and disassemble. Practice set up before camping and check to ensure all the accessories are functioning. Excessive setup and tear down may damage the body or poles, potentially resulting in an accident. Please read this manual carefully before use.

- 1 Please spread the Shelter on a flat area to set up. Spread the main entrance panel facing downwind. If the front door panel faces windward, not only will wind and rain blow into the main entrance, but sudden and strong gusts may damage the shelter when the door is open.


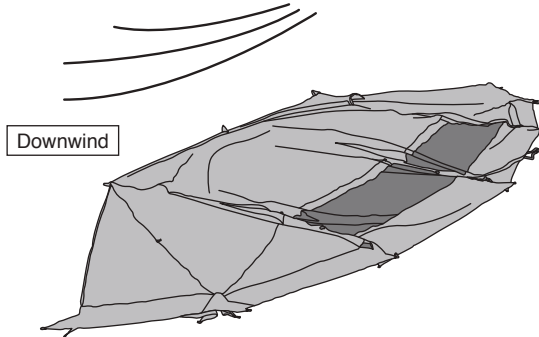


- 2 Assemble the main pole (front and back) and insert the tip of the main pole into the grommet at the top of the shelter's front and back from the inside.
 - * If there is a gap at the pole's connection point, the shelter or the pole may be damaged. Please insert it firmly so that there is no gap.
 - * Be careful of the surroundings when standing up the connected poles.

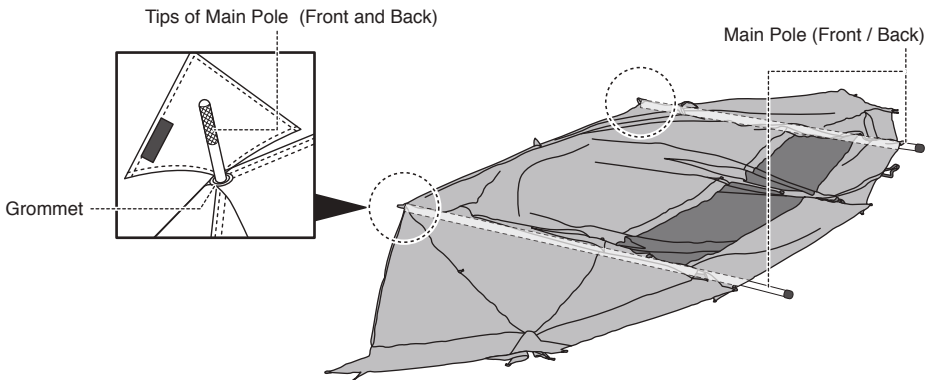

- ③ Hook the center loop of the 10m forked end rope to the tips of the main pole (front and back) inserted into the grommet. After that, extend the forked rope about 3.5m (11.5'), so the forked ends form a 90° angle, and then peg down the rope's end.


* Please use a peg with a length of at least 35 cm (13.8") to firmly secure.

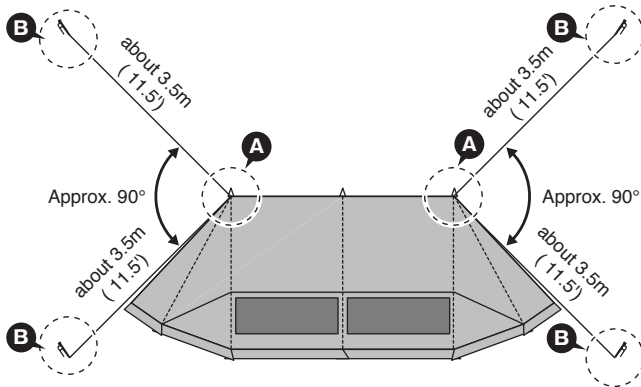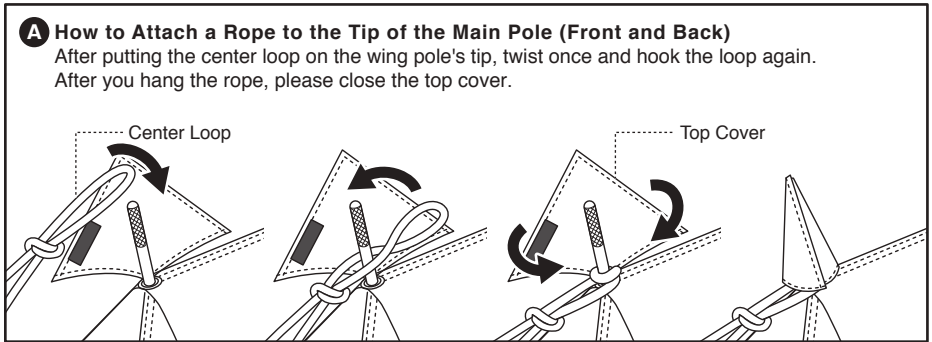


- ④ Adjust the stopper on the forked end rope, extend the rope's length, and raise the main poles (front and back) one-by-one. After that, adjust the stopper's position on the forked end rope, applying tension to make the shelter stand up.

* The person who stands up the main pole and the person who adjusts the fork rope's length should communicate during setup to ensure safety.


* Please be careful not to let the main pole sit on the fabric or the building tape.

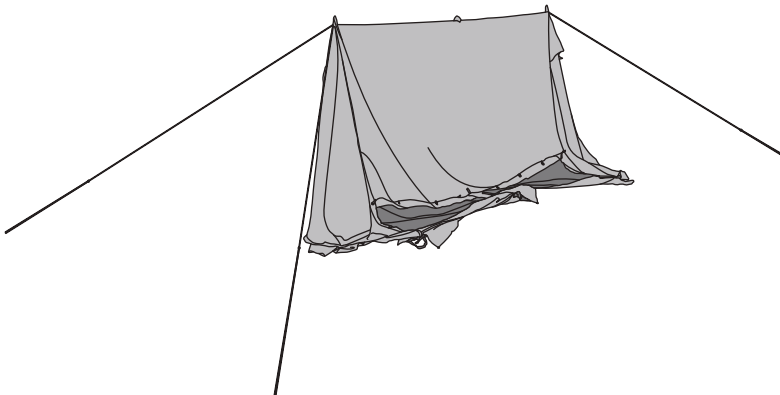

- 5 Enter the shelter and insert the main pole (middle) into the center grommet to raise the structure. Adjust the position of the bottom pole so that each main pole stands up straight.

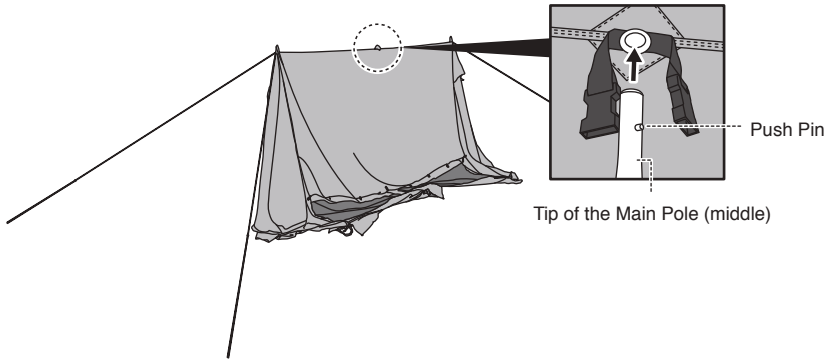



- 6 Insert the lower end of the sub-pole into the pin at each corner (6 spots total) of the bottom, then insert the tip into the grommet at the roof corner. Then, find the shelter's Velcro tape (located near the middle part of the sub-pole), wrap the Velcro tape around the sub-pole, and attach it to the body.

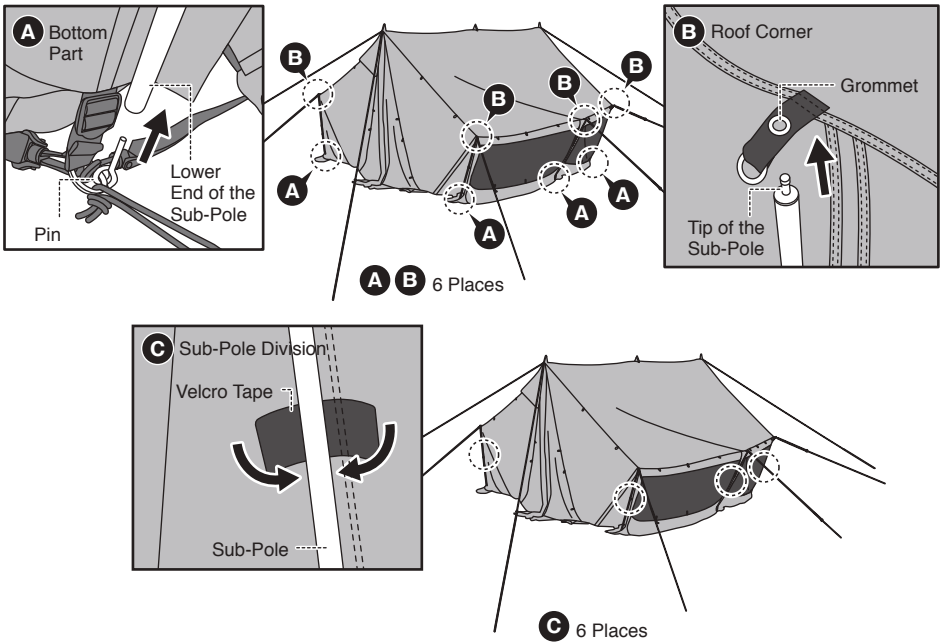

- 7 As shown in the figure "Location of Rope with Rope Tensioner and Pegs" on P4, attach the rope with a stopper at each corner to the shelter, then tighten and secure with the peg, then apply tension. * If the rope is pulled too much, the fabric will be burdened and potentially damaged. Please be careful not to pull too much.


* Please use a peg with a length of 25 cm (9.8') or more for the peg down.

- 8 Insert the duralumin pin pegs into the loop at each corner of the shelter's bottom and the rubber loop at the bottom of the front and rear panels, then hammer down (10 locations total). Peg down so the bottom of the sub-pole is inside by the length of a foot (about 27 cm), and the sidewall is inclined.
- * For the front and rear panels, please peg down the rubber loop attached to both the entrance panel and the triangular panel.

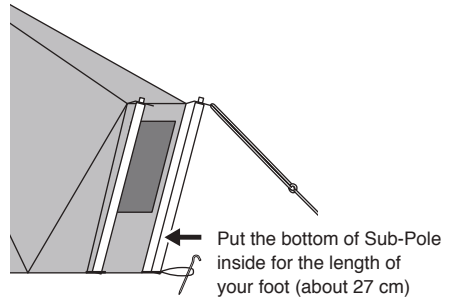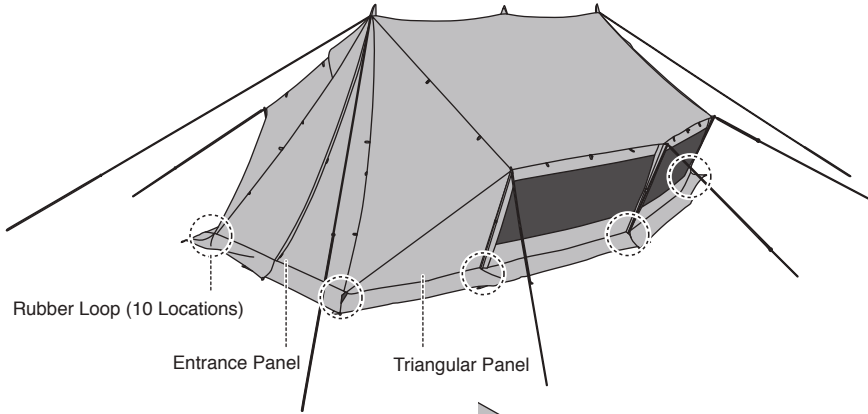

Front view of the Shelter Side Wall

- 9 Following the figure below, adjust the stopper's position on the rope and apply tension. Pull each rope equally, and tighten the ridgeline by pulling the forked end ropes (after applying the tension of ropes 7-8-9-10). Then, pull all the ropes again in the order of the numbers shown in the figure.

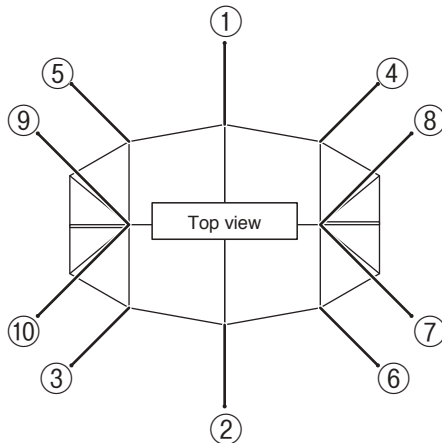


Responding to Bad Weather

When the rain or wind is severe, take the following measures. If you feel unsafe due to the weather, please pack up camp immediately and evacuate to a safe place.

* Please prepare additional ropes and pegs for inclement weather conditions.


A When there is a strong wind, pull the ropes on the front and back panel to ensure the panels are not loose. (4 locations)

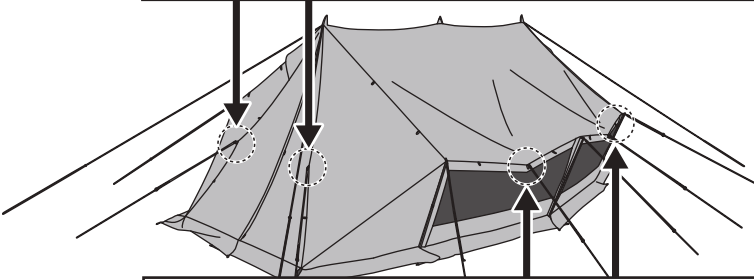


B When it rains heavily, rainwater tends to accumulate on the roof. Secure a rope on the top of each sidewall to create a V-shaped escape route for rainwater. (4 locations)

How to Install the Ground Sheet

1 Lay the ground sheet with PU coated surface (the surface with the coating, shiny) facing up inside the shelter. The ground sheet is a trapezoid shape. Ensure the long side faces the inside of the shelter.

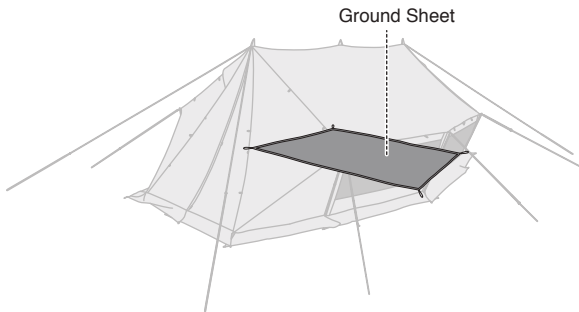



2 Stretch the rubber loop at each corner of the ground sheet and hook it to the corresponding peg.

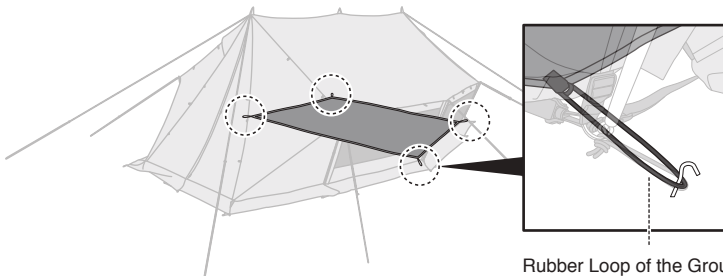

Rubber Loop of the Ground Sheet


How to Install the Inner Room

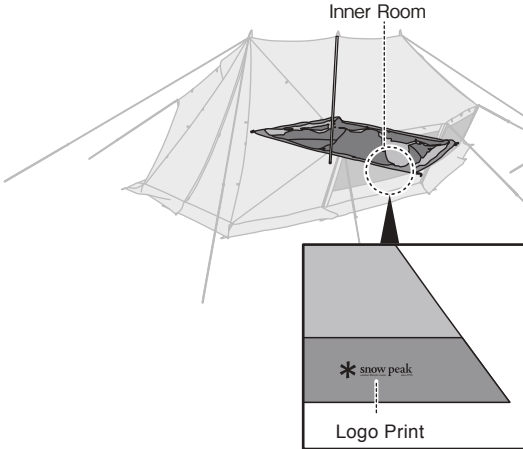- 1 Spread the inner room on the ground sheet with the bottom fabric positioned as shown in the figure. The bottom of the inner room is a trapezoid shape. Make sure the long side with the logo print faces the inside of the shelter.

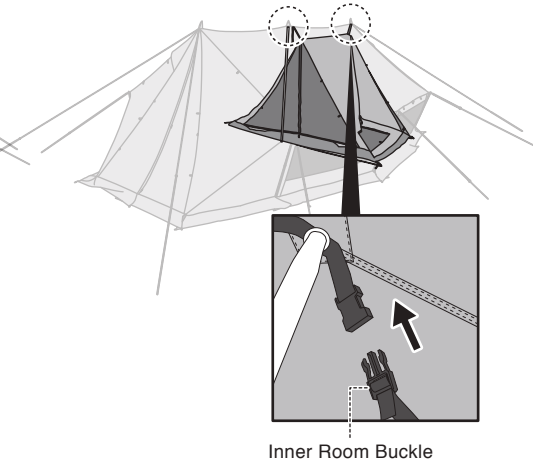- 2 Please connect the buckle on the ceiling of the inner room to the buckle on the shelter. (2 locations)
* Please be careful not to twist each belt.




- 3 Attach the hooks at the bottom corner and the roof corner of the inner room to the ring in the same position on the inside of the shelter, then adjust the belt's length. There is a red belt on the bottom of the inner room's long side and a black belt on the short side. Please ensure the color of the belt with the hook and the ring matches when installing.
* Be careful not to twist each belt.

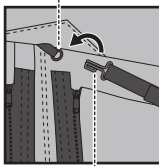
Ring at the Roof Corner of the Shelter



Hook at the Corner of the Inner Room Roof

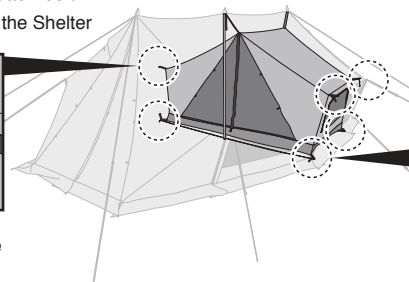

Inner Room Bottom Corner Hook

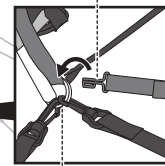

Corner Ring on the Bottom

- 4 Adjust the belt's length attached to the inner room buckle and hook to the shelter to set up the inner room. Please adjust the inner room ceiling so that it is slightly looser than the shelter's ceiling. If you set up the inner room with too much tension, the shelter's shape will be skewed.


Attaching the Loop Belt

A loop belt can be attached to the buckle on the shelter ceiling where the inner room is attached. It can be passed between the main pole (front and back) and the main pole (middle). Ensure the tension of the loop belt is slightly loose from the ceiling of the shelter. If you set up the loop belt with too much tension, the shelter's shape will be skewed.

* The inner room and loop belt cannot be used together in the same place.

* Please use the loop of the loop belt for things within 1 kg (2.2lbs).


* Connect the loop belt and avoid twists.

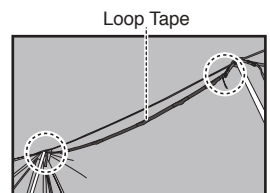


How to Disassemble : Please make sure to disassemble with at least two people.

Disassembling should be done in the reverse order of setup. Make sure there is nothing inside the inner room and the shelter before beginning. It will be easier to roll the fabric up if you slightly open the zipper at the inner tent entrance.


- ① Remove each hook and buckle of the inner room and take the inner room out of the shelter.

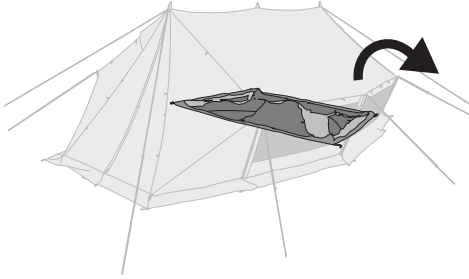


- ② Please pull out the peg that secures the rope of the bottom and corner of the shelter. If the ground sheet is used, remove it from the shelter at this time.

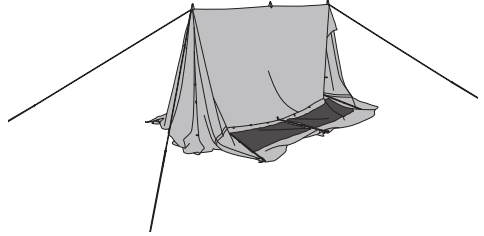

- ③ Remove the Velcro tape on the sub-pole, pull the tip out of the shelter's grommet, and remove the sub-pole from the shelter.

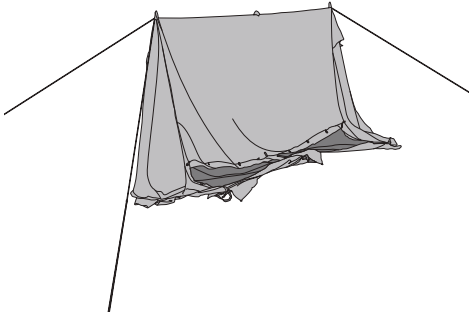


- ④ While pushing the pushpin on the tip of the main pole (middle) over the shelter's fabric, pull it out from the grommet on the ceiling of the shelter, and remove the main pole (middle).

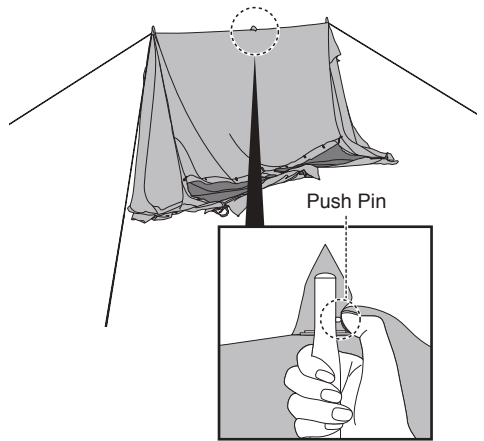


Push it over the fabric of the shelter.

- ⑤ Please ensure two people hold the main pole (front and back) and gently tilt the shelter in the same direction.

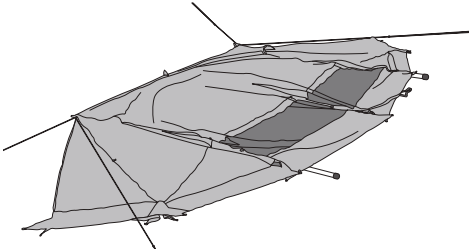


- ⑥ Pull out the pegs securing the forked end rope, and remove the forked end rope from the end of the main pole (front and back). Then, remove the main pole (front and back) from the shelter.

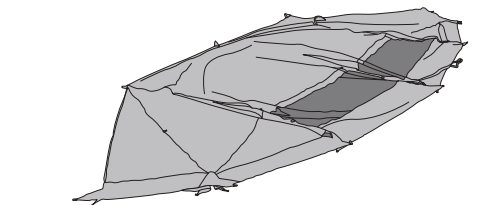


- ⑦ Place the shelter, the inner room, and the ground sheet on the ground as shown in the figure. Fold them to match the length of the carry bag and put them in the carry bag.

How to Fold the Inner Room

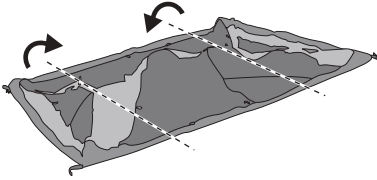


- ① Fold both ends inward toward the center.

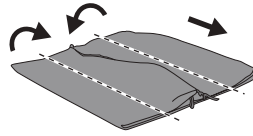


- ② Fold vertically in three and roll it in the direction of the arrow.

How to Fold the Ground Sheet

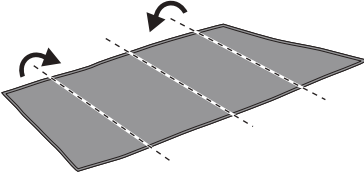


- ① Fold it vertically into 4.

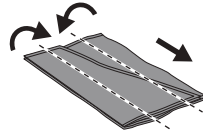


- ② Fold it vertically in three and roll it in the direction of the arrow.

How to Fold the Shelter


Two people should hold the shelter and the grommet that passed through the top of the main pole (front and back). Please lay the shelter on the ground and fold it vertically.

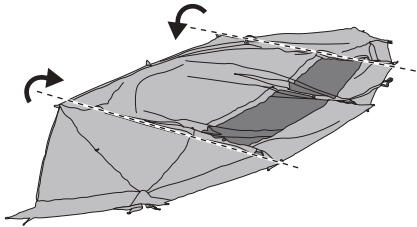

- ① Fold both ends toward the center with the seam as a mark.

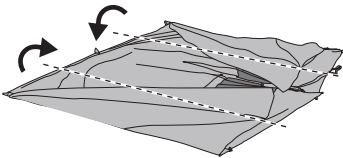

- ② Then, fold both ends inward toward the center.

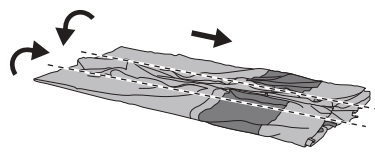


- ③ Fold it vertically in three and wrap it in the direction of the arrow.

- ⑧ Please store the poles and pegs in the included pole case and peg case. If the poles and pegs are stored in an exposed state, the shelter's fabric or the inner room may be damaged.

* Please be careful not to leave pegs or ropes behind.

* Pegs with a length of 35 cm (13.8") or more cannot be stored in the attached peg case. Please prepare a separate storage case.

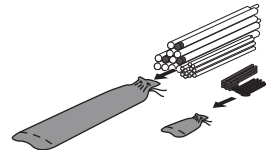

Precautions for Disassembly and Storage

- Please make sure that the product is sufficiently dry before storing it.
- If the wind is strong, wait for it to subside before disassembling the shelter.
- If you have attached an inner room, be sure to remove the inner room or any other products from the shelter before disassembling it.
- Please ensure nothing is inside the shelter and that all panels and windows are closed.
- Please ensure that all belts are connected before taking down the shelter. Connecting the belts makes it easier to peg down the shelter next time.
- Please fold the main poles from the center each time. If you fold the main poles from the edges, the shock cord inside the pole may stretch or break, causing the frame to bend or break.
- Remove all pegs, clean them, and store them in the peg case with their heads facing down. Store all frames in the frame case. The frame should be stored with its head facing down in the frame case. If the frame is exposed, it may damage the fabric or the carry bag.

Regarding Condensation

Mist is a collection of water droplets suspended in the air that turns into condensation in rapidly falling temperatures. In smaller spaces such as the inside of a tent or shelter, water vapor concentration is higher than in an ordinary room and frequently results in more condensation. Depending on the surrounding conditions, it may be impossible to avoid condensation completely, even with waterproof materials. To reduce condensation, allow steady ventilation while the tent is in use.

Water-Repellent and Waterproof Functions

- The fabric of the shelter is treated with a high-quality, water-repellent finish. However, the level of water-repellent capacity and durability may vary slightly due to the characteristics of each material. The water-repellent finish will lose effectiveness after repeated use. When the water repellence decreases, please use a water-repellent spray purchased from your local outdoor gear retailer. When using such sprays, please follow the product's instructions.
- Although this product is made of highly waterproof fabric, rainwater may soak into it if it is in contact with water pools on the ground for a long time.
- The PU coating may be damaged by agricultural chemicals, which cause the water pressure resistance to decrease abnormally. Please note that the product cannot be subject to warranty if damaged by agricultural chemicals.
- The logo may peel off due to the effect of the water repellent agent.

Regarding the Effect of Ultraviolet Rays

- A UV protection treatment has been applied to the material of the shelter.
* The UV protection treatment does not completely shield humans from ultraviolet rays or stop the deterioration of the material's strength.
- When the tent material is exposed to sunlight for long periods, color degradation or strength deterioration may occur. Do not leave the product assembled permanently.
- If the material deteriorates due to ultraviolet rays and is badly damaged, it may become irreparable.

Maintenance & Storage

- When using a product that has been in storage for a long time, carefully check each part. If you have any questions, please contact Snow Peak Customer Service.
- A polyester fabric blend is used for this product. Considering the material characteristics, we adopted processing and color patterns that will result in less color migration. However, depending on storage conditions, slight color migration may occur. Do not store the product while it is wet.
- Before storage, the product should be cleaned and dried sufficiently. If the product is stored when wet, the build-up of mold, bad odors, color migration, and material deterioration will occur. Dry the product sufficiently in a breezy and shaded area and clean the surface with a soft brush before storing.
- Clean and dry the surface of the poles before storing. If stored when wet, corrosion may occur, resulting in strength deterioration. Keep the joints clean and apply a small amount of silicone lubricant; applying an excessive amount of lubricant will stain the cloth. Ensure that the cords inside the poles are not pulled unnecessarily.
- When storing the poles, please fold them from the center outwards.
- Please store in a well-ventilated area away from direct sunlight, high temperatures, and humidity.
- Using the zipper when it is covered with mud, sand or dust may cause wear or damage. Clean the zipper with a brush before use. Apply small amounts of silicone lubricant to the zipper regularly to ensure smooth movement. Do not apply excessive amounts of lubricant as it will leave stains on the cloth.
- Small areas of fabric damage can be fixed with repair tape. Please read the repair tape manual carefully before applying.
- Depending on the conditions during use, the tent material may deteriorate over a wide area, losing its durability and becoming irreparable.
- Seam tape is pressure-capped at a temperature setting that prevents damage to the PU coating. However, it may peel off as it is used repeatedly. If peeling is found, set an iron at a low temperature and reattach only the peeling sections. Be aware that excessive heat will discolor or accelerate the deterioration of the fabric. If the PU coating peels off completely, it may be impossible to repair.
- Sap cannot be easily removed. Do not set up this product under trees that frequently drop sap. If the sap is forcibly removed with a solvent, etc., the fabric or coating may be damaged.
- To maximize the longevity of this product, regularly check and maintain the product (including all accessories such as the pegs).

Quality assurance

The specifications of Snow Peak products are determined based on field testing and quality control, ensuring every product's proper function and longevity. If apparent defects in the product's manufacturing are found, the defective product will be repaired or exchanged free of charge. Damages, as follows, are not covered under warranty.

1. Damage caused by normal aging of materials.
2. Damage caused by modifications or rough handling.
3. Failure due to improper handling described in this manual.
4. Damage caused by unforeseen accidents.
5. Damage not caused by defects in the manufacturing process.
6. Damage caused by dust or rust.
7. Damage or defects caused when dismantling the products.
8. Damage and defects caused by dropping or other shocks to the products.
9. Defects, breakage, or deterioration of replaceable parts.
10. Damage caused by the use of the product in combination with other maker's products.

Regarding Repair

- If a professional repair is necessary, please contact the dealer where the product was sold or Snow Peak Customer Service.
- Please dry and clean the product before sending it for repair.
- Please stick a memo onto the damaged area of the product. In the memo, include details explaining the circumstances that led to the damage.
- The cost of repair will be determined as follows:
 1. If the damage is subject to warranty, Snow will cover transportation cost (both ways) and repair cost Peak.
 2. If the damage is not subject to warranty, transportation cost (both ways) and repair cost will be covered by the customer.

Living Lodge M

Contents: Shelter, Inner Room, Ground Sheet, Main Pole (x 3), Sub-Pole (x 6), Duralumin Pin Pegs 21 cm(8.3") x 10, Rope with Rope Tensioner (Forked End 10m(32.8") x 2, 2.5m (8.2")x 6), Loop Belt, Seam Sealer, Carry Bag, Inner Room Case, Pole Case, Ground Sheet Case, Peg Case

Material: Shelter/ 300D Polyester Oxford / PU Coating Waterproof rating 2,000 mm Minimum, Teflon water-repellent finish, UV protection treatment, Inner Wall / 75D Polyester Oxford, Teflon water-repellent finish, Bottom: Ground Sheet / 210D Polyester Oxford / PU coating, Waterproof rating 1,800 mm Minimum, Main Pole / A6061 (Φ 30 mm/1.2'), Sub-Pole / A6061 (Φ 17.5 mm/0.7')

Carry Bag Size: Shelter/ 82x31x34(h)cm (32.2"x12.2"x13.3"), Inner Room/ 77x21x24(h)cm (30.3"x8.2"x9.4") Weight: 24kg (52.9lbs) Designed for 3-5 people.


Living Lodge L

Contents: Shelter, Inner Room, Ground Sheet, Main Pole (x 3), Sub-Pole (x 6), Duralumin Pin Pegs 21 cm(8.3") x 10, Rope with Rope Tensioner (Forked End 10m(32.8") x 2, 2.5m (8.2")x 6), Loop Belt, Seam Sealer, Carry Bag, Inner Room Case, Pole Case, Ground Sheet Case, Peg Case


Material: Shelter/ 300D Polyester Oxford / PU Coating Waterproof rating 2,000 mm Minimum, Teflon water-repellent finish, UV protection treatment, Inner Wall / 75D Polyester Oxford, Teflon water-repellent finish, Bottom: Ground Sheet / 210D Polyester Oxford / PU coating, Waterproof rating 1,800 mm Minimum, Main Pole / A6061 (Φ 30 mm/1.2'), Sub-Pole / A6061 (Φ 17.5 mm/0.7')

Carry Bag Size: Shelter/ 88x31x35(h)cm (34.6"x12.2"x13.7"), Inner Room/ 77x21x24(h)cm (30.3"x8.2"x9.4") Weight: 29.5kg (65lbs) Designed for 5-7 people.

●Capacity: 3-5 persons

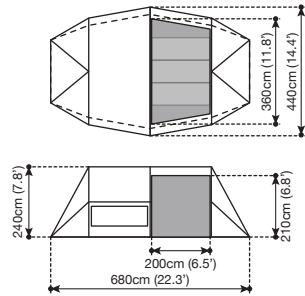

●Capacity: 5-7 persons

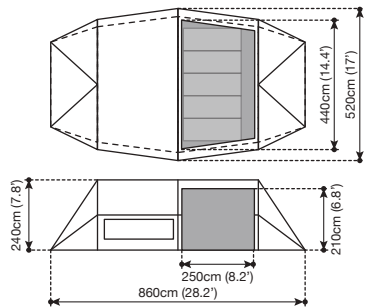

Snow Peak USA, Inc.

404 NW 23rd Ave., Portland, OR 97210, USA
Tel. +1-503-697-3330

www.snowpeak.com
Instagram @snowpeakusa

MADE IN CHINA